

# Handbook



PEUGEOT **508**



# Service Box

<http://public.servicebox.peugeot.com>

PEUGEOT's SERVICE BOX Internet site permits easy and free consultation of your vehicle documentation on line.

Simple and user friendly, SERVICE BOX allows you access:

- to your Handbook,
- to previous Vehicle documentation.

 **Your vehicle lives on the Internet!**  
Access the latest information available.

Connect to <http://public.servicebox.peugeot.com>:

- select your language,
  - click on the link in the "Private customer access" zone to consult the Vehicle documentation,
- A window opens giving access to all of the handbooks...
- select your vehicle,
    - choose its body type then the date of publication of the handbook,
  - finally, click on the item which is of interest to you.

 **Please note the following point:**

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

# WELCOME

Thank you for choosing a 508.

This handbook has been designed to enable you to make the most of your vehicle in all situations. Therefore, on the first few pages, you will find a detailed summary followed by a quick reference guide intended to make it easier for you to become familiar with your vehicle.

All of the details specific to your vehicle, comfort, safety, practical information, are then presented in this handbook, to increase your appreciation of the vehicle and to help you make the most of it.

Each model may only be fitted with some of the equipment shown in this handbook, depending on the trim level, model, version and specification for the country in which it is sold.

## Key

### **Warning:**

this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.

### **Protection of the environment:**

this symbol accompanies advice relating to protection of the environment.

### **Information:**

this symbol draws your attention to additional information for better use of your vehicle.

### **Page reference:**

this symbol invites you to refer to the pages which provide details of the function.

<p>Familiarisation</p> <hr/> <p>Instruments and controls</p> <p>Instrument panel 20</p> <p>Indicator and warning lamps 21</p> <p>Gauges and indicators 31</p> <p>Trip computer 36</p>	<p>Access</p> <hr/> <p>Remote control key 39</p> <p>Alarm 48</p> <p>Electric windows 50</p> <p>Boot 52</p> <p>Motorised tailgate (SW) 53</p> <p>Panoramic sunroof (SW) 56</p> <p>Fuel tank 58</p> <p>Diesel misfuel prevention 59</p> <hr/> <p>Comfort</p> <p>Front seats 61</p> <p>Rear seats 66</p> <p>Mirrors 68</p> <p>Steering wheel adjustment 70</p> <p>Interior fittings 71</p> <p>Boot fittings (Saloon) 74</p> <p>Boot fittings (SW) 75</p> <p>Heating and Ventilation 80</p> <p>Manual air conditioning 82</p> <p>Dual-zone digital air conditioning 84</p> <p>Quad-zone digital air conditioning 87</p> <p>Rear screen demist - defrost 92</p> <p>Programmable Heating/Ventilation 93</p>	<p>Driving</p> <hr/> <p>Starting-switching off the engine 94</p> <p>Electric parking brake 96</p> <p>Manual parking brake 103</p> <p>Manual gearbox 104</p> <p>Gear shift indicator 105</p> <p>Automatic gearbox 106</p> <p>6-speed electronic gear control gearbox 110</p> <p>Stop &amp; Start 114</p> <p>Hill start assist 117</p> <p>Head-up display 118</p> <p>Speed limiter 121</p> <p>Cruise control 123</p> <p>Parking sensors 125</p> <p>Parking space sensors 127</p> <hr/> <p>Visibility</p> <p>Lighting controls 129</p> <p>Automatic illumination of headlamps 134</p> <p>Headlamp adjustment 137</p> <p>Directional lighting 138</p> <p>Wiper controls 140</p> <p>Automatic rain sensitive wipers 142</p> <p>Courtesy lamps 144</p> <p>Interior mood lighting 145</p>
---	---	--

## Child safety

**6**

Child seats	146
ISOFIX child seats	152

## Safety

**7**

Direction indicators	157
Emergency or assistance call	158
Horn	158
Tyre under-inflation detection	159
ESP system	160
Seat belts	163
Airbags	166

## Practical information

**8**

Temporary puncture repair kit	170
Changing a wheel	176
Changing a bulb	183
Changing a fuse	192
12 V battery	196
Energy economy mode	199
Changing a wiper blade	200
Towing the vehicle	201
Towing a trailer	202
Fitting roof bars	204
Accessories	205

## Checks

**9**

Opening the bonnet	208
Running out of fuel (Diesel)	209
Petrol engines	210
Diesel engines	211
Checking levels	213
Checks	216

## Technical data

**10**

Petrol engines	218
Petrol weights	219
Diesel engines	221
Diesel weights	224
Dimensions	227
Identification markings	228

## Audio equipment and telematics

Emergency or assistance	229
JBL equipment	231
Peugeot Connect Navigation (RT6)	233
Audio system	287

---

 Alphabetical index ■


---

 Visual search ■

## Exterior

### Keyless Entry and Starting

This system allows you to unlock, lock and start your vehicle while keeping the key on your person and in the defined zone around the vehicle.

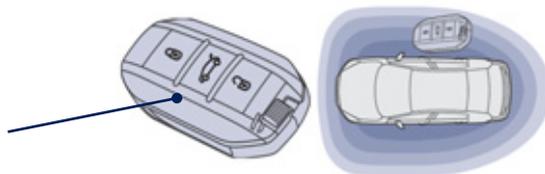


▶ 39, 94



### Stop & Start

This system puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, etc...). The engine restarts automatically as soon as you want to move off. The Stop & Start system reduces fuel consumption and exhaust emissions, and offers the comfort of complete silence when stationary.

▶ 114

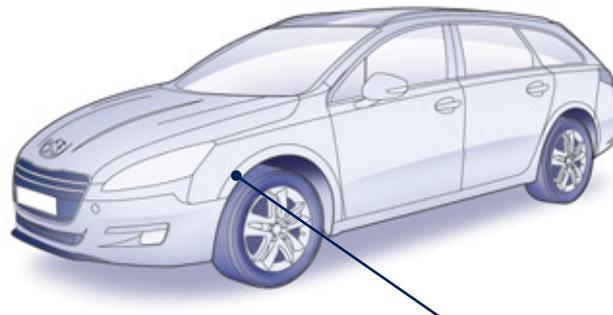

### Parking space sensor

This system measures the size of a space and advises whether parking is possible.

▶ 127

# Exterior

## Front and rear parking sensors

This system provides a warning when manoeuvring forwards and backwards by detecting obstacles located in front of or behind the vehicle.

▶ 125



## Motorised tailgate (SW)

This system provides motorised opening and closing of the tailgate, by pressing a button.

▶ 53




## Temporary puncture repair kit

This kit is a complete system consisting of a compressor and a sealant cartridge, to allow the temporary repair of a tyre.

▶ 170

# Open

## Remote control key

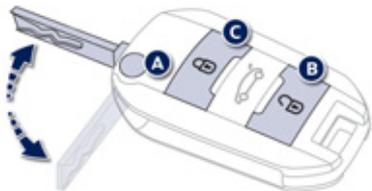


- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.




### Other functions...

- C. Normal locking of the vehicle  
Vehicle location.

## Keyless Entry and Starting system

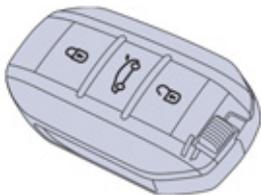


▶ 39

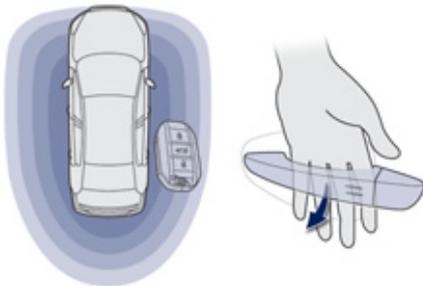

### Unlocking


With the electronic key on your person and in the defined zone around the vehicle, pass your hand behind the door handle to unlock the vehicle, then pull on the handle to open the door.

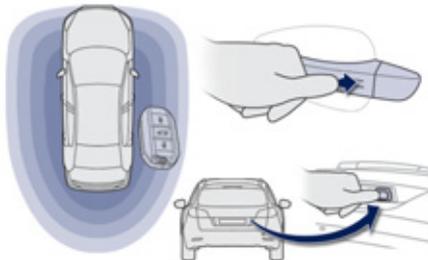


### Locking

With the electronic key in the defined zone around the vehicle, press with a finger on the door handle (at the markings) to lock the vehicle.

## Fuel tank

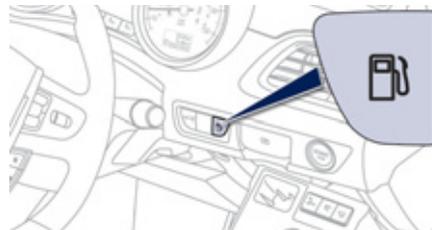

1. Opening the fuel filler flap.

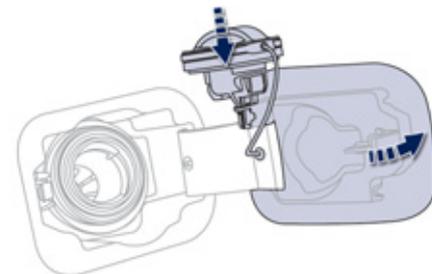

2. Opening and hooking the fuel filler cap.  
Tank capacity: approximately 72 litres  
(or 55 litres according to version).

▶ 58

# Interior

## Audio and communication systems

These systems benefit from the latest technology: MP3 compatible audio systems, USB player, Bluetooth hands-free system, satellite navigation system with colour screen, auxiliary inputs, Hi-Fi audio system, ...  
**Peugeot Connect Navigation (RT6)**

▶ 233

### Audio system

▶ 287




If your 508 is fitted with a JBL Hi-Fi audio system, this is designed specifically for the passenger compartment of your vehicle.

## Interior mood lighting

This subdued passenger compartment lighting improves visibility inside the vehicle in low lighting conditions.

▶ 145

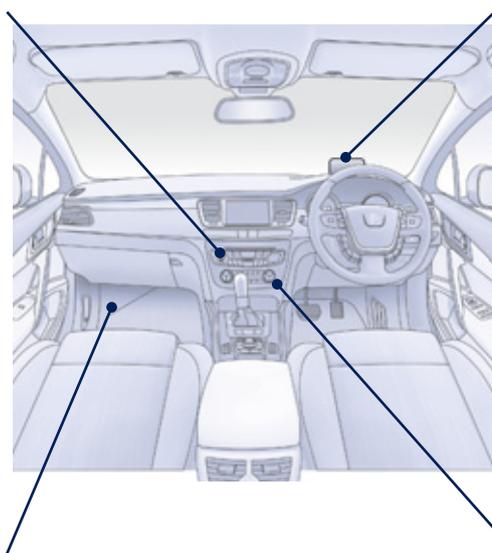

## Head-up display

This system projects speed and cruise control/speed limiter information onto a smoked strip in the driver's field of vision, so that they do not need to take their eyes off the road.

▶ 118

## Digital air conditioning

After setting the desired level of comfort, the system then automatically controls this level according to the exterior climatic conditions.

**Manual**

▶ 82

**Dual-zone**

▶ 84

**Quad-zone**

▶ 87

## Switch panels



Lighting of the indicator lamp indicates the state of the corresponding function.



Massage.

▶ 65



Adaptive lighting.

▶ 135




Parking space sensor.

▶ 127



Alarm.

▶ 48

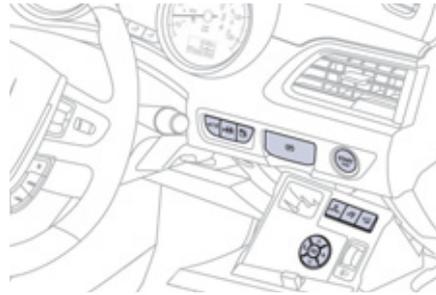

Electric parking brake.

▶ 96



Starting/stopping using the electronic key.

▶ 94



Opening the boot.

▶ 52, 53



Opening the fuel filler flap.

▶ 58



Deactivation of the ESP/ASR system.

▶ 160



Electric child lock.

▶ 156



Programmable heating warning lamp.

▶ 93



Deactivation of parking sensors.

▶ 126



Deactivation of Stop & Start.

▶ 115



Head-up display (on/off, settings).

▶ 118


# Sitting comfortably

## Front seats

### Manual adjustments

1. Head restraint height and angle adjustment.
2. Backrest angle adjustment.
3. Seat cushion height adjustment.
4. Lumbar support adjustment.
5. Seat forwards-backwards adjustment.

▶ 61

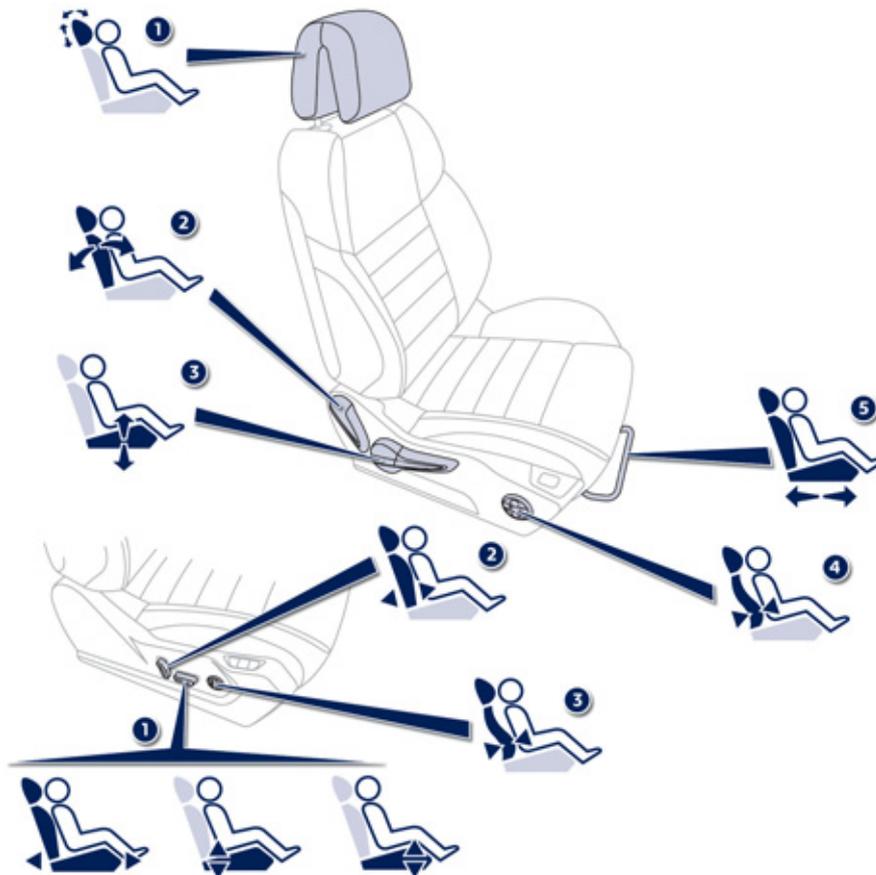


### Electrical adjustment

1. Angle, seat height and seat forwards-backwards adjustment.
2. Backrest angle adjustment.
3. Lumbar support adjustment.

▶ 62


## Instruments and controls

1. Cruise control/speed limiter controls.
2. Headlamp height adjustment.
3. Lighting and direction indicator stalk
4. Instrument panel.
5. Driver's airbag.  
Horn.
6. Gear lever.
7. 12 V accessory socket  
USB port/auxiliary socket.
8. Bonnet release lever.
9. Fusebox.
10. Front door window demisting/defrosting vent.
11. Windscreen demisting/defrosting vent.
12. Steering lock and starting with the key.
13. Starting using the electronic key.
14. Audio equipment steering wheel controls.
15. Wiper/screenwash/trip computer stalk.
16. Central locking and hazard warning buttons.
17. Multifunction screen.
18. Central adjustable air vents.
19. Passenger's airbag.
20. Side adjustable air vents.
21. Glove box/Passenger's airbag deactivation.
22. Electric parking brake.
23. Central armrest with storage.
24. Storage (according to version).
25. Audio system.
26. Heating/air conditioning controls.

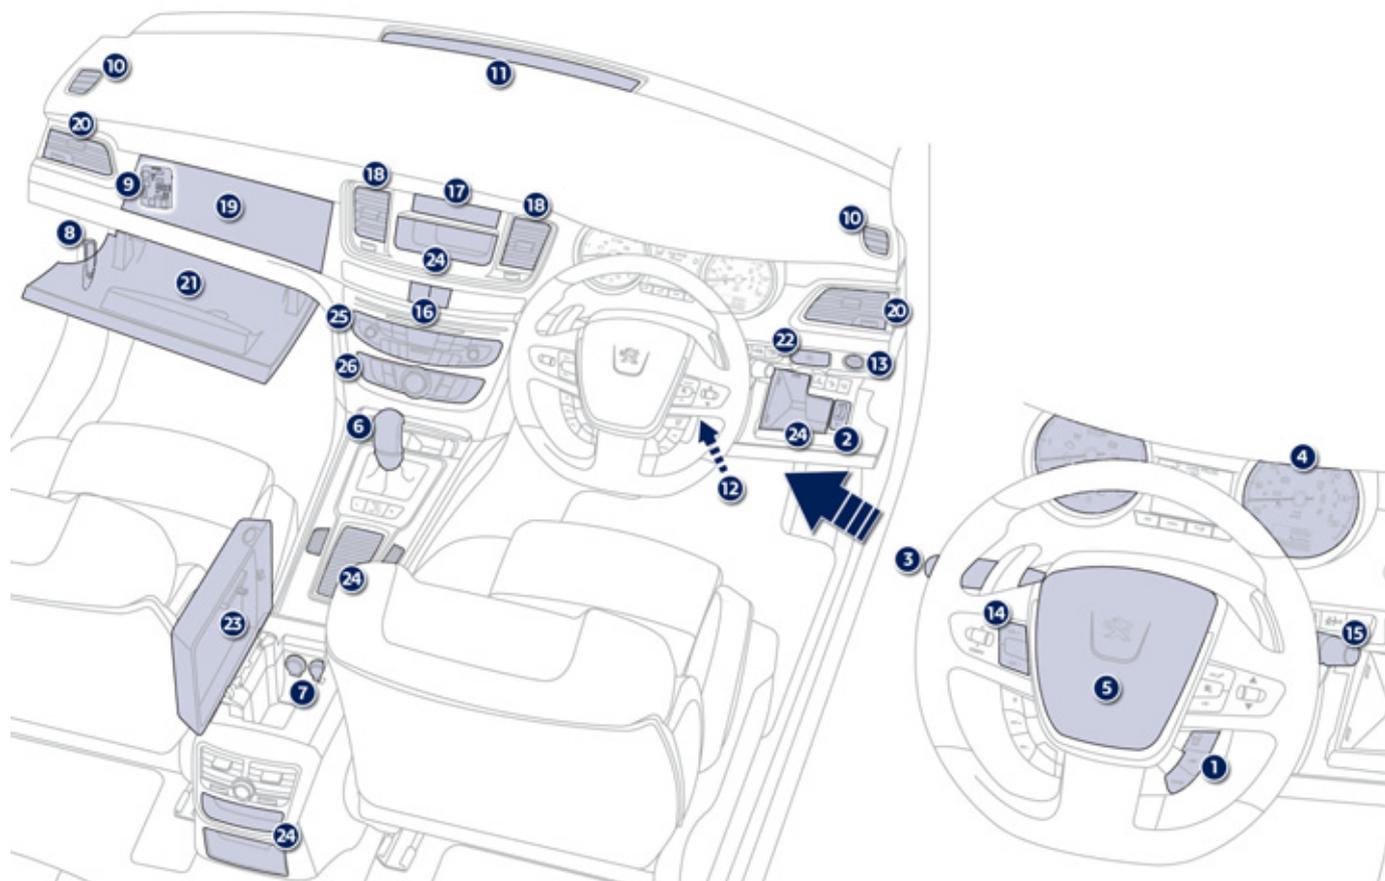

## Sitting comfortably


### Head restraint adjustment

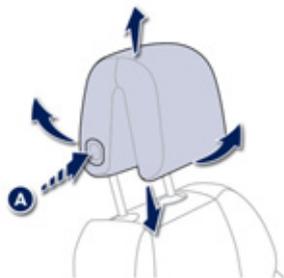

To lower it, press button **A**.  
To raise it, guide the head restraint upwards to the desired position.  
To incline it, swivel the lower part backwards or forwards.

▶ 64

### Steering wheel adjustment

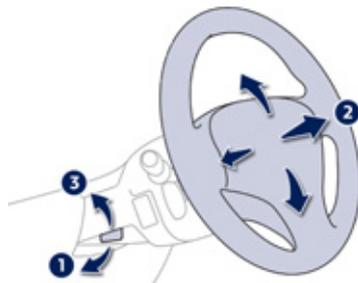

1. Release the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.

! For reasons of safety, these operations must only be carried out with the vehicle stationary.

▶ 70

### Heated seats control




- 0: off.
- 1: low.
- 2: medium.
- 3: high.

▶ 64

# Sitting comfortably

## Door mirrors

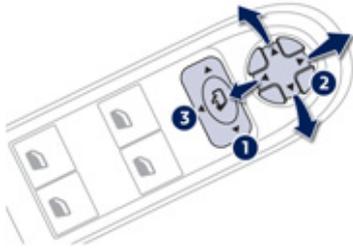


### Adjustment

1. Selection of the mirror.
2. Adjusting the position of the mirror glass.
3. Deselection of the mirror.

▶ 68

**i** Other functions...  
Folding/Unfolding.

## Rear view mirror

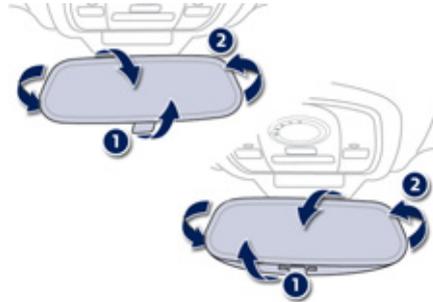

### Manual day/night type

1. Selecting the "day" position of the rear view mirror.
2. Rear view mirror adjustment.

### Automatic day/night type

1. Automatic detection of day/night mode.
2. Rear view mirror adjustment.

▶ 70

## Front seat belts




1. Fitting the belt.
2. Fastening.
3. Check that the belt is correctly fastened by pulling on the belt webbing.

▶ 163

# Seeing clearly

## Lighting

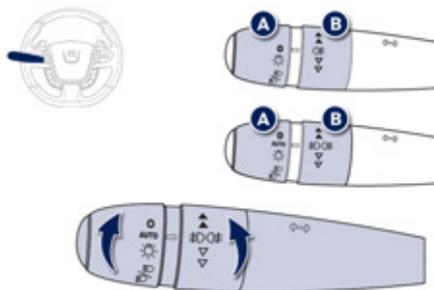


### Ring A

- O** Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

### Ring B

- Front and rear foglamps.
- ▶ 130**


## Wipers

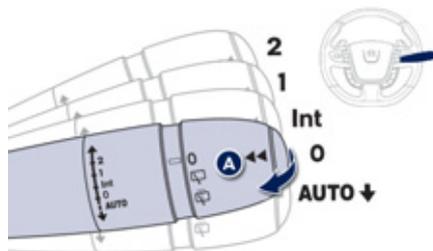

### Control stalk A: windscreen wipers

- 2.** Fast wipe.
- 1.** Normal wipe.
- Int.** Intermittent wipe.
- 0.** Park.
- AUTO** Automatic wiping.
- ↓** Single wipe: Brief pull on the stalk towards.
- Screenwash: Long pull on stalk towards you.

**▶ 140**

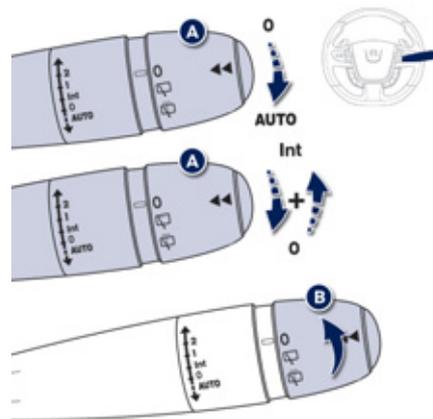

### Switching on "AUTO" mode

- Briefly push the stalk downwards.

### Switching off "AUTO" mode

- Briefly push the stalk downwards or place the stalk in another position: Int, 1 or 2.

**▶ 142**



### Ring B: rear wiper

- O** Park.
- Intermittent wipe.
- Screenwash.

**▶ 141**

# Ventilation

## Advice on interior settings

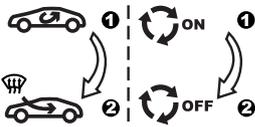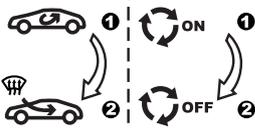I would like...	Heating or manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Exterior air intake	Temperature	Manual A/C
HOT					
COLD					<b>ON</b>
DEMISTING DEFROSTING					<b>ON</b>


**Digital air conditioning:** use of the fully automatic mode by pressing the "AUTO" button is recommended.

# Monitoring Instrument panel



On switching on, the dial needles go to the extent of their travel then return to 0.


- A. With the ignition on, the needle should indicate the fuel remaining.
- B. With the engine running, the associated low level warning lamp should go off.

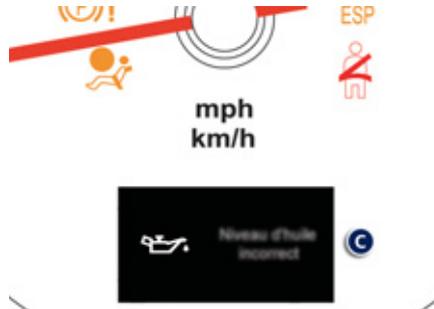

- C. With the ignition on, the instrument panel screen should indicate the level of oil. If the levels are not correct, top up the level which is low.

▶ 35

# Warning lamps

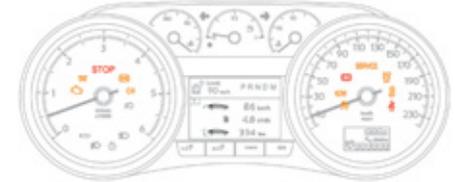


1. With the ignition on, the orange and red warning lamps come on.
  2. With the engine running, these warning lamps should go off.
- If a warning lamp remains on, refer to the page concerned.

▶ 21

# Passenger safety


## Front passenger's airbag

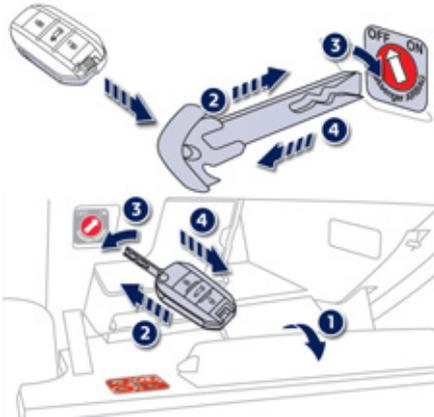

1. Open the glove box.
2. Insert the key.
3. Select position:  
 "ON" (activation), with front passenger or "forwards facing" child seat,  
 "OFF" (deactivation), with "rear facing" child seat.
4. Remove the key keeping the switch in the new position.

▶ 167

## Front seat belts and passenger's front airbag

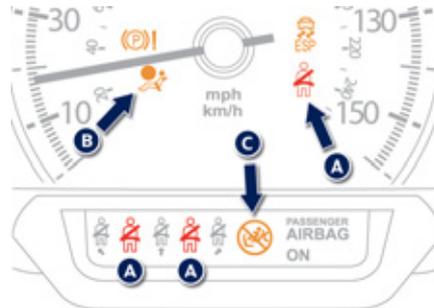

- A. Front seat belts not fastened or unfastened warning lamp.

▶ 164

- B. Airbag fault warning lamp.
- C. Front passenger's airbag activation indicator lamp.

▶ 167

# Driving safely

## Stop & Start

### Going into engine STOP mode

**ECO** The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby; with an **electronic gear control gearbox** and speeds below 4 mph (6 km/h), press the brake pedal or put the gear lever in position **N**.

In certain circumstances, the STOP mode may not be available; the "ECO" warning lamp flashes for a few seconds, then goes off.

▶ 114

### Going into engine START mode

**ECO** The "ECO" warning lamp goes off and the engine restarts **with an electronic gear control gearbox**:

- with the gear lever in position **A** or **M** release the brake pedal,
- or with the gear lever in position **N** and brake pedal released, move the gear lever to position **A** or **M**,
- or engage reverse.

In certain circumstances, START mode may be invoked automatically; the "ECO" warning lamp flashes for a few seconds, then goes off.

▶ 115



### Deactivation/Reactivation

You can deactivate the system at any time by pressing the "ECO OFF" button; the button's warning lamp comes on.


**i** The system is automatically reactivated every time the engine is started with the key.

**!** Before refuelling or doing anything under the bonnet, you must switch off the ignition with the key.

▶ 115

# Driving safely

## Speed limiter "LIMIT"

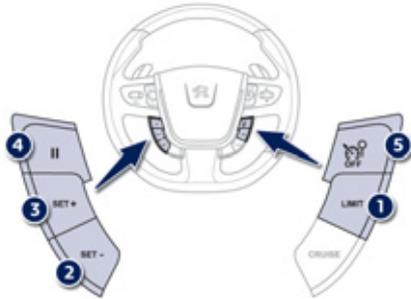


1. Selecting speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume speed limiter.
5. Speed limiter off.

The values must be set with the engine running.

▶ 121

## Cruise control "CRUISE"

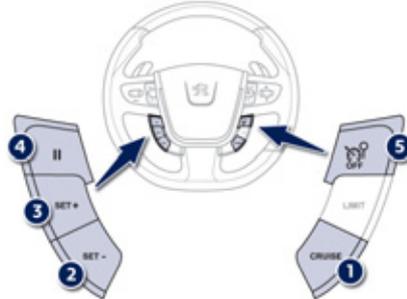

1. Selecting cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume cruise control.
5. Cruise control Off.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least 4th gear engaged on a manual gearbox (2nd gear on an electronic gear control or automatic gearbox).

▶ 123


## Display in the instrument panel



The cruise control or speed limiter mode appears in the instrument panel when it is selected.



## Petrol-Diesel instrument panel

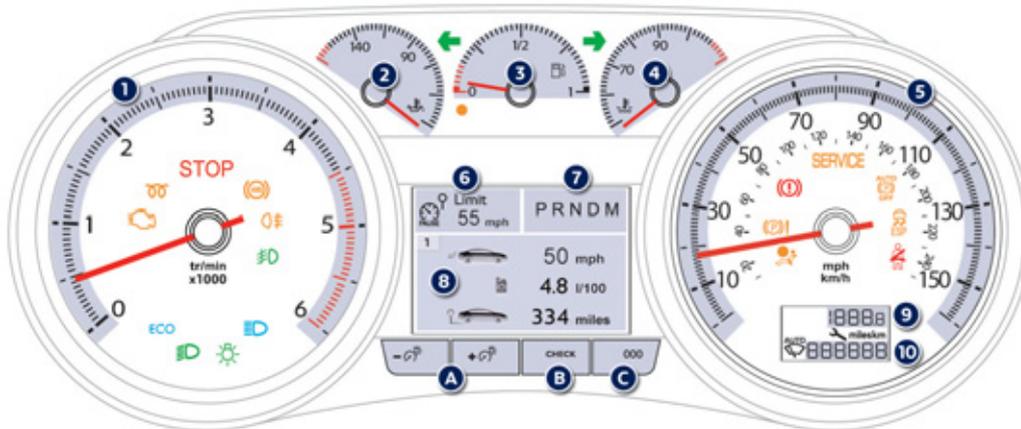

### Dials and screens


1. Rev counter (x 1 000 tr/min or rpm), graduation according to engine (petrol or Diesel).
2. Engine oil temperature gauge.
3. Fuel gauge.
4. Engine coolant temperature gauge.
5. Speedometer (mph or km/h).
6. Cruise control or speed limiter settings.
7. Gear shift indicator for a manual gearbox or gear lever position and gear for an electronic gear control or automatic gearbox.

8. Display zone: alert messages or state of functions, trip computer.
9. Trip distance recorder (miles or km).
10. Automatic wipers  
Service indicator (miles or km) then, total distance recorder.  
These two functions are displayed successively when switching on the ignition.

### Control buttons

- A. Main lighting dimmer.
- B. Display of alert log.  
Recall of the service information.
- C. Reset the trip distance recorder.

## Instrument panel screen

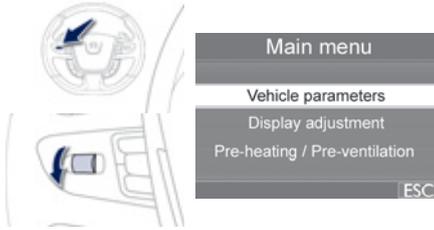

With the vehicle stationary, use the left hand thumb wheel to move through the menus, so as to configure the vehicle settings (driving and comfort systems, ...).

- Rotation (other than menu): scroll through the list of active functions available,
- Press: main menu, confirm the selection,
- Rotation (in a menu): move up or down in the menu.

## Main menu

### Vehicle settings

#### Driving position setting

#### Unlocking boot only

### Driving assistance

#### Speeds memorised

#### Rear wipe in reverse gear

#### Automatic parking brake

### Lighting

#### Welcome lighting

#### Guide-me-home headlamps

#### Directional headlamps

## Screen settings

### Language

### Units

#### Fuel consumption

#### Temperature

### Colours

## Preheating/Preventilation

### Settings

## Indicator and warning lamps

Visual indicators informing the driver that a system is in operation, switched off or has a fault.

### When the ignition is switched on

Certain warning lamps come on for a few seconds in the instrument panel and/or instrument panel screen when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should switch off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

### Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message in the instrument panel screen.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

## Operation indicator lamps

If one of the following indicator lamps comes on in the instrument panel and/or instrument panel screen, this confirms that the corresponding system has come into operation.

Warning/indicator lamp	State	Cause	Action/Observations
 <b>Left-hand direction indicator</b>	flashing with buzzer.	The lighting stalk is pushed down.	
 <b>Right-hand direction indicator</b>	flashing with buzzer.	The lighting stalk is pushed up.	
 <b>Sidelamps</b>	fixed.	The lighting stalk is in the "Sidelamps" position.	
 <b>Dipped beam headlamps</b>	fixed.	The lighting stalk is in the "Dipped beam headlamps" position.	
 <b>Main beam headlamps</b>	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
 <b>Front foglamps</b>	fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
 <b>Rear foglamps</b>	fixed.	The rear foglamps are switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamps.

**i** For more information on the lighting controls, refer to the "Visibility" section.

Warning/indicator lamp		State	Cause	Action/Observations
	<b>Diesel engine pre-heating</b>	fixed.	The ignition switch is at the 2nd position (ignition on).	Wait until the warning lamp goes off before starting*. The period of illumination of the warning lamp is determined by the climatic conditions (up to about thirty seconds in extreme climatic conditions). If the engine does not start, switch the ignition off and then on, wait until the warning lamp goes off again, then start the engine.
	<b>Parking brake</b>	fixed.	The parking brake is applied or not properly released.	Release the parking brake to switch off the warning lamp, keeping your foot on the brake pedal. Observe the safety recommendations. For further information on the parking brake, refer to the "Driving" section.
	<b>Deactivation of the automatic functions of the electric parking brake</b>	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.	Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer or a qualified workshop if automatic application/release is not possible. The parking brake can be released manually using the emergency release procedure. For more information on the electric parking brake, refer to the "Driving" section.

\* If your vehicle is fitted with Keyless Entry and Starting, the warning lamp goes off immediately.

Warning/indicator lamp		State	Cause	Action/Observations
	<b>Automatic wiping</b>	fixed.	The wiper control is pushed downwards.	Automatic front wiping is activated.
	<b>Passenger's airbag system</b>	fixed in the seat belt and passenger's front airbag warning lamps display.	The control switch, located in the glove box, has been placed in the "ON" position. The passenger's front airbag is activated. In this case, do not install a "rear facing" child seat.	Move the control switch to the "OFF" position to deactivate the passenger's front airbag. In this case, you can install a "rear facing" child seat.
	<b>Stop &amp; Start</b>	fixed.	The Stop & Start system has put the engine in STOP mode at a vehicle stop (traffic lights, traffic jam, or other...).	The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
		flashes for a few seconds, then goes off.	STOP mode is temporarily unavailable. or START mode is invoked automatically.	Refer to "Driving - § Stop & Start" for special cases with STOP mode and START mode.

## Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This is may be accompanied by an audible signal and a message in the instrument panel screen.

Warning/indicator lamp		State	Cause	Action/Observations
	<b>Passenger's airbag system</b>	fixed in the instrument panel and/or seat belt and front passenger's airbag warning lamps display.	The control switch, located in the glove box, is set to the <b>OFF</b> position. The passenger's front airbag is deactivated.	Set the control to the <b>"ON"</b> position to activate the passenger's front airbag. In this case, do not fit a child seat in the rear-facing position.
	<b>ESP/ASR</b>	fixed.	The button (located on the folding panel at the bottom right of the dashboard) has been pressed. Its indicator lamp is on. The ESP/ASR is deactivated. ESP: electronic stability programme. ASR: anti-slip regulation.	Press the button to activate the ESP/ASR. Its indicator lamp goes off. The ESP/ASR system is activated automatically when the vehicle is started. After deactivation, the system is reactivated automatically from approximately 30 mph (50 km/h).

## Warning lamps

When the engine is running or the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the illumination of a warning lamp must be investigated further by reading the associated message in the instrument panel screen. If you encounter any problems, contact a PEUGEOT dealer or a qualified workshop.

Warning/indicator lamp		State	Cause	Action/Observations
<b>STOP</b>	<b>STOP</b>	fixed, associated with another warning lamp, accompanied by an audible signal and a message in the screen.	It is associated with a punctured wheel, the braking system, the power steering, the engine oil pressure, the engine coolant temperature or a major electrical fault.	Stop as soon as it is safe to do so as the engine may cut out. Park, switch off the ignition and call a PEUGEOT dealer or a qualified workshop.
<b>SERVICE</b>	<b>Service</b>	on temporarily.	Minor faults have occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown in the screen, such as, for example: <ul style="list-style-type: none"> <li>- the engine oil level,</li> <li>- saturation of the particle emissions filter (Diesel).</li> <li>- the power steering,</li> <li>- a minor electrical fault.</li> <li>- ...</li> </ul> For any other faults, contact a PEUGEOT dealer or a qualified workshop.
		fixed.	Major faults have occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown in the screen and then contact a PEUGEOT dealer or qualified workshop.


Warning/indicator lamp		State	Cause	Action/Observations
	<b>Electric parking brake</b>	flashing.	The electric parking brake is not applied automatically. The application/release is faulty.	You must stop as soon as it is safe to do so. Park on level ground, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.
	<b>Electric parking brake fault</b>	fixed.	The electric parking brake has a fault.	Contact a PEUGEOT dealer or a qualified workshop without delay. The parking brake can be released manually. For more information on the electric parking brake, refer to the "Driving" section.
	<b>Deactivation of the automatic functions of the electric parking brake</b>	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.	Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer or a qualified workshop if automatic application/release is not possible. The parking brake can be released manually using the emergency release procedure. For more information on the electric parking brake, refer to the "Driving" section.
	<b>Braking</b>	fixed.	The braking system fluid level has dropped significantly.	You must stop as soon as it is safe to do so. Top up with brake fluid listed by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer or a qualified workshop.
		fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault.	You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT or a qualified workshop.

Warning/indicator lamp		State	Cause	Action/Observations
	<b>Anti-lock Braking System (ABS)</b>	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.
	<b>Dynamic stability control (ESP/ASR)</b>	flashing.	The ESP/ASR regulation is active.	The system optimises traction and improves the directional stability of the vehicle.
		fixed.	Unless it has been deactivated (button pressed and its indicator lamp on) the ESP/ASR system has a fault.	Have it checked by a PEUGEOT or a qualified workshop.
	<b>Engine autodiagnosis system</b>	fixed.	The emission control system has a fault.	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or qualified workshop without delay.
		flashing.	The engine management system has a fault.	Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.
	<b>Low fuel level</b>	fixed with the needle in the red zone.	When it first comes on there remains approximately <b>7 litres</b> of fuel in the tank. At this point, you begin to use the fuel reserve.	Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made. Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems.

Warning or indicator lamp in the instrument panel		State	Cause	Action/Observations
	<b>Engine oil pressure</b>	fixed.	There is a fault with the engine lubrication system.	You must stop as soon it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.
	<b>Battery charge</b>	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
	<b>Door(s) open</b>	fixed, associated with a message identifying the door, if the speed is below 6 mph (10 km/h).  fixed, associated with a message identifying the door, and accompanied by an audible signal if the speed is above 6 mph (10 km/h).	A door or the boot is still open.	Close the door or boot.

Warning/indicator lamp		State	Cause	Action/Observations
	<b>Seat belt(s) not fastened/unfastened</b>	fixed then flashing accompanied by an increasing audible signal.	A seat belt has not been fastened or has been unfastened.	Pull the strap then insert the tongue in the buckle.
	<b>Airbags</b>	on temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then goes off.	This lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
		fixed.	One of the airbag or seat belt pretensioner systems has a fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.
	<b>Directional headlamps</b>	flashing.	The directional headlamps system has a fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.

## Coolant temperature gauge

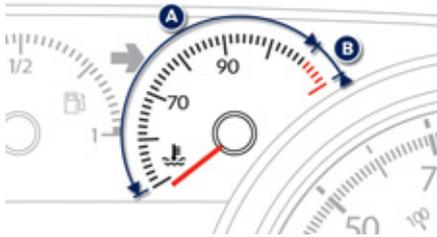

With the engine running, when the needle is:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the central **STOP** warning lamp comes on, accompanied by an audible signal and a message in the instrument panel screen.

**You MUST stop as soon as it is safe to do so.**

Wait a few minutes before switching off the engine.

Contact a PEUGEOT dealer or a qualified workshop.

After driving for a few minutes, the temperature and pressure in the cooling system increase.


To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap by two turns to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.



Be aware of the risk of burns when topping up the cooling system. Do not fill above the maximum level (indicated on the reservoir).

## Engine oil temperature gauge

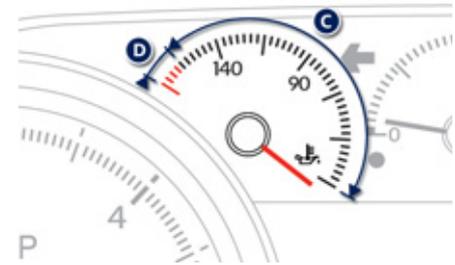

On switching on the ignition or when driving, it indicates the engine oil temperature.

With the needle in zone **C**, the temperature is correct.

With the needle in zone **D**, the temperature is too high.

Slow down to lower the oil temperature.

## CHECK (vehicle autotest)

### Automatic CHECK

With the key in the ignition on position, all of the warning lamps for the functions tested are displayed. They are switched off after a few seconds. At the same time, an automatic CHECK (vehicle autotest) is carried out.

If no "major" fault is found, you can start your vehicle.

### In the presence of a fault

A "minor" fault has been detected: the warning lamp(s) are displayed then go off.


You can start your vehicle; however, contact a PEUGEOT dealer or a qualified workshop as soon as possible.

A "major" fault has been detected: the associated warning lamps(s) remain on accompanied by the STOP or SERVICE warning lamp.

Do not start your vehicle.

Call a PEUGEOT dealer or a qualified workshop without delay.

### Manual CHECK

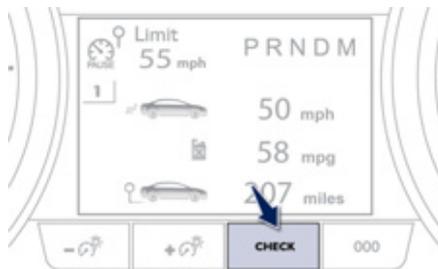


Pressing the "CHECK" button on the instrument panel starts the manual CHECK (vehicle autotest). This function enables you to recall at any time (with the key in the ignition on position or with the engine running), the alerts present.

**With the engine running and the vehicle moving, the instrument panel displays the warning lamps (in the event of a fault).**

**i** The passenger's airbag deactivated warning lamp\* remains on while the airbag is deactivated.

## Lighting dimmer control

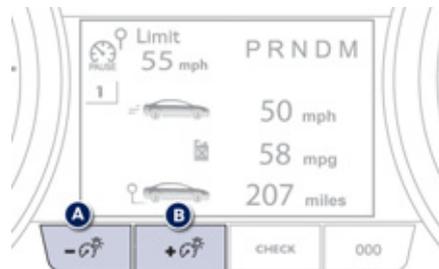

With the headlamps on, press button **B** to increase the brightness of the instruments and controls and the interior mood lighting or button **A** to reduce it.

As soon as the lighting reaches the required level of brightness, release the button.

\* According to country.

## Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule.

The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.



### More than 1 800 miles (3 000 km) remain before the next service is due


When the ignition is switched on, no service information appears in the screen.

### Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due

For 5 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

**Example:** 1 700 miles (2 800 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:

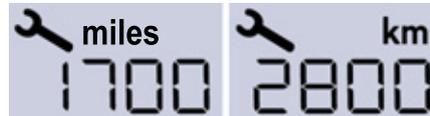


5 seconds after the ignition is switched on, **the spanner goes off**; the distance recorder resumes its normal operation. The screen then indicates the total and trip distances.



### Less than 600 miles (1 000 km) remain before the next service is due

**Example:** 560 miles (900 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:

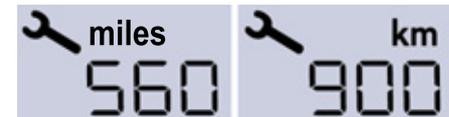

5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on** to indicate that a service must be carried out soon.



**i** Illumination of the key is accompanied by a message in the instrument panel screen.

## Service overdue

For 5 seconds after the ignition is switched on, **the spanner flashes** to indicate that the service must be carried out as soon as possible.

**Example:** the service is overdue by 186 miles (300 km).

For 5 seconds after the ignition is switched on, the screen indicates:




5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on.**



**i** The distance remaining may be weighted by the time factor, depending on the driving conditions. Therefore, the spanner may also come on if you have exceeded the two year service interval.

## Service indicator zero reset

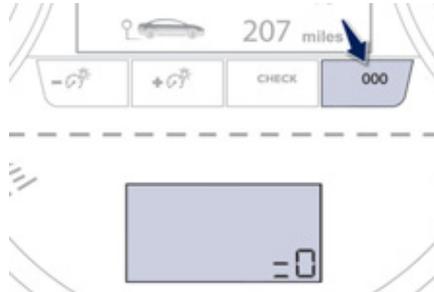

After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a countdown,
- ☞ when the display indicates "**=0**", release the button; the spanner disappears.

**i** Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

## Retrieving the service information

You can access the service information at any time.


- ☞ Press the trip distance recorder zero reset button.

The service information is displayed for a few seconds, then disappears.

## Engine oil level indicator

System which informs the driver whether the engine oil level is correct or not. This information is indicated for a few seconds when the ignition is switched on, after the service information.

**i** The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

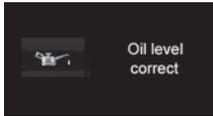

### Oil level correct

This is indicated by a message in the instrument panel screen.



### Oil level incorrect

This is indicated by a message in the instrument panel screen.

If the low oil level is confirmed by a check using the dipstick, the level must be topped up to avoid damage to the engine.



### Oil level indicator fault

This is indicated by a message in the instrument panel screen. Contact a PEUGEOT dealer or a qualified workshop.

### Dipstick

Refer to the "Checks" section to locate the dipstick and the oil filler cap on your engine. There are 2 marks on the dipstick:




- **A** = max; never exceed this level,
- **B** = min; top up the level via the oil filler cap, using the grade of oil suited to your engine.

## Mileage recorder



The total mileage is displayed in zone **A** of the screen and the trip mileage in zone **B**.

### Trip recorder zero reset

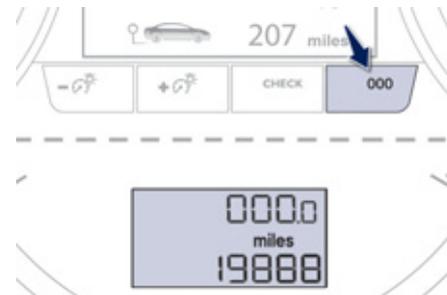


With the trip mileage displayed, press the button for a few seconds.


# Trip computer

System which provides current information concerning the trip (range, fuel consumption...).

## Instrument panel screen

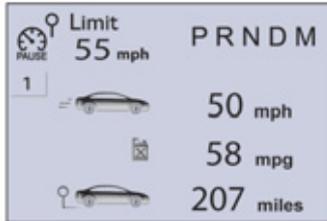


## Information display

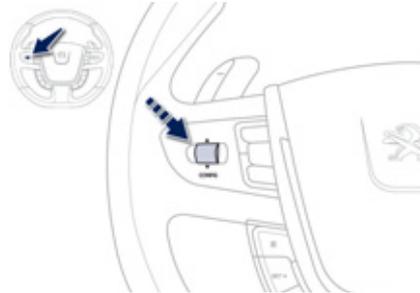

1

☞ Press the **steering mounted control** to display the various trip computer tabs in succession.


2

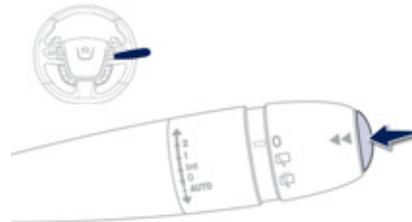

☞ Or on the end of the wiper stalk.

- The current information tab with:
  - the range,
  - the current fuel consumption,
  - the Stop & Start time counter.
- The trip "1" tab with:
  - the average speed, for the first trip.
  - the average fuel consumption,
  - the distance travelled,
- The trip "2" tab with:
  - the average speed, for the second trip.
  - the average fuel consumption,
  - the distance travelled,

## Trip reset

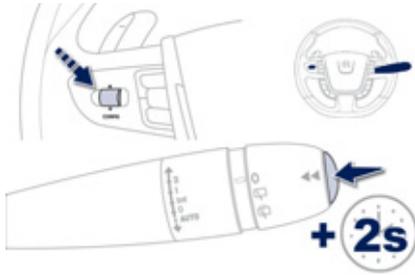

When the trip required is displayed, press the control for more than two seconds or use the left hand thumbwheel of the steering mounted controls.

Trips "1" and "2" are independent but their use is identical.

For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

## A few definitions...



### Range

(miles or km)

This indicates the distance which can still be travelled with the fuel remaining in the tank in relation to the average fuel consumption over the last few miles (kilometres) travelled.



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer or a qualified workshop.



### Current fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption during the last few seconds.



This function is only displayed from 20 mph (30 km/h).



### Average fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption since the last trip computer zero reset.



### Average speed

(mph or km/h)

This is the average speed calculated since the last trip computer zero reset (ignition on).



### **Stop & Start time counter**

(minutes/seconds or hours/  
minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the key.

## Remote control key


System which permits central unlocking or locking of the vehicle using the lock or from a distance. It is also used to locate and start the vehicle, as well as providing protection against theft.



### Unfolding the key


☞ First press this button to unfold the key.

## Unlocking the vehicle Complete unlocking

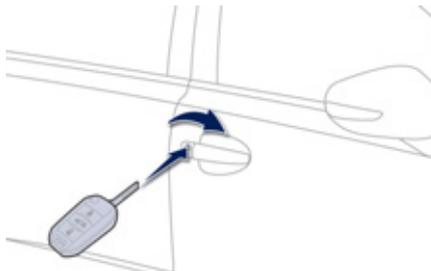

### Using the key


☞ Turn the key to the front of the vehicle to unlock the vehicle.

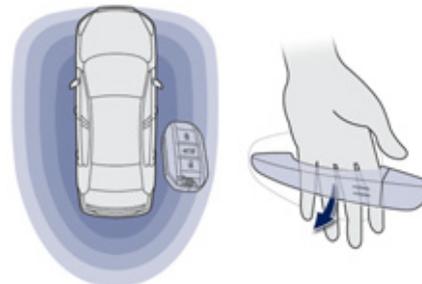

### Using the electronic key

☞ With the electronic key on your person and in the defined zone, pass your hand behind the door handle to unlock the vehicle, then pull on the handle to open the door. Your passengers can also open their doors, as soon as the electronic key is in the defined zone around the vehicle.

## "Keyless Entry and Starting" system

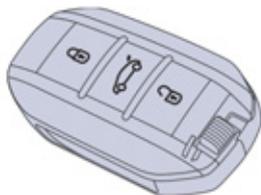

System that allows the opening, closing and starting of the vehicle while keeping the electronic key on your person. It can also be used as a remote control.



☞ Press the open padlock to unlock the vehicle.

Holding this button down opens the windows automatically.



Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds. According to version, the door mirrors unfold at the same time.

## Selective unlocking



This is set via the instrument panel screen configuration menu.

Complete unlocking is activated by default.

## Using the remote control



To unlock the driver's door only press the open padlock once.

To unlock the other doors and the boot, press the open padlock again.

## Using the electronic key

- ☞ To unlock only the driver's door with the electronic key on your person, pass your hand behind the driver's door handle then pull the handle to open the door.
- ☞ To unlock the vehicle completely, pass your hand behind one of the passenger door handles, on the side of the vehicle where the electronic key is located, then pull the door handle.


**i** Each unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds. According to version, the door mirrors unfold at the same time as the first unlocking action.

## Unlocking the boot

### Using the remote control



☞ Press this button to unlock the vehicle and open the boot.

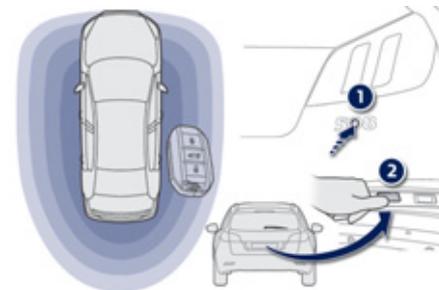

### Using the electronic key

☞ With the electronic key in the defined zone, press button 1 (Saloon) or lift lever 2 (SW) to unlock the vehicle and open the boot.

## Boot only function activated



This is set in the instrument panel configuration menu.


This function is deactivated by default.

- ☞ use of the remote control or the electronic key then unlocks and/or opens only the boot.



Don't forget to lock your boot afterwards.

## Locking the vehicle Normal locking

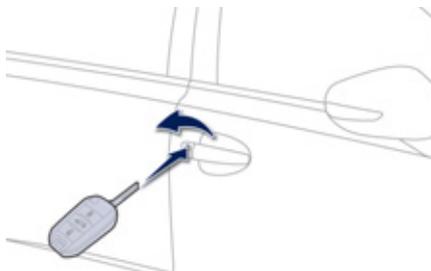


### Using the key

- ☞ Turn the key towards the rear of the vehicle to lock the vehicle completely.

### Using the remote control



- ☞ Press the closed padlock to lock the vehicle completely.

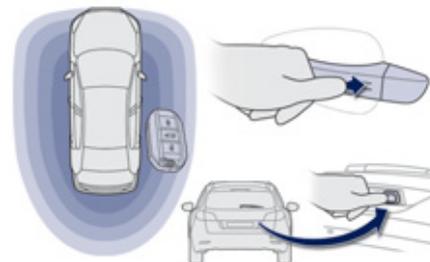

### Using the electronic key

- ☞ With the electronic key in the defined zone, press with a finger on the door handle (at the markings) to lock the vehicle.
- ☞ From the boot (SW only), with the electronic key in the defined zone, press a button to lock the vehicle.



Maintaining the locking action (remote control or manual key) automatically closes the windows and sunroof.

**i** Locking is confirmed by fixed lighting of the direction indicators for approximately two seconds. According to version, the door mirrors fold at the same time.

It is not possible to lock the vehicle if an electronic key is left inside the vehicle. After a long period of parking, the automatic detection functions of the electronic key are inhibited so as to not discharge the vehicle's battery. You should then use the remote control function of the electronic key to unlock the vehicle.


**!** As a safety measure (children on board), never leave the vehicle without taking your key, even for a short period. Guard against theft when the electronic key is in the defined zone with the vehicle unlocked.

**i** If one of the doors or the boot is still open or if an electronic key has been left inside the vehicle, the central locking does not take place. When the vehicle is locked, if it is unlocked inadvertently, it will relock automatically after about thirty seconds unless a door is opened.

The folding and unfolding of the door mirrors by the remote control can be deactivated by a PEUGEOT dealer.

## Deadlocking

**!** Deadlocking renders the exterior and interior door controls inoperative. It also deactivates the manual central control button. Therefore, never leave anyone inside the vehicle when it is deadlocked.

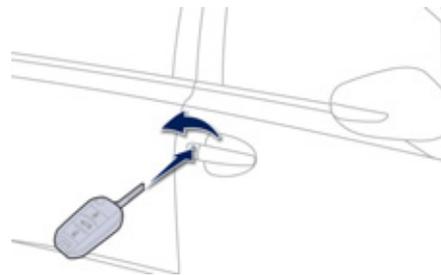


### Using the key

- ☞ Turn the key to the rear in the driver's door lock to lock the vehicle completely.
- ☞ Turn the key to the rear again within five seconds to deadlock the vehicle.

## Using the remote control



- ☞ Press the closed padlock to lock the vehicle completely or press the closed padlock for more than two seconds to close the windows automatically in addition to locking.
- ☞ Press the closed padlock again within five seconds to deadlock the vehicle.

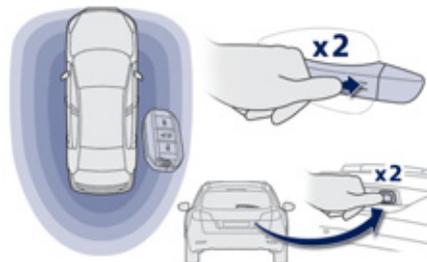

- i** Deadlocking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

2

## Using the electronic key


By the doors:

- ☞ With the electronic key in the defined zone, press a finger on the door handle (at the markings) to lock the vehicle.
- ☞ Within five seconds, press the door handle again to deadlock the vehicle.

By the tailgate (SW only):


- ☞ With the electronic key in the defined zone, press the button to lock the vehicle.
- ☞ Within five seconds, press the button to deadlock the vehicle.

## Locking/unlocking from the inside

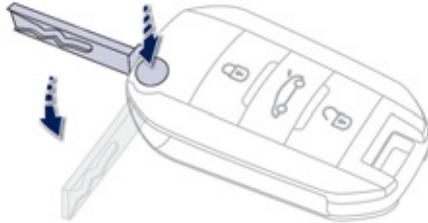

### Folding the key

- ☞ First press this button to fold the key.

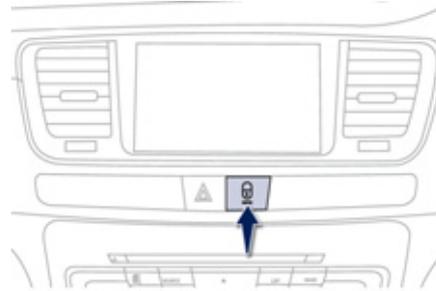

- ☞ Press the button.  
This allows the doors and the boot to be locked or unlocked.

! If the vehicle is deadlocked, the button is not active. In this case, use the key or the remote control to unlock.

### Automatic central locking of the doors

The doors can lock automatically while driving (speed above 6 mph [10 km/h]). To activate or deactivate this function, press and hold the button until the message "Automatic door locking activated or deactivated" appears.

! Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

### Locating your vehicle




- ☞ Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the courtesy lamps and flashing of the direction indicators for a few seconds.

# Emergency procedure

## Emergency unlocking/locking using the electronic key

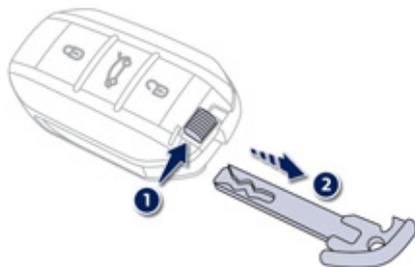


The integral key is used to lock and unlock the vehicle when the electronic key cannot operate:

- cell battery flat, vehicle battery discharged or disconnected, ...
  - vehicle located in an area with strong electromagnetic emissions.
- ☞ Pull on button 1, to extract the integral key 2.
- ☞ Unlock or lock the vehicle using the key.

## Manual locking

### Driver's door

Insert the key in the lock to lock or unlock the door.

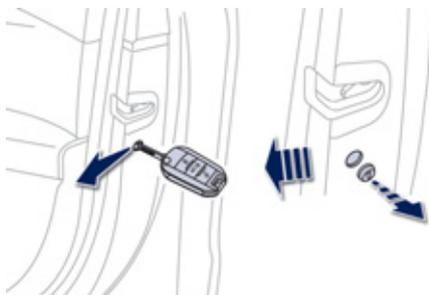

### Passenger doors

- ☞ On the rear doors, check that the child lock is not on.
- ☞ Remove the black cap located on the edge of the door, using the key.
- ☞ Insert the key into the aperture without forcing, then without turning, move the latch sideways towards the inside of the door.
- ☞ Remove the key and refit the cap.

## Remote control problem

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.

- ☞ First of all, use the key in the lock to unlock or lock your vehicle.
  - ☞ Then, reinitialise the remote control.
- If the problem persists, contact a PEUGEOT dealer or a qualified workshop as soon as possible.

### Reinitialisation with the remote control


- ☞ Switch on the ignition.
  - ☞ Immediately press one of the remote control buttons for a few seconds.
  - ☞ Switch off the ignition.
- The remote control is fully operational again.

## Reinitialisation with the electronic key

- ☞ Switch of the ignition.
- ☞ Immediately press one of the remote control buttons for a few seconds.
- ☞ Switch on the ignition.

The electronic key is fully operational again.

## Changing the battery of the key

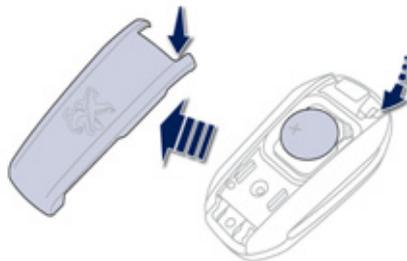

Battery ref.: CR2032/3 volts.


This replacement battery is available from a PEUGEOT dealer or a qualified workshop. A message appears in the instrument panel screen when replacement of the battery is needed.

- ☞ Unclip the cover using a small screwdriver at the cutout.
- ☞ Lift off the cover.
- ☞ Remove the flat battery from its location.
- ☞ Fit the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover onto the casing.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment. Take them to an approved collection point.

## Changing the battery of the electronic key

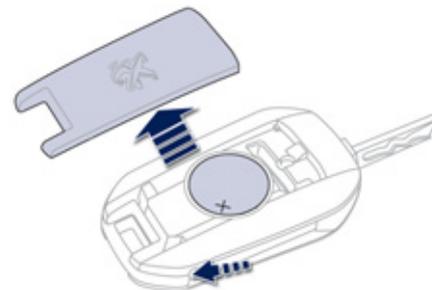

Battery ref.: CR2032/3 volts.

This replacement battery is available from a PEUGEOT dealer or a qualified workshop. A message is displayed in the instrument panel screen when replacement of the battery is needed.

- ☞ Unclip the cover using a pointed object at the key ring.
- ☞ Slide the flat battery out of its location.
- ☞ Slide the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover in place starting at the front.
- ☞ Reinitialise the electronic key.

## **! Lost keys, remote control, electronic key**

Visit a PEUGEOT dealer with the vehicle's V5 registration document and your personal identification documents. The PEUGEOT dealer will be able to retrieve the key code and the transponder code required to order a replacement.

### **Remote control**

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off.

### **Locking the vehicle**

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency. As a safety precaution (with children on board), remove the key from the ignition or take the electronic key when you leave the vehicle, even for a short time.

### **Electrical interference**

The Keyless Entry and Starting electronic key may not operate if close to certain electronic devices: telephone, laptop computer, strong magnetic fields, ...

### **Anti-theft protection**


Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

Don't forget to turn the steering to engage the steering lock.

### **When purchasing a second-hand vehicle**

Have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.

# Alarm

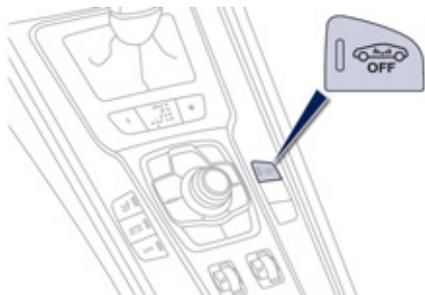

System which protects and provides a deterrent against theft and break-ins. It provides the following types of monitoring:

## - Exterior perimeter

The system checks for opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot or the bonnet...

## - Interior volumetric

The system checks for any variation in the volume in the passenger compartment. The alarm is triggered if anyone breaks a window, enters the passenger compartment or moves inside the vehicle.

## - Tilt

The system checks for any change in the attitude of the vehicle. The alarm is triggered if the vehicle is lifted, moved or knocked.

## ! Self-protection function

The system checks for the putting out of service of its components.

The alarm is triggered if the battery, the central control unit or the wires of the siren are put out of service or damaged.

For all work on the alarm system, contact a PEUGEOT dealer or a qualified workshop.

## Locking the vehicle with full alarm system

### Activation

☞ Switch off the ignition and get out of the vehicle.



☞ Press the locking button on the remote control or lock the vehicle using the Keyless Entry and Starting system.

The monitoring system is active: the indicator lamp on the button flashes once per second. After the locking button on the remote control is pressed or the vehicle locked using the Keyless Entry and Starting system, the exterior perimeter monitoring is activated after a delay of 5 seconds and the interior volumetric and anti-tilt monitoring after a delay of 45 seconds. If an opening (door, boot...) is not closed fully, the vehicle is not locked but the exterior perimeter monitoring will be activated after a delay of 45 seconds at the same time as the interior volumetric and anti-tilt monitoring.

## Deactivation of the volumetric monitoring



☞ Press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system.



The volumetric protection system is deactivated: the indicator lamp in the button goes off.

## Locking the vehicle with exterior perimeter monitoring only

Deactivate the interior volumetric and anti-lift monitoring to avoid unwanted triggering of the alarm in certain cases such as:

- leaving a window partially open,
- washing your vehicle,
- changing a wheel,
- having your vehicle towed,
- transportation by sea.

## Deactivation of the interior volumetric and anti-tilt monitoring



- ☞ Switch of the ignition and within ten seconds, press this button until the indicator lamp is on continuously.
- ☞ Get out of the vehicle.



- ☞ Press the locking button on the remote control immediately or lock the vehicle using the Keyless Entry and Starting system.

The exterior perimeter monitoring alone is activated: the indicator lamp in the button flashes once per second.

To be effective, this deactivation must be carried out each time the ignition is switched off.

## Reactivation of the interior volumetric and anti-tilt monitoring



- ☞ Press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system to deactivate the exterior perimeter monitoring.



- ☞ Press the locking button on the remote control or lock the vehicle using the Keyless Entry and Starting system to activate all the monitoring functions.



The indicator lamp in the button again flashes once per second.

## Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds. The monitoring functions remain active until the alarm has been triggered eleven times in succession.



When the vehicle is unlocked using the remote control or unlocked using the Keyless Entry and Starting system, rapid flashing of the indicator lamp in the button informs you that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

## Failure of the remote control

To deactivate the monitoring functions:

- ☞ Unlock the vehicle using the key in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops. The indicator lamp in the button switches off.

## Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key in the driver's door lock.

## Operating fault

When the ignition is switched on, fixed illumination of the indicator lamp in the button indicates a fault in the system. Have it checked by a PEUGEOT dealer or a qualified workshop.


## Automatic activation\*

2 minutes after the last door or the boot is closed, the system is activated automatically.

- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system.

\* According to country.

## Electric windows

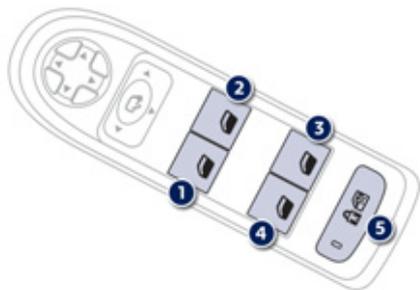

1. **Left hand front electric window switch.**
2. **Right hand front electric window switch.**
3. **Right hand rear electric window switch.**
4. **Left hand rear electric window switch.**
5. **Deactivating the rear electric window switches, locking the rear doors (child lock).**

### Manual operation

To open or close the window, press or pull the switch gently. The window stops as soon as the switch is released.

### Automatic operation (depending on version)

To open or close the window, press or pull switch fully: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window. The electric window switches remain operational for approximately one minute after the key has been removed from the ignition. Once this time has elapsed, the electric windows will not operate. To reactivate them, switch the ignition on again.

### Safety anti-pinch

When the window rises and meets an obstacle, it stops and immediately partially lowers again. In the event of unwanted opening of the window on closing, press the switch until the window opens completely, then pull the switch immediately until the window closes. Continue to hold the switch for approximately one second after the window has closed.

The safety anti-pinch function is not active during this operation.

### Deactivating the rear window controls

For the safety of your children, press switch 5 to prevent operation of the rear windows irrespective of their position.

The interior controls for the rear doors are also deactivated.

When the button is pressed down, the switches are deactivated. When the button is raised, the switches are active.

## Reinitialisation of the electric windows

Following reconnection of the battery, the safety anti-pinch function must be reinitialised. The safety anti-pinch function is not active during these operations:

- lower the window completely, then raise it, it will rise in steps of a few centimetres each time the switch is pressed. Repeat the operation until the window closes completely,
- continue to press the switch for at least one second after reaching this position, window closed.

**!** Always remove the key from the ignition when leaving the vehicle, even for a short time.


In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.

When operating the passenger electric window switches, the driver must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.


Be aware of children when operating the windows.

## Boot Opening

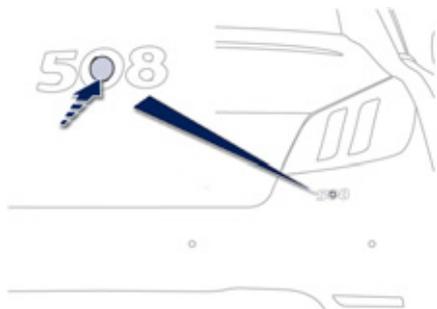


### Saloon

- ☞ After unlocking the vehicle completely using the remote control or the key, press this button.

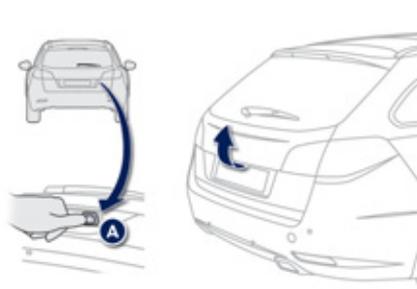

### SW

- ☞ After unlocking the vehicle completely using the remote control or the key, press at the top (on lever A), and raise the tailgate.

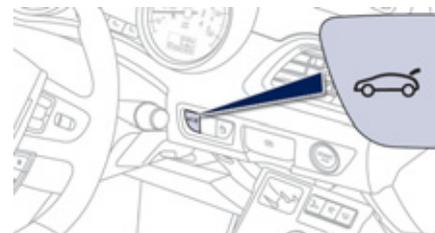

### From the inside

- ☞ Hold this button down until unlocking of the boot is heard.

## Closing


- ☞ Lower the tailgate using the interior grab handle.

If the tailgate is not closed correctly:



- **when the engine is running**, this warning lamp and a message in the instrument panel screen appear for a few seconds,
- **when the vehicle is moving** (speed above 6 mph (10 km/h)), this warning lamp and a message, accompanied by an audible signal, appear in the instrument panel screen for a few seconds.


## Motorised tailgate (SW) Opening

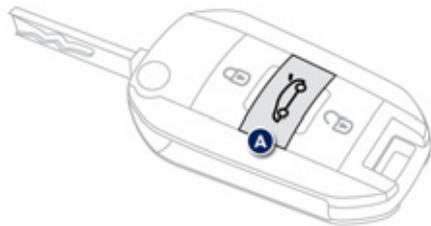

### Vehicle locked/deadlocked




- ☞ Press this button **A** on the remote control.

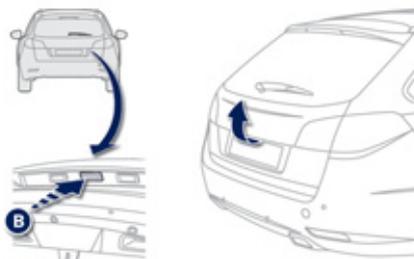

### Vehicle unlocked

- ☞ Press button **A** on the remote control, or press the push button **B** on the tailgate.

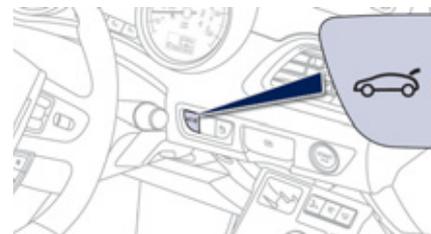

### From the inside

- ☞ Press this button to unlock and open the tailgate.

## Adjusting the opening height

During motorised opening, if clearance above the vehicle is limited, or to make it easier to reach the tailgate grip, stop it manually at the desired height. The height is stored and confirmed by an audible signal.

To change the height: during motorised opening, lift the tailgate to the desired height.

## Closing




- Press this button **C** to close the tailgate electrically.

Do not hinder closing of the tailgate: any obstacle to closing causes the tailgate to stop and rise a few centimetres automatically. To close the tailgate manually: move the tailgate slightly up then down to disengage it from its drive then lower it until closed.



**To avoid the risk of injury, ensure that no one is close to the rear of the vehicle when opening or closing the tailgate.**

## Stopping the opening or closing

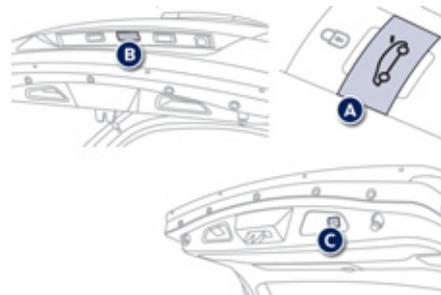


While electric opening or closing of the tailgate is in progress, you can stop its movement at any time:

- press the interior button or button **A** on the remote control or button **B** or **C** on the tailgate.

## Emergency release (Saloon and SW)

System for mechanical unlocking of the boot in the event of a battery or central locking fault.

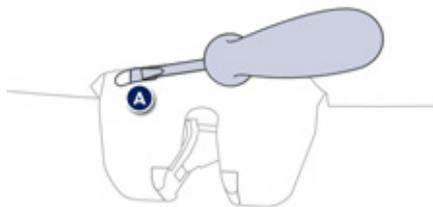

### "Boot open" warning

With the engine running or when the vehicle is moving, if the tailgate is not properly closed, a message accompanied by an audible signal (from 6 mph (10 km/h)) is displayed in the instrument panel screen.

### Unlocking


- ☞ Fold back the rear seats to gain access to the lock from inside the boot.
- ☞ Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.

## Panoramic sunroof (SW)

### Electric blind



Your vehicle is fitted with a tinted glass panoramic sunroof which increases the light and visibility in the passenger compartment. Its electric blind helps control the temperature and noise level in the passenger compartment.

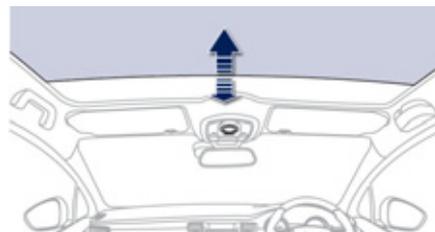

The blind is controlled electrically by a rotary opening dial.

### Opening

Turn the dial to the left (several possible opening settings).

### Closing

Return the dial to the initial position.

If the position of the blind does not agree with the position indicated by the dial, press the dial to open the blind to this position.

### Safety anti-pinch

If the blind encounters an obstacle during closing, it stops and partially opens again to the 2nd position.

If the blind fails to close at a second attempt, it may be necessary to force the closing of the blind using the reinitialisation procedure.

## Reinitialising the system

Following reconnection of the battery, or in the event of a malfunction in its operation, it may be necessary to reinitialise the system:

- ☞ turn the dial to the fully open position,
- ☞ wait until the blind is fully open,
- ☞ then immediately press the dial for at least 3 seconds,

If the blind opens on its own when closing, as soon as possible after the blind stops:

- put the dial in the fully closed position,
- press the dial,
- maintain pressure on the dial until the blind closes.


**The anti-pinch function is inoperative during these operations.**

**!** In the event of contact during operation of the blind, you must reverse its movement. To do this, turn the dial. When the driver operates the dial, they must ensure that nothing prevents the blind from closing correctly. The driver must ensure that the passengers use the blind correctly. Be aware of children during operation of the blind.

# Fuel tank

Capacity of the tank: approximately 72 litres (or 55 litres according to version).


## Opening

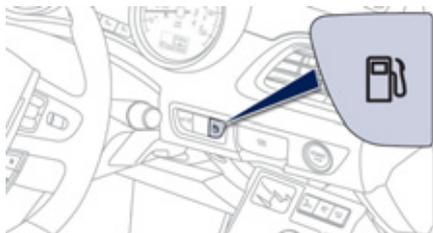

- Press the switch.  
This control remains active for a few minutes after switching off the ignition. If necessary, switch the ignition on again to reactivate it.

**!** With Stop & Start, never refuel with the system in STOP mode; you must switch off the ignition with the key.

## Refuelling

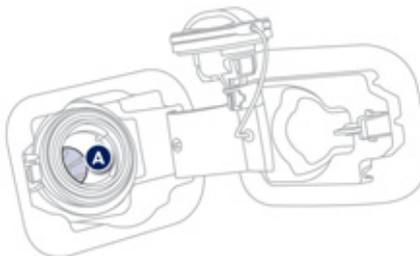

Additions of fuel must be of at least 5 litres to be registered by the fuel gauge. Opening the filler cap may result in an inrush of air. This vacuum is entirely normal and results from the sealing of the fuel system.

- ☞ Take care to select the pump that delivers the correct fuel type for your vehicle's engine (reminder on a label on the inside of the filler flap).
- ☞ Open the filler cap by turning it a 1/4 turn to the left.
- ☞ Remove the filler cap and hang it on its carrier (on the filler flap).

- ☞ Introduce the nozzle and push it in fully (pushing on the the metal non-return valve **A**).
- ☞ Fill the tank. Do not continue past the third cut-off of the nozzle, as this may cause malfunctions.
- ☞ Refit the filler cap turning it a 1/4 turn to the right.
- ☞ Push the filler flap to close it.

Your vehicle is fitted with a catalytic converter, a device which helps to reduce the level of harmful emissions in the exhaust gases.

**For petrol engines, you must use use of unleaded fuel only.**

The filler neck is narrower, admitting petrol nozzles only.

**!** If you have put in the wrong fuel for your vehicle, you must have have the tank drained and refilled with the correct fuel before you start the engine.

## Low fuel level



When the low fuel level in the tank is reached, this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the instrument

panel screen.

When it first comes on, around 7 litres of fuel remain in the tank.

You must refuel as soon as possible to avoid running out.

## Fuel supply cut-off


Your vehicle is equipped with a safety device which cuts off the fuel supply in the event of a collision.

## Diesel misfuel prevention

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

Located in the filler neck, the misfuel prevention device appears when the filler cap is removed.

### Operation

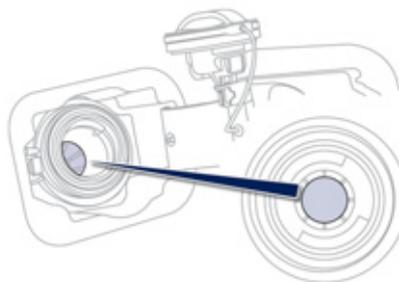

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

**Do not persist but introduce a Diesel filler nozzle.**



It is still possible to use a fuel can to fill the tank but this must be done slowly. In order to ensure a good flow of fuel, do not place the nozzle of the fuel can in direct contact with the flap of the misfuel prevention device.

### Travelling abroad

As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible.

Before travelling abroad, we recommend that you check with the PEUGEOT dealer network, whether your vehicle is suitable for the fuel pumps in the country in which you want to travel.

## Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

## Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester). The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



SP95  
E10



SP98



DIESEL

# Front seats

## Manual adjustments

### 1. Adjustments to the height and angle of the head restraint

To raise it, pull upwards.

To lower it, hold the button in and press on the head restraint (pushing to go past the stiff point of the button).

### 2. Adjustment of the backrest angle

Operate the control lever and adjust the position of the backrest to the front or to the rear.

### 3. Adjustment of the seat height

Raise or lower the control lever the number of times required to obtain the desired position.

### 4. Adjustment of the lumbar support

This system allows the height and depth of the lumbar support to be adjusted separately.

☞ Forwards or backwards to increase or decrease the lumbar support.


☞ Upwards or downwards to raise or lower the lumbar contact zone.

### 5. Forwards-backwards adjustment of the seat position

Lift the control bar and slide the seat forwards or backwards.



## Electric adjustments

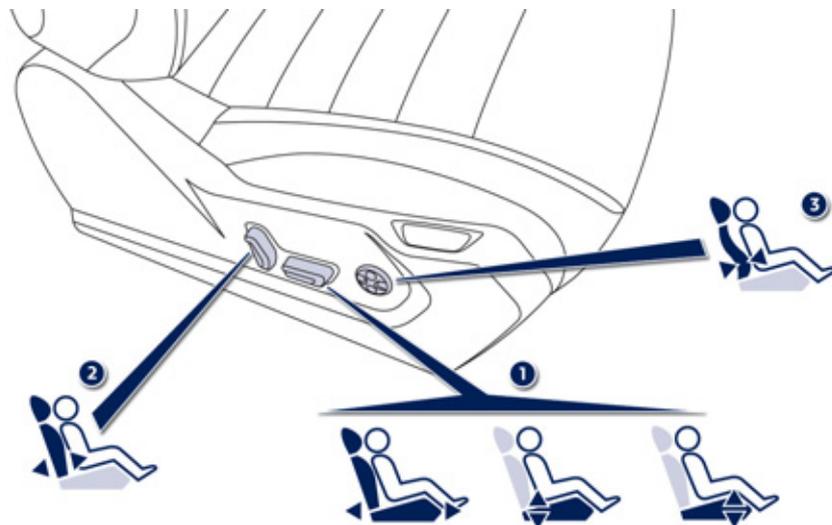

1. **Adjustment of the seat cushion angle and height, and forwards-backwards adjustment**
  - ☞ Raise or lower the front of the control to adjust the seat cushion angle.
  - ☞ Raise or lower the rear of the control to raise or lower the seat.
  - ☞ Simultaneously raise or lower the front and rear of the control in order to raise or lower the entire seat.
2. **Adjustment of the backrest angle**  
Move the control forwards or backwards to adjust the backrest angle.
3. **Adjustment of lumbar support**  
This function allows you to independently adjust the height and level of lumbar support.

Move the control:


- ☞ Forwards or backwards to increase or reduce the lumbar support.
- ☞ Upwards or downwards to raise or lower the lumbar support zone.

**i** Switch on the ignition or start the engine if the vehicle has gone into economy mode.

The electric functions of the driver's seat are active for about a minute after opening the front door. They are deactivated about a minute after switching off the ignition and in economy mode.

To reactivate them, switch on the ignition.

## Storing driving positions

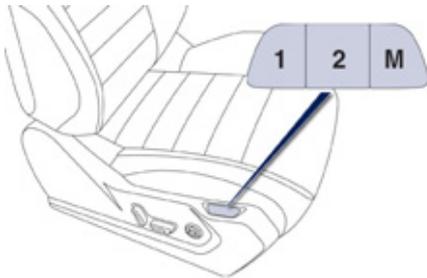

System which stores the electrical settings of the driver's seat and door mirrors as well as the head-up display settings. It enables you to store up to two positions using the buttons on the side of the driver's seat.

### Storing a position using buttons M/1/2

- ☞ Switch on the ignition.
- ☞ Adjust your seat, the door mirrors and the head-up display.
- ☞ Press button **M**, then press button **1** or **2** within four seconds.  
An audible signal indicates that the position has been stored.

Storing a new position cancels the previous position.

### Recalling a stored position

#### Ignition on or engine running

- ☞ Briefly press button **1** or **2** to recall the corresponding position.

An audible signal indicates the end of the adjustment.

You can interrupt the current movement by pressing button **M**, **1** or **2** or by using one of the seat controls.

A stored position cannot be recalled while driving.

Recalling stored positions is deactivated 45 seconds after switching off the ignition.

## Welcome function


The welcome function assists entry and leaving the vehicle.

After switching off the ignition and opening the driver's door, the seat moves back automatically and then stays in this position, ready for the next entry to the vehicle.

When switching on the ignition, the seat moves forward to the stored driving position.

When moving the seat, take care that no person or object hinders the automatic movement of the seat.

To activate or deactivate this function, contact a PEUGEOT or a qualified workshop.

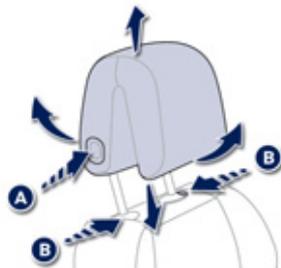

## Head restraint height and angle adjustment


- ☞ To lower the head restraint, press the lug **A** and, going beyond the stiff point, guide the head restraint downwards, then release the button at the desired position.
- ☞ To raise the head restraint, guide it upwards to the desired position.
- ☞ To adjust the angle of the head restraint, tilt its lower part forwards or rearwards.
- ☞ To remove the head restraint, press the two lugs **B** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back. Check that it has engaged by pulling it upwards.



The head restraint is fitted with a locking mechanism which prevents it from lowering; this is a safety device in case of impact.

**The adjustment is correct when the upper edge of the head restraint is level with the top of the head.**

Never drive with the head restraints removed; they must be in place and adjusted correctly.

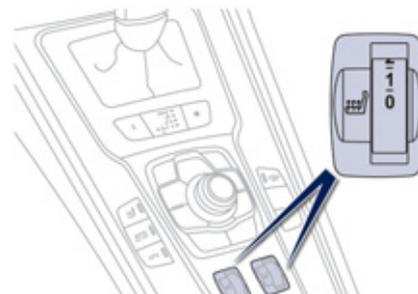


## Heated seats control

With the engine running, the front seats can be heated separately.

- ☞ Use the adjustment dial, placed on the centre console, to switch on and select the level of heating required:
  - 0:** Off.
  - 1:** Low.
  - 2:** Medium.
  - 3:** High.

## Massage function

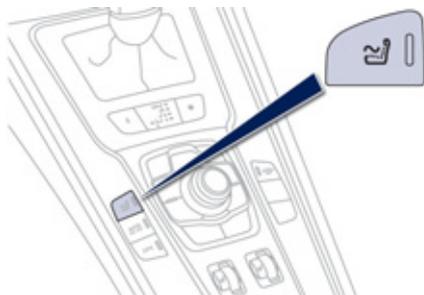

This function provides the driver with a back massage. It only operates when the engine is running as well as in STOP mode of the Stop & Start system.

### Activation



Press this button.

The warning lamp comes on and the massage function is activated for a period of 1 hour. During this time, massage is performed in cycles of 6 minutes (4 minutes of massage followed by 2 minutes break). In total, the system will perform 10 cycles. After one hour, the function is deactivated, the warning lamp goes off.

### Deactivation




You can deactivate the massage function at any time by pressing this button.

## Rear seats

Bench seat the left-hand (1/3) or right-hand (2/3) section of which can be folded to adapt the boot load space.

### Rear head restraints

These have a high position (comfort and safety) and a low position (rear visibility).

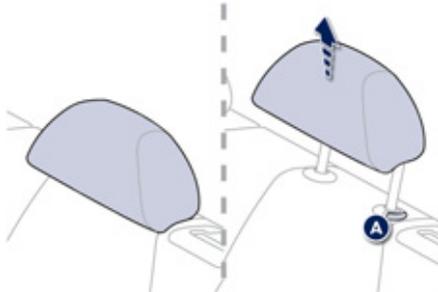

They can also be removed.  
To remove a head restraint:

- ☞ pull the head restraint fully upwards,
- ☞ then, press the lug **A**.

**!** Never drive with rear passengers when the head restraints are removed; the head restraints must be in place and in the high position.

### Folding the seat from the boot (SW)

Each section of the bench seat (1/3 or 2/3) has its own control to release the seat back and its seat cushion from the boot.




- ☞ Check that nothing is preventing the seat back from folding (head restraint, seat belts, ...),
- ☞ check also that no object on or under the seat could hinder its movement,




- ☞ pull the control from the boot and push the seat backrest.

## Folding the seat from the rear

Check that no object, either on or underneath the seat, could hinder its movement.

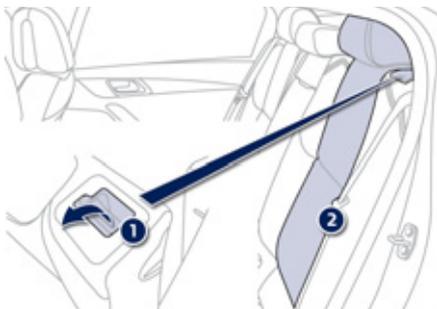


- ☞ Move the corresponding front seat forwards if necessary,
- ☞ check that the seat belt is positioned correctly on the side of the seat back,
- ☞ place the head restraints in the low position or remove them if necessary,

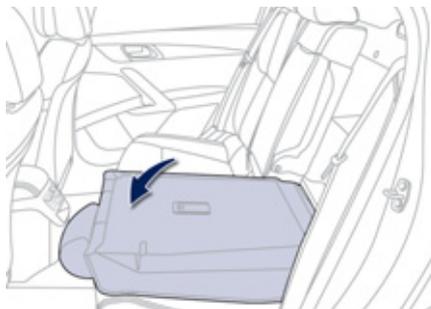

- ☞ pull the control 1 forwards to release the seat backrest 2 then fold it forwards.

## Returning the seat back to its original position


When returning the rear seat back to its original position, take care not to trap the seat belts and ensure that their buckles are positioned correctly.

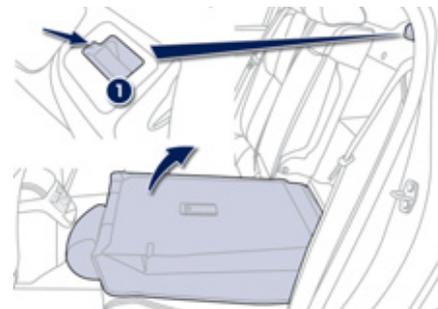

- ☞ Put the seat back in the upright position and secure it, the seat cushion also returns to its original position,
- ☞ check that the red indicator, located at the control 1, is no longer visible,
- ☞ refit the head restraints or put them back in place.

# Mirrors


## Door mirrors

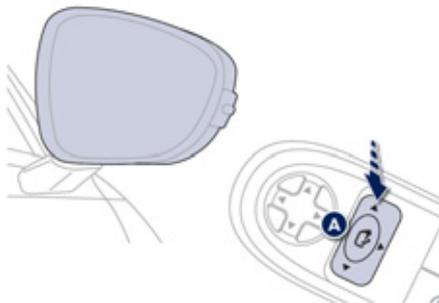

Each fitted with an adjustable mirror glass providing the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

### Demisting - Defrosting

Demisting-defrosting of the door mirrors operates with the engine running, by switching on the heated rear screen (refer to the "Rear screen demist-defrost" page).

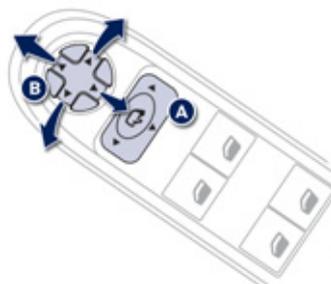

### Adjustment

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.

**i** The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.

### Folding

- Automatic: lock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

**i** If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.

### Unfolding

- Automatic: unlock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

**i** The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer. Fold the mirrors when putting your vehicle through an automatic car wash.

## Automatic tilting in reverse gear

System which provides a view of the ground during parking manoeuvres in reverse gear.



## Programming

- ☞ With the engine running, engage reverse gear.
- ☞ Select and adjust the left-hand and right-hand mirrors in succession.

The adjustment is stored immediately.

## Switching on

- ☞ With the engine running, engage reverse gear.
- ☞ Move control **A** to the right or to the left to select the corresponding mirror.

The glass of the mirror selected tilts downwards, in accordance with its programming.

## Switching off


- ☞ Exit reverse gear and wait ten seconds.
  - or
  - ☞ Return control **A** to the central position.
- The mirror glass returns to its initial position. The mirror glass also returns to its initial position:

- if the speed exceeds 6 mph (10 km/h),
- if the engine is switched off.

## Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass: this reduces the nuisance to the driver caused by the headlamps from following vehicles, low sun...

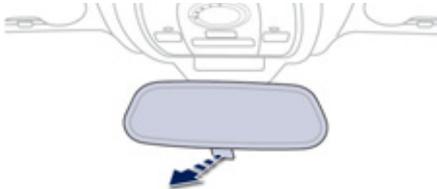

### Manual day/night model

#### Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

#### Day/night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.

**!** As a safety measure, the mirrors should be adjusted to reduce the "blind spot".




### Automatic day/night model

By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

**i** In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

## Steering wheel adjustment

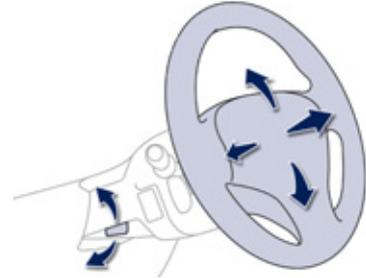


- ☞ **When stationary**, lower the control lever to release the steering wheel adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Pull the control lever to lock the steering wheel adjustment mechanism.

**!** As a safety precaution, these operations should only be carried out while the vehicle is stationary.

## Interior fittings


1. **Glove box**
2. **Storage**
3. **Retractable cup holder**  
Press the cover to open the cup holder
4. **Removable ashtray**  
Press the lid to open the ashtray.  
To empty it, pull it out by pulling it upwards.
5. **Coin holder**
6. **Storage with sliding cover**
7. **Front armrest**
8. **12 V accessory socket (120 W)**  
Observe the maximum power rating to  
avoid damaging your accessory
9. **Peugeot Connect USB**

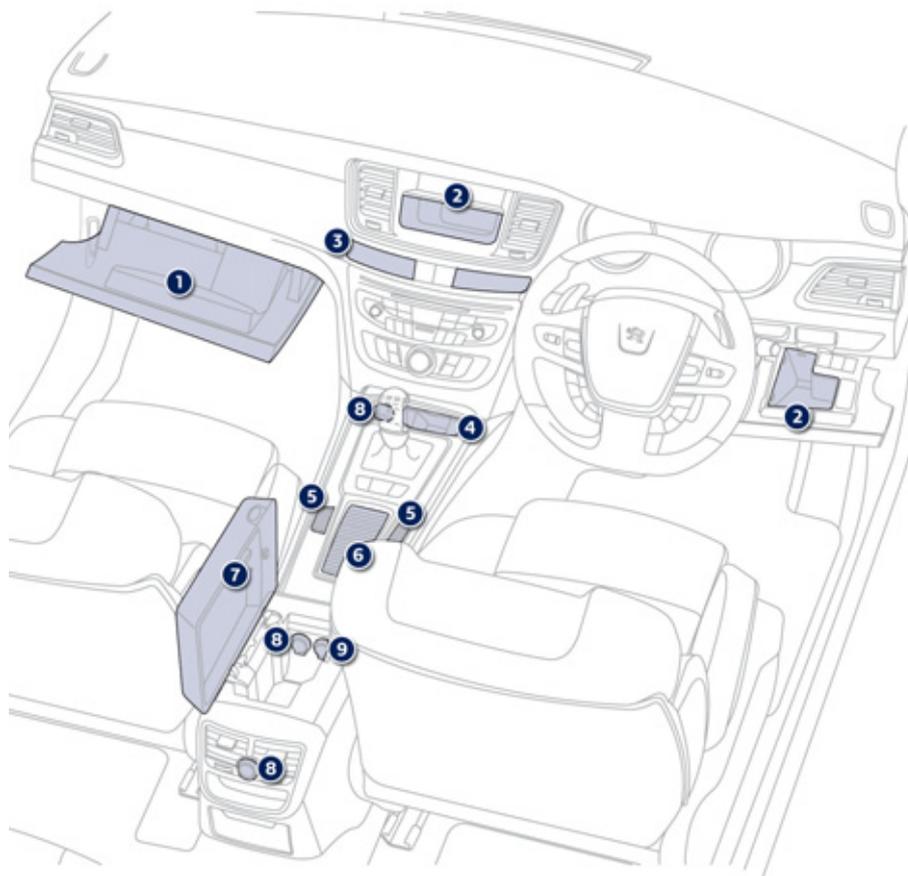

## Mats

Removable carpet protection.

### Fitting

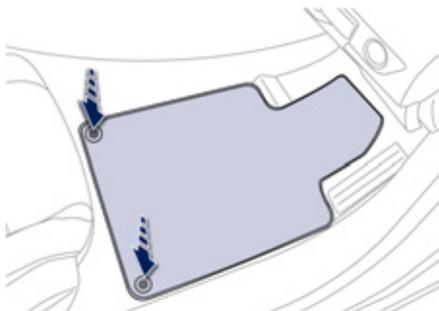

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

### Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

### Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.

- ! To avoid any risk of jamming of the pedals:
    - only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
    - never fit one mat on top of another.
- The use of mats not approved by PEUGEOT may interfere with access to the pedals and hinder the operation of the cruise control/speed limiter.

## Rear armrest



- ☞ Lower the rear armrest for a more comfortable position.

It has cup holders and also gives access to the ski flap.

## Ski flap

Device for storing and transporting long objects.



### Opening

- ☞ Lower the armrest.
- ☞ Press the flap opening control.
- ☞ Lower the flap.
- ☞ Load the objects from inside the boot.

## Peugeot Connect USB



This connection box, consisting of a JACK auxiliary socket and a USB port, is located in the front armrest (under the cover). It permits the connection of portable device, such as a digital audio player of the iPod® type or a USB memory stick. It reads the audio file formats (MP3, OGG, WMA, WAV, ...) which are transmitted to your audio equipment and played via the vehicle's speakers. You can manage these files using the steering mounted controls or the audio system control panel and display them in the instrument panel screen.

When the USB port is used, the portable device charges automatically.

**i** For more information on the use of this system, refer to the "Audio and Telematics" section.

## Boot fittings (Saloon)

**1. Retractable hooks**

**2. Storage trays**

With towing eye, a wheel chock and a temporary puncture repair kit (according to destination country and equipment).

**3. Stowing rings**



**4. Retaining straps**

**5. Boot lamp**

**6. Boot floor**

For access to the storage compartments or the spare wheel (according to destination country), raise the floor.



**7. Adjustable divider**

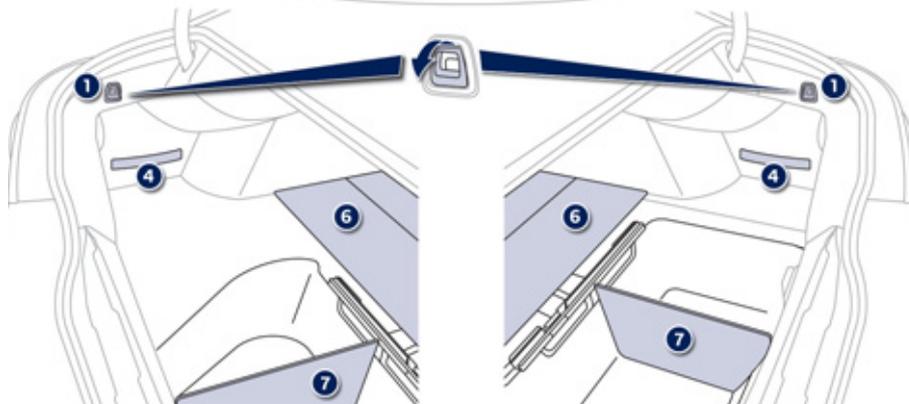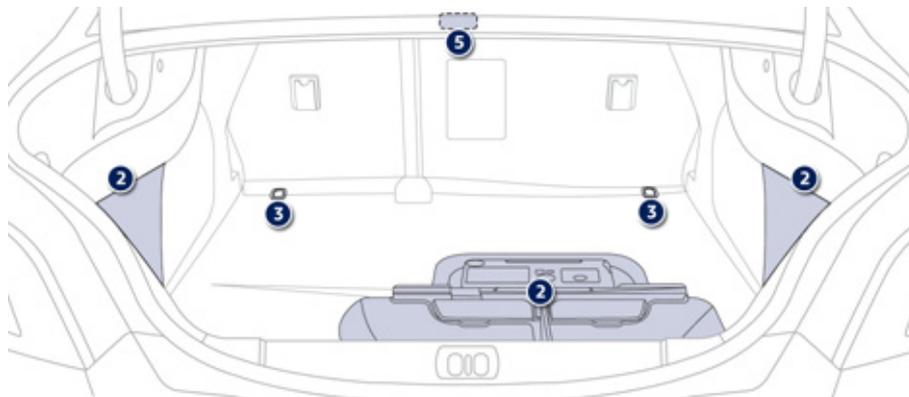

## Boot fittings (SW)


1. **Boot lamps**
2. **Rear seats folding controls**
3. **Retractable hooks**
4. **12 V accessory socket (120 W max)**
5. **Storage trays**  
With towing eye, a wheel chock and a temporary puncture repair kit (according to destination country and equipment).
6. **Stowing rings**
7. **Load space cover**  
(see following page).

8. **Boot floor**  
For access to the storage compartments or the spare wheel (according to destination country), position the floor vertically in its guide.

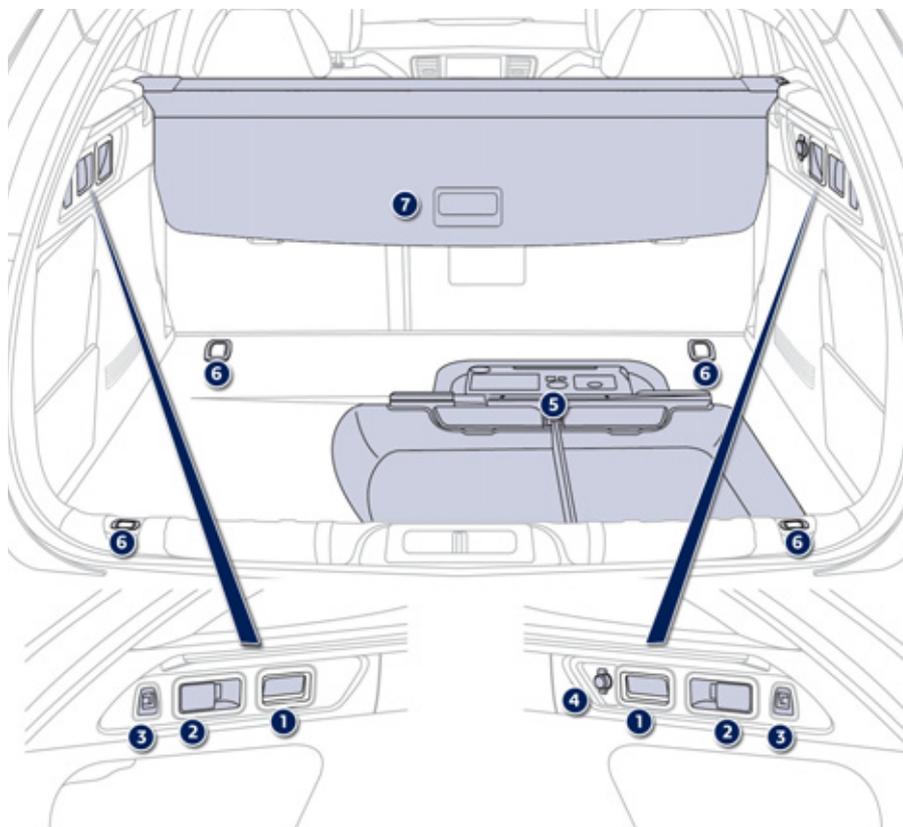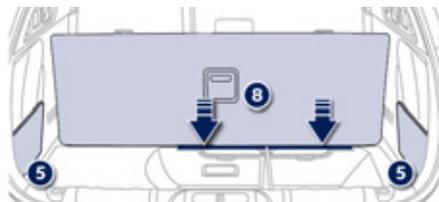


## Luggage cover (SW)

### To reel in

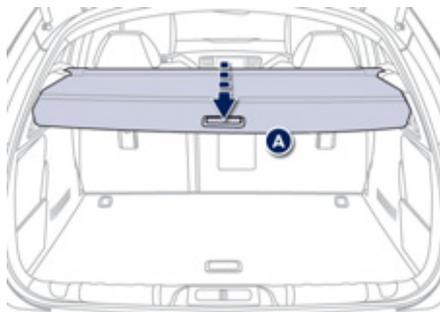


- ☞ Gently push on the (PRESS) handle, the luggage cover reels in automatically. The moving part **A** can be folded against the rear bench seat backrest.

### To remove

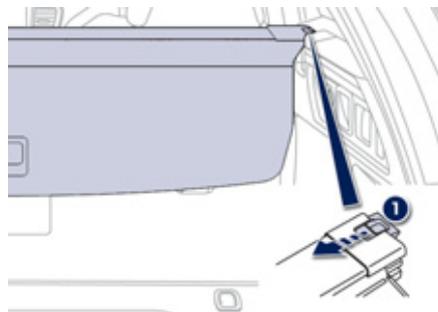

- ☞ Compress the control **1** and lift the luggage cover on the right then on the left to remove it.

### To install

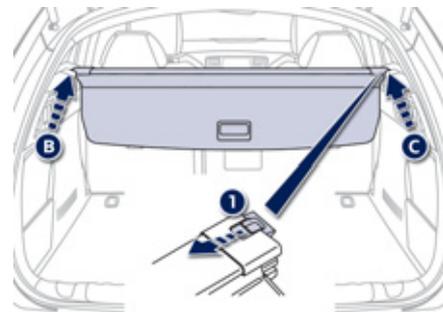


- ☞ Position the left-hand end of the luggage cover roller in its location **B** behind the rear bench seat.
- ☞ Compress the roller control **1** and put the roller in place in its location **C** on the right.
- ☞ Release the control to secure the luggage cover.
- ☞ Unreel it to its fastening on the rear pillar.

## Warning triangle (stowing)

The location for a folded triangle is in the inner trim panel of the boot lid.


**!** Before leaving your vehicle to set up and install the triangle, put on your high visibility vest.

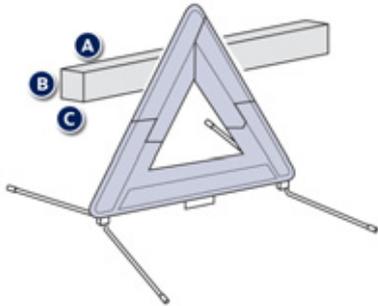

The dimensions of the triangle (once folded) or its storage box must be:


- **A:** length = **438** mm,
- **B:** height = **56** mm,
- **C:** width = **38** mm.

To use the triangle, refer to the manufacturer's instructions.

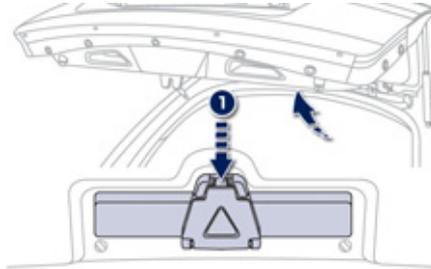

### Saloon

- ☞ Press the lug **1** and pull the assembly towards you.

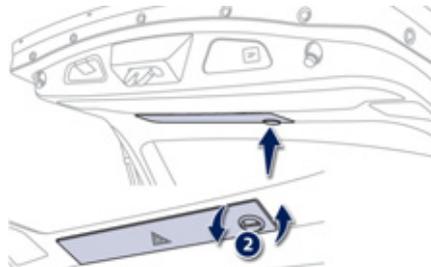

### SW

- ☞ Turn the knob **2** to remove the cover.
- ☞ Hold the cover and the triangle so that they do not fall.

## Placing the triangle in the road

- ☞ Place the triangle at a distance behind the vehicle, as shown in the table below, according to the type of road and the level of ambient light.

Distance from your vehicle (in metres)		
Road		Motorway
Day	Night	
50 m	80 m	150 m


- i** These are the internationally recognised values. Use the triangle in line with local driving regulations.

The triangle is available as an accessory, contact a PEUGEOT dealer or a qualified workshop.

## High load retaining net (SW)

Hooked onto the special upper and lower fixings, this allows the use of the entire loading volume up to the roof:


- behind the front seats (row 1) when the rear seats are folded.
- behind the rear seats (row 2).

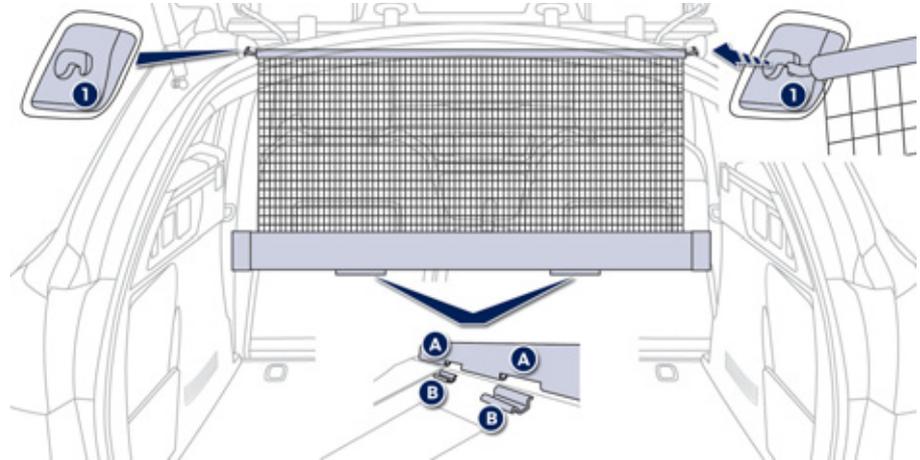

**i** Never reposition the rear seats if the net's roller is attached to the backs of the folded seats.

### Row 1

- ☞ position the net's roller above the two rails (located on the back of the folded rear seats),
- ☞ the two grooves **A** must be placed above the two rails **B**. Slide the two rails **B** in the grooves **A** and push the roller (lengthwise) from right to left to secure it,
- ☞ check that the net is hooked and tightened correctly,
- ☞ fold the rear seats,
- ☞ unroll the high load retaining net without stretching it,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing **1**,
- ☞ pull the net's metal bar to position the other end in the other upper fixing **1**.

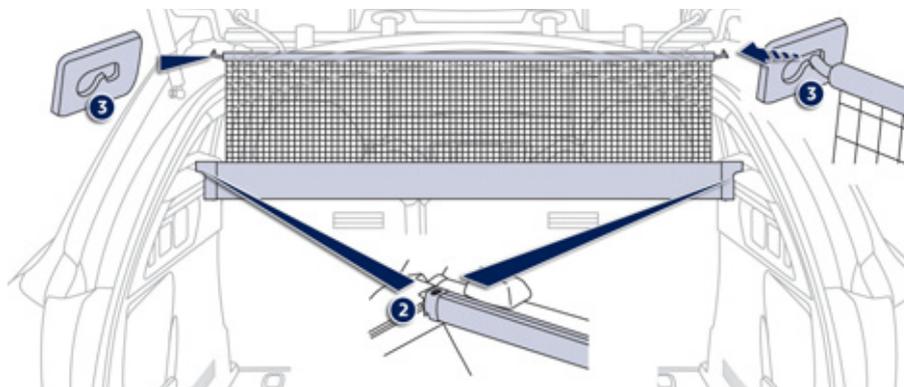

3

## Row 2

- ☞ reel in then remove the load space cover,
- ☞ position the left hand end of roller 2 in the load space cover support,
- ☞ position the right hand end of roller 2 in the load space cover support, then lock the position (red indicator),
- ☞ from the rear bench seat, unroll the high load retaining net by pushing to disengage the retaining hooks,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing 3,
- ☞ pull on the net's metal bar to position the other end in the other upper fixing 3,
- ☞ check that the net is hooked and tensioned correctly.

## Heating and Ventilation

System which creates and maintains good conditions of comfort and visibility in the vehicle's passenger compartment.

### Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

### Controls


The incoming air follows various routes depending on the controls selected by the driver, the front passenger and rear passengers, according to the level of equipment.

The temperature control enables you to obtain the level of comfort required by mixing the air of the various circuits.

The air distribution control enables you to select the air vents used in the passenger compartment by the combined use of the associated buttons.

The air flow control enables you to increase or reduce the speed of the ventilation fan.

These controls are grouped together on control panel **A** on the centre console.

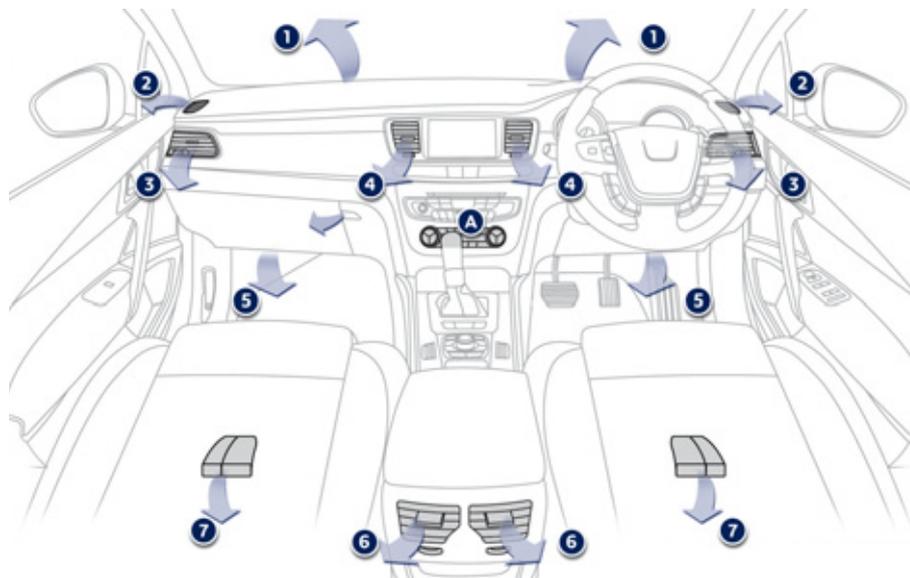

### Air distribution

1. Windscreen demisting/defrosting vents.
2. Front side window demisting/defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Adjustable air vents for the rear passengers.
7. Air outlets to the rear footwells.

## Recommendations for ventilation and air conditioning


- i** In order for these systems to be fully effective, follow the operation and maintenance guidelines below:
- ☞ If the interior temperature remains very high after the vehicle has been parked in the sun for a considerable time, first ventilate the passenger compartment for a few minutes. Place the air flow control at a sufficient level to provide an adequate renewal of air in the passenger compartment.
  - ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
  - ☞ Use in preference the intake of exterior air as prolonged use of the air recirculation may cause misting of the windows and side windows.
  - ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the automatic air conditioning system.
  - ☞ Operate the air conditioning system for 5 to 10 minutes, once or twice a month to keep it in good working order.
  - ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly (refer to the "Checks" section).  
We recommend the use of a combined passenger compartment filter. Thanks to its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).
  - ☞ The air conditioning uses power from the engine while operating. This results in an increase in the vehicle's fuel consumption.  
When towing at or near maximum capacity or on steep slopes in high ambient temperatures, switching off the air conditioning saves engine power and so improves towing capacity. Condensation created by the air conditioning results in a discharge of water under the vehicle when stationary, which is perfectly normal.
  - ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly.
  - ☞ If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.



The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

# Manual air conditioning

The air conditioning system operates with the engine running.

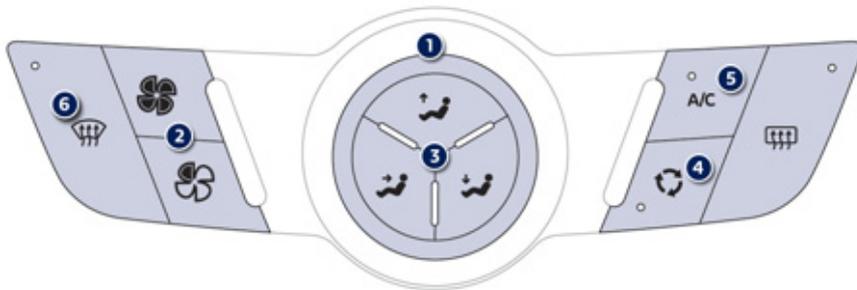

## 1. Temperature adjustment



☞ Turn the dial from left (cold) to right (hot) to adjust the temperature to your requirements.

## 2. Air flow adjustment



☞ Press the "full fan" button to increase the air flow.

According to the value selected, the associated line of LEDs fills progressively.



☞ Press the "empty fan" button to reduce the air flow.

## 3. Air distribution adjustment

☞ press the corresponding button for:



Windscreen and side windows.



Central and side vents.



Footwells.



Depending on your requirements, you can combine two distribution buttons or select the three distribution modes simultaneously.

#### 4. Air intake/Air recirculation

The intake of exterior air prevents the formation of mist on the windscreen and side windows. The recirculation of interior air isolates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the air quality and the formation of mist.



- ☞ Press this button to recirculate the interior air. The indicator lamp comes on to confirm this.



- ☞ Press the button again to permit the intake of exterior air. The indicator lamp goes off to confirm this.

#### 5. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3 °C.

#### Switching on

- ☞ Press the "A/C" button, the associated green indicator lamp comes on.

**The air conditioning does not operate when the air flow adjustment is set to off.**

#### Switching off

- ☞ Press the "A/C" button again, the associated green indicator lamp switches off.

Switching off may result in some discomfort (humidity, misting).

#### 6. Automatic visibility programme




See "Front demisting - Defrosting".

# Dual-zone digital air conditioning

The air conditioning system operates when the engine is running.

## Automatic operation

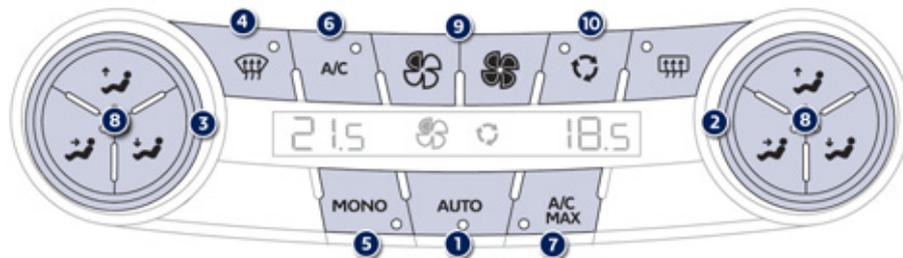

### 1. Automatic comfort programme

**AUTO** ☞ Press this "AUTO" button. The indicator lamp comes on.

We recommend that you use this mode. It automatically adjusts all settings to provide optimum operation for the comfort level chosen: passenger compartment temperature, air flow, air distribution and air recirculation.

This system is designed to operate effectively in all seasons, with the windows closed.

**i** When the engine is cold, to prevent too great a distribution of cold air, the air flow will reach its optimum level gradually. In cold weather, it favours the distribution of warm air to the windscreen, side windows and footwells only.

### 2 - 3. Driver-passenger side adjustment

The driver and front passenger can each adjust the temperature to their requirements. The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



☞ Turn control **2** or **3** to the left (blue) or to the right (red) respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

It is recommended that the difference between left and right should not be greater 3.

**i** On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required. The system corrects the difference in temperature automatically and as quickly as possible.

#### 4. Automatic visibility programme



See "Front demisting-defrosting".

**i** With Stop & Start, when demisting has been activated, the STOP mode is not available.

#### 5. Mono-zone/Dual-zone



☞ Press this button to equalise the comfort value on the passenger's side with that on the driver's side (mono-zone). The indicator lamp in the button comes on.

#### 6. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It allows you:

- in summer, to lower the temperature,
- in winter, above 3 °C, to improve demisting performance.

##### Switching on

☞ Press the "A/C" button, the associated green indicator lamp comes on.

**The air conditioning does not operate when the air flow control is set to off.**

##### Switching off

☞ Press the "A/C" button again, the associated green indicator lamp goes off.

Switching off the air conditioning may result in some discomfort (humidity, misting).

#### 7. Maximum air conditioning



If you want to temporarily refresh the air in the passenger compartment, press this button and "LO" is displayed.

To return to the previous settings, press the button again.

#### Manual operation

If you wish, you can change one of settings provided by the system. The other functions will still be controlled automatically.

☞ Pressing the "AUTO" button returns the system to completely automatic operation.



For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

☞ Turn control **2** or **3** to the left until "LO" is displayed or to the right until "HI" is displayed.

## 8. Air distribution adjustment

☞ Press the corresponding button for:



Windscreen and side windows.



Centre and side vents.



Footwells.



To suit your requirements, you can combine two distribution buttons or select the three distribution modes simultaneously.

## 9. Air flow adjustment



☞ Press this **"full fan"** button to increase the air flow.

The air flow symbol, the fan, fills progressively according to the value requested.



☞ Press **"empty fan"** button to reduce the air flow.

## Switching the system off



☞ Press this **"empty fan"** air flow button until the fan symbol disappears and **"- -"** appears.

This action switches off all of the functions of the air conditioning system. Temperature related comfort is no longer guaranteed but a slight flow of air, due to the forward movement of the vehicle, can still be felt.

## 10. Air intake/Air recirculation



☞ Press this button for recirculation of the interior air. The indicator lamp on the button comes on.

Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke. It is activated automatically when operating the screenwash.

☞ As soon as possible, press this button again to permit the intake of outside air and prevent the formation of condensation. The indicator lamp in the button goes off.




Avoid driving for long periods with the system off (risk of condensation and deterioration of the air quality). Pressing the **"full fan"** button reactivates the system with the values in use at the time it was switched off.

# Quad-zone digital air conditioning

The air conditioning system operates when the engine is running.

## Automatic operation

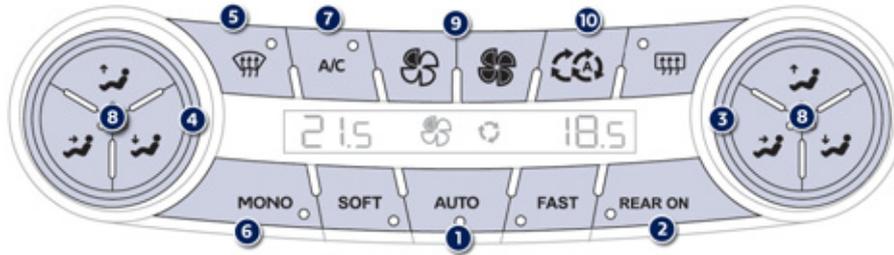

### 1. Automatic comfort programme

The Soft/Auto/Fast modes allow the driver and front seat passenger to select their desired comfort settings for the passenger compartment:

#### SOFT

Favours optimum gentle and silent operation by limiting the air flow.

#### AUTO

Offers the best compromise between thermal comfort and silence of operation.

#### FAST

Favours dynamic and effective air flow.

### 2. Activating/deactivating the rear air conditioning

#### REAR ON

Press this button to deactivate the rear air conditioning and lock the system. A padlock appears in the LCD screen. When the rear system is reactivated, automatic mode is selected with the last temperature settings used.

### 3 - 4. Driver-passenger side adjustment

The driver and front passenger can each adjust the temperature to their requirements.

The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



Turn control **3** or **4** to the left (blue) or to the right (red) respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

It is recommended that the difference between left and right should not be greater 3.

# 3

**i** On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required. The system corrects the difference in temperature automatically and as quickly as possible.

## 5. Automatic visibility programme



See "Front demisting-defrosting".

**i** With Stop & Start, when demisting has been activated, the STOP mode is not available.

## 6. Mono-zone/Quad-zone



Press this button to apply the driver's comfort setting value to the front and rear passengers (mono-zone). The indicator lamp on the button comes on.

## 7. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed. It allows you:

- in summer, to lower the temperature,
- in winter, above 3 °C, to improve demisting performance.

### Switching on

- ☞ Press the "A/C" button, the associated green indicator lamp comes on.

**The air conditioning does not operate when the air flow control is set to off.**

### Switching off

- ☞ Press the "A/C" button again, the associated green indicator lamp goes off. Switching off the air conditioning may result in some discomfort (humidity, misting).

## Manual operation

If you wish, you can change one of settings provided by the system. The other functions will still be controlled automatically. Press one of the Soft/Auto/Fast buttons to return to fully automatic operation.

**i** For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

- ☞ Turn the dial **3** or **4** to the left until "LO" is displayed or to the right until "HI" is displayed.

## 8. Air distribution adjustment

☞ Press the corresponding button for:



Windscreen and side windows.



Centre and side vents.



Footwells.



To suit your requirements, you can combine two distribution buttons or select the three distribution modes simultaneously.

## 9. Air flow adjustment



☞ Press this **"full fan"** button to increase the air flow.

The symbol for air flow, the fan, fills progressively according to the value requested.



☞ Press **"empty fan"** button to reduce the air flow.

## Switching the system off



☞ Press this **"empty fan"** air flow button until the fan symbol disappears and "- -" appears.

This action switches off all of the functions of the air conditioning system. Temperature related comfort is no longer assured but a slight flow of air, due to the forward movement of the vehicle, can still be felt. Avoid driving for long periods with the system off (risk of condensation and deterioration of the air quality). Pressing the **"full fan"** button reactivates the system with the values in use at the time it was switched off.

## 10. Air intake/Air recirculation



**Automatic air intake mode**  
It is activated by default with automatic comfort regulation.


Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke. It is activated automatically when operating the screenwash. It is inactive when the ambient temperature is below 5 °C to guard against the risk of misting in the vehicle.

☞ As soon as possible, press this button again to permit the intake of outside air and prevent the formation of condensation. The indicator lamp in the button goes off.

## Adjusting the rear passenger comfort level

The rear air conditioning controls only operate if, from the front:

- the **REAR** button is activated,
- the automatic visibility programme is not activated.

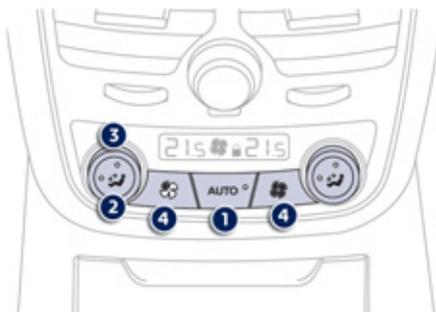

### 1. Automatic comfort programme

**AUTO**

- ☞ Press the "AUTO" button. The lamp in the button comes on.

We recommend that you use this mode. It automatically adjusts all settings to provide optimum operation for the comfort level chosen: passenger compartment temperature, air flow and air distribution.

This system is designed to operate effectively in all seasons, with the windows closed.

### 2. Air distribution adjustment

Press the corresponding button successively for:



- Footwell and centre vent.



- Centre vent.



- Automatic control of air distribution.

### 3. Temperature adjustment, left and right

The left and rear passengers can each adjust their temperature setting independently.

The value indicated in the screen is a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



- ☞ Turn the dial to the left to lower the value and to the right to raise it.

A setting around 21 provides an optimum level of comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

It is recommended that the difference between left and right should not be greater 3.

Ensure that the air grilles and vents on the floor are not obstructed.

#### 4. Air flow adjustment



- ☞ Press this "full fan" button to increase the air flow.

The air flow symbol, the fan, fills progressively as the fan speed increases.



- ☞ Press this "empty fan" button to reduce the air flow.

#### Deactivating the system



- ☞ Press the "empty fan" air flow button until the fan disappears and "- -" appears.

This action stops all of the functions of the air conditioning system.

Thermal comfort is no longer controlled. However, a slight air flow may still be felt, resulting from the forward movement of the vehicle.

## Front Demist - Defrost

### With manual air conditioning



- ☞ Select this programme to demist or defrost the windscreen and side windows as quickly as possible.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreen and side windows. Adjust the temperature control to quickly demist/defrost the windows.

To switch it off, press the "visibility" button again, the warning lamp in the button goes off and the system reverts to the previous settings.

### With dual-zone and quad-zone digital air conditioning

#### Automatic visibility programme



- ☞ Select this programme to demist or defrost the windscreen and side windows as quickly as possible.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreen and side windows. With the quad-zone digital air conditioning, pressing this button deactivates and locks the rear air conditioning.

- ☞ To stop the programme, press either the "visibility" button again or "AUTO", the warning lamp on the button goes off and the warning lamp in the "AUTO" button comes on.

The system reverts to the previous settings.

- i** With Stop & Start, when demisting has been activated, the STOP mode is not available.

## Rear screen demist - defrost



The control button is located on the air conditioning system control panel.

### Switching on

The rear screen demisting/defrosting can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and (depending on version) the door mirrors. The indicator lamp associated with the button comes on.

### Switching off


The demisting/defrosting switches off automatically to prevent an excessive consumption of current.

- ☞ It is possible to stop the demisting/defrosting operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button goes off.



- ☞ Switch off the demisting/defrosting of the rear screen and door mirrors as soon as appropriate, as lower current consumption results in reduced fuel consumption.

# Programmable Heating/Ventilation

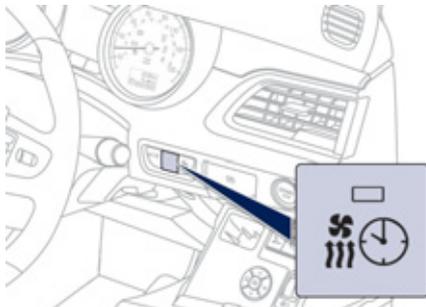

## Programmable heating mode

This is an additional and separate system which heats the engine hot water circuit to improve defrosting and to preheat the passenger compartment.




This indicator lamp comes on if the system is programmed in preheating mode.


## Programmable Ventilation mode

This mode allows ventilation of the passenger compartment to improve the temperature experienced on entering the vehicle in summer.


## Programming

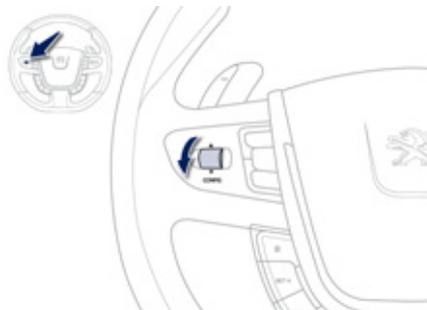


Press the left hand steering mounted thumbwheel for access to the menu, then navigate:

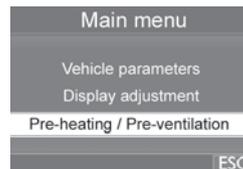

- ☞ In the "Main menu", select "Pre-heating/Pre-ventilation",

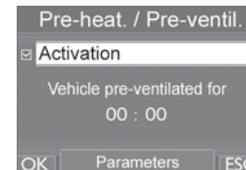

- ☞ Select "Activation" and if necessary for programming, "Parameters",

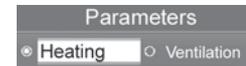

- ☞ Select "Heating" to preheat the engine or passenger compartment or "Ventilation" to ventilate the passenger compartment,



- ☞ Select:
  - immediate to start the heating ("OK" once),
  - the first clock to programme/store a starting time,
  - the second clock to programme/store another starting time.

**i** Using these two clocks and according to season you can, for example, select one or the other starting time. A message in the instrument panel screen confirms your choice.


## Starting-switching off the engine

With a **manual gearbox**, put the gear lever in neutral.

With an **electronic gear control gearbox**, put the gear lever in **N**.

With an **automatic gearbox**, put the gear lever in **P** or **N**.

### Starting using the key

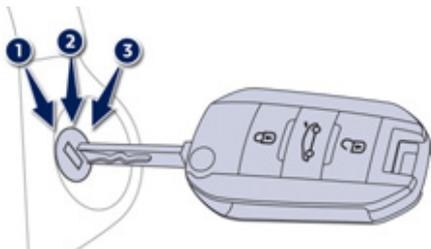

- ☞ Insert the key in the ignition switch.
- ☞ Turn the key fully towards the dashboard to position **3 (Starting)**.
- ☞ When the engine starts, release the key.


### Switching off using the key

- ☞ Immobilise the vehicle.
- ☞ Turn the key fully towards you to position **1 (Stop)**.
- ☞ Remove the key from the ignition switch.

#### **i** Key left in the ignition

If the key is left in the ignition switch, there is an audible signal on opening the driver's door.

### Starting using the electronic key

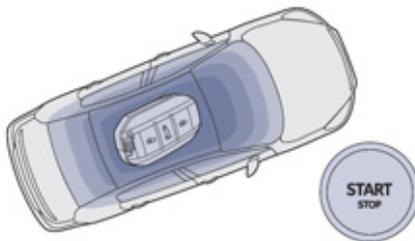

- ☞ With the electronic key inside the vehicle, press the brake pedal for vehicles with automatic or electronic gear control gearbox, or declutch fully for vehicles with a manual gearbox.
- ☞ Press the **"START/STOP"** button.



**i** If one of the starting conditions is not met, a reminder message appears in the instrument panel screen. In some circumstances, it is necessary to turn the steering wheel slightly while pressing the "START/STOP" button to assist unlocking of the steering; a message warns you when this is needed.

### Switching off using the electronic key

- ☞ Immobilise the vehicle.



- ☞ With the electronic key inside the vehicle, press the **"START/STOP"** button.

The engine stops and the steering column is locked.

**i** If the vehicle is not immobilised, the engine will not stop.

### Accessory position

With the electronic key inside the vehicle, press the "START/STOP" button, with no action on the pedals, to switch the ignition on or off and so activate accessories.

**!** For Diesel vehicles, in very cold weather the engine will not start until the preheater warning lamp has gone off.


# Anti-theft protection

## Electronic engine immobiliser

The keys contain an electronic chip which has a secret code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.

In the event of a malfunction, you are informed by a message in the instrument panel screen. In this case, your vehicle does not start; contact a PEUGEOT dealer or a qualified workshop as soon as possible.

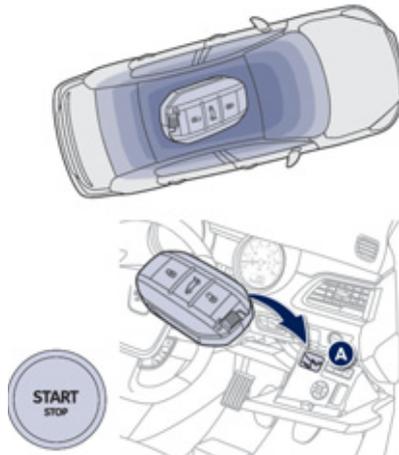


### Emergency starting with the electronic key

When the electronic key is in the defined zone and your vehicle does not start after pressing the "START/STOP" button:

- ☞ Open the housing below the "START/STOP" button.
- ☞ Insert the electronic key in the location **A**.
- ☞ Press the "START/STOP" button.



Once the engine has started, you can remove the electronic key and close the housing.

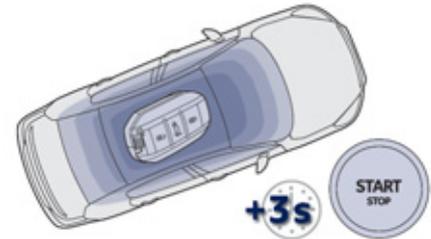

### Emergency switch-off using the electronic key

In the event of an emergency only, the engine can be switched off without conditions. To do this, press and hold the "START/STOP" button for about 3 seconds.

In this case the steering column locks as soon as the vehicle stops.

if the electronic key is no longer in the defined zone when you request switching off the engine, a message appears in the instrument panel.

- ☞ Press and hold the "START/STOP" button for about 3 seconds if you want to force switching off the engine (note that restarting will not be possible without the key).

# Electric parking brake



The electric parking brake combines 2 operating modes:

- **Automatic Application/Release**  
Application is automatic when the engine stops, release is automatic on use of the accelerator (this mode is activated by default),
- **Manual Application/Release**  
Manual application of the parking brake is done by pulling control lever **A**. Manual release is done by pushing and releasing the control lever, while pressing the brake pedal.

When the driver's door is opened, there is an audible signal and a message is displayed if the brake is not applied.

## Programming the mode

Depending on the country of sale of the vehicle, the automatic application when the engine is switched off and the automatic release when you press the accelerator can be deactivated.



Activation/deactivation is done via the menu in the instrument panel screen.

The parking brake is then applied and released manually.



If this warning lamp comes on in the instrument panel, the automatic mode is deactivated.



It is recommended that you do not apply the parking brake in very cold conditions (ice) and during towing (breakdown, caravan...). Deactivate the automatic functions and release the parking brake manually.

## Manual application

With the vehicle stationary, to apply the parking brake whether the engine is running or off, **pull** control lever **A**.

The application of the parking brake is confirmed by:

- lighting of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
- display of the message "Handbrake on".



When the driver's door is opened with the engine running, there is an audible signal and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.



Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and the control lever **A** are on, not flashing.

## Manual release



With the ignition on or the engine running, to release the parking brake, **press** the **brake pedal**, **pull** then release control lever **A**.

The full release of the parking brake is confirmed by:

- extinction of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
- display of the message "Handbrake off".

If you pull the control lever **A** without pressing the brake pedal, the parking brake will not be released and a message appears in the instrument panel.

## Maximum application

If necessary, you can utilise **maximum application** of the parking brake. It is obtained by means of a **long pull** on control lever **A**, until you see the message "Parking brake applied fully" and an audible signal is heard.

### Maximum application is essential:

- in the case of a vehicle towing a caravan or a trailer, if the automatic functions are activated but you are applying the parking brake manually,
- when the slope you are parked on may vary (e.g. on a ferry, on a lorry, during towing).

**i** In the case of towing, a loaded vehicle or parking on a gradient, make a maximum application of the parking brake then turn the front wheels towards the pavement and engage a gear when you park.  
After a maximum application, the release time will be longer.

## Automatic application, engine off

With the vehicle stationary, the parking brake **is automatically applied when the engine is switched off**.

The application of the parking brake is confirmed by:

- illumination of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
- display of the message "Handbrake on".

**!** Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and in the control lever **A** are on fixed (not flashing). Never leave a child alone inside the vehicle with the ignition on, as they could release the parking brake.

## Automatic release

The electric parking brake **releases automatically and progressively** when you press the accelerator:

- ☞ **Manual gearbox:** press down fully on the clutch pedal, engage first gear or reverse, press on the accelerator pedal and move off.
- ☞ **Electronic gear control gearbox:** select position **A**, **M** or **R** then press on the accelerator pedal.
- ☞ **Automatic gearbox:** select position **D**, **M** or **R** then press on the accelerator pedal.

Full release of the parking brake is confirmed by:

-  - the braking warning lamp and of the **P** warning lamp in the control lever **A** going off,
-  - display of the message "Handbrake off".

**!** When stationary, with the engine running, do not press the accelerator pedal unnecessarily, as you may release the parking brake.

## Immobilising the vehicle, engine running

With the engine running and the vehicle stationary, in order to immobilise the vehicle it is essential to **manually** apply the parking brake by **pulling** control lever **A**.

The application of the parking brake is confirmed by:

-  - illumination of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
-  - display of the message "Handbrake on".

When the driver's door is opened, a loud beep is heard and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.

**!** Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and the control lever **A** are on fixed, not flashing.

## Particular situations

In certain situations (e.g. starting the engine), the parking brake can automatically alter its force. This is normal operation.

To advance your vehicle a few centimetres without starting the engine, but with the ignition on, press on the brake pedal and release the parking brake **by pushing** then **releasing** control lever **A**. The full release of the parking brake is confirmed by the warning lamps in the control lever **A** and in the instrument panel going off and display of the message "Handbrake off".

If a parking brake fault occurs **while applied** or if the battery runs flat, an emergency release is always possible.

In order to ensure correct operation and so your safety, the number of successive application/release operations of the parking brake is limited to eight.

In the event of abuse, you are alerted by a message "Parking brake faulty" and a warning lamp flashes.

## Emergency braking



In the event of a failure of the main service brake or in an exceptional situation (e.g. driver taken ill, under instruction, etc) a continuous pull on the control lever **A** will stop the vehicle. The electronic stability programme (ESP) provides stability during emergency braking. If the emergency braking malfunctions, the message "Parking brake control faulty" will be displayed.




If a failure of the ESP system is signalled by the lighting of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull-release" actions on the control lever **A**.

## Emergency parking brake release

In the event of fault with the electric parking brake or a battery failure, an emergency mechanical control can be used to **manually release** the parking brake.

- ☞ Immobilise the vehicle (or chock it if the brake pedal has not been released), with the engine running, by engaging first gear (manual gearbox, position **P** (automatic gearbox) or **M** or **R** (electronic gear control gearbox).
- ☞ Switch of the engine, but leave the ignition on. If you are unable to immobilise the vehicle, do not operate this control and contact a PEUGEOT dealer or a qualified workshop as soon as possible.

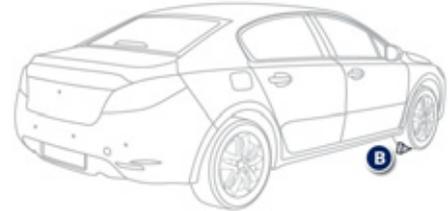


- ☞ if your vehicle has one, take out the vehicle chock **B**, located under the boot floor.
- ☞ On a slope, immobilise the vehicle by placing a chock in front or behind one of the front wheels, opposing the slope. On level ground, immobilise the vehicle by placing a chock in front or behind one of the front wheels.



The emergency braking must only be used in exceptional circumstances.



- ☞ Pass your fingers under the edge of the gaiter below the gear lever gate.
- ☞ Unclip the gate by spreading the tongues (located below) then pull away the assembly of selector gate and gaiter.

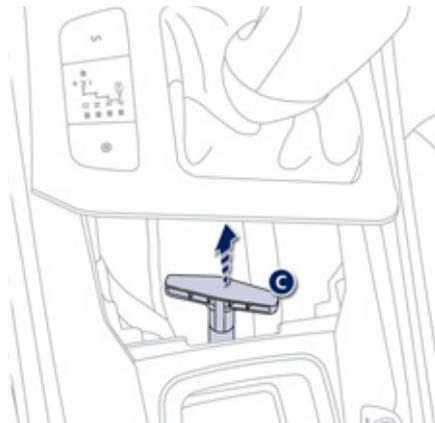

- ☞ Turn the selector gate/gaiter assembly for access to the lever.
- ☞ Pull hard on the control **C** to release the parking brake. A loud knock confirms the release of the brake.
- ☞ Take care to refit the control in its housing.
- ☞ Replace the selector gate/gaiter assembly.

**!** With an emergency release, immobilisation of the vehicle is no longer be assured once the mechanical release has started and the mechanical control cannot be used to apply the parking brake again.

Do not carry out any action on lever **A**, or stop/start the engine while the release control is engaged.

Have it checked by a PEUGEOT dealer or a qualified workshop.

The control **C** cannot be used to apply the parking brake.

To re-engage the electric parking brake (after correction of the fault or battery failure), make a long pull on the control lever **A** until the parking brake warning lamp (!) flashes in the instrument panel, then make a second long pull until this warning lamp comes on fixed (not flashing).


## Operating faults

If the electric parking brake fault warning lamp comes on together with one or more of the warning lamps presented in these tables, place the vehicle in a safe condition (on level ground, gear engaged) and contact a PEUGEOT dealer or a qualified workshop without delay.

Situations	Consequences
Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:   <b>SERVICE</b>	<ul style="list-style-type: none"> <li>- The automatic functions are deactivated.</li> <li>- Hill start assist is not available.</li> <li>- The electric parking brake can only be used manually.</li> </ul>
Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:  <b>SERVICE</b>	<ul style="list-style-type: none"> <li>- Manual release of the electric parking brake is only available by pressing the accelerator pedal and releasing the control lever.</li> <li>- Hill start assist is not available.</li> <li>- The automatic functions and the manual application are still available.</li> </ul>
Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:    <b>SERVICE</b>	<ul style="list-style-type: none"> <li>- The automatic functions are deactivated.</li> <li>- Hill start assist is not available.</li> </ul>

Situations	Consequences
 <p>and possibly  flashing</p>	<p>To apply the electric parking brake:</p> <ul style="list-style-type: none"> <li>☞ immobilise the vehicle and switch off the ignition.</li> <li>☞ pull the control for at least 5 seconds or until application is complete.</li> <li>☞ switch on the ignition and check that the electric parking brake warning lamps come on.</li> </ul> <p>The application is slower than during normal operation.</p> <p>To release the electric parking brake:</p> <ul style="list-style-type: none"> <li>☞ switch on the ignition.</li> <li>☞ push the control lever and hold it for approximately 3 seconds then release it.</li> </ul> <p>If the braking warning lamp is flashing or if the warning lamps do not come on with the ignition on, these procedures will not work. Place the vehicle on level ground and have it checked by a PEUGEOT dealer or a qualified workshop.</p>
<p>Display of the message "<b>Parking brake fault</b>" and of the following warning lamps:</p>  <p>and possibly  flashing</p>	<ul style="list-style-type: none"> <li>- Only the automatic application on switching off the engine and automatic release on acceleration functions are available.</li> <li>- The manual application/release of the electric parking brake and the emergency braking are not available.</li> </ul>
<p>Display of the message "<b>Battery charge fault</b>".</p> 	<ul style="list-style-type: none"> <li>- You must stop as soon as it is safe to do so. Switch off and immobilise your vehicle (if necessary, place the a chock under a wheel).</li> <li>- Apply the electric parking brake before switching off the engine.</li> </ul>

# Manual parking brake

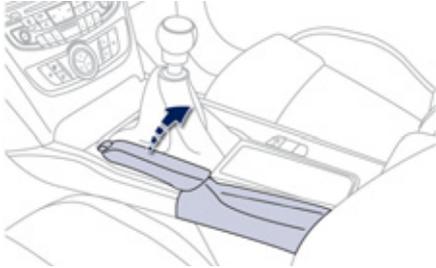

## Application

- ☞ Pull the parking brake lever up to immobilise your vehicle.

## Release


- ☞ Pull the parking brake lever up gently, press the release button then lower the lever fully.

 When the vehicle is being driven, if this warning lamp and the **STOP** warning lamp come on, accompanied by an audible signal and a message in the instrument panel screen, indicating that the parking brake is still on or has not been fully released.

 When parking on a slope, direct your wheels against the kerb, apply the parking brake, engage a gear and switch off the ignition.

## 5-speed manual gearbox

### Engaging reverse gear

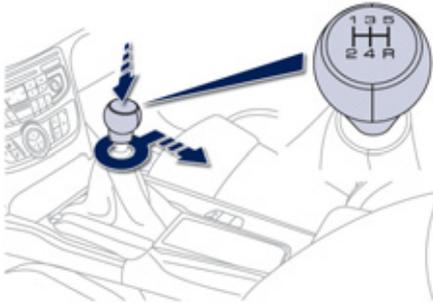


- ☞ Push the gear lever to the right then backwards.

**!** Only engage reverse gear when the vehicle is stationary with the engine at idle.

- i** As a safety precaution and to facilitate starting of the engine:
- always select neutral,
  - press the clutch pedal.

## 6-speed manual gearbox

### Engaging reverse gear

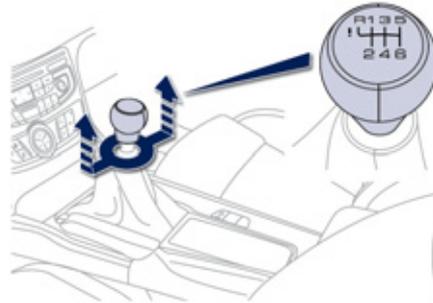

- ☞ Raise the ring under the knob and push the gear lever to the left then forwards.

**!** Only engage reverse gear when the vehicle is stationary with the engine at idle.

- i** As a safety precaution and to facilitate starting of the engine:
- always select neutral,
  - press the clutch pedal.

# Gear shift indicator\*

System which reduces fuel consumption by advising the driver to change up on vehicles fitted with a manual gearbox.

## Operation

The system intervenes only when driving economically.


Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one or more gears. You can follow this instruction without engaging the intermediate gears.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system. This function cannot be deactivated.


Example:



- You are in third gear.

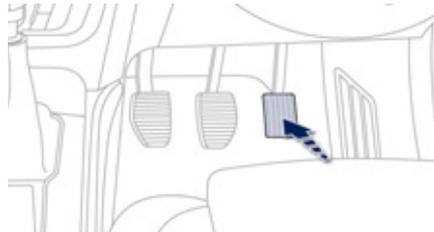

- You press the accelerator pedal moderately.

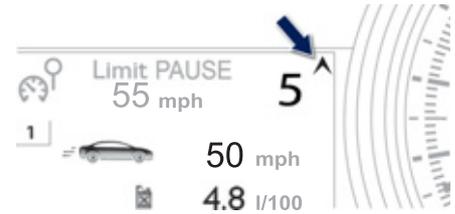

- The system may suggest that you engage a higher gear, if appropriate.

The information appears in the instrument panel screen in the form of an arrow accompanied by the suggested gear.

- i** In the case of driving which makes particular demands on the performance of the engine (firm pressure on the accelerator pedal, for example, when overtaking...), the system will not recommend a gear change. The system never suggests:
- engaging first gear,
  - engaging reverse gear,
  - engaging a lower gear.

\* According to engine.

# "Porsche Tiptronic System" automatic gearbox

Six speed automatic gearbox which offers a choice between the comfort of fully automatic operation, enhanced by sport and snow programmes, or manual gear changing.

Four driving modes are offered:


- **automatic** operation for electronic management of the gears by the gearbox,
- **sport** programme for a more dynamic style of driving,
- **snow** programme to improve driving when traction is poor,
- **manual** operation for sequential changing of the gears by the driver.

## Gear selection gate



1. Gear lever.
2. Button "S" (**sport**).
3. Button "❄" (**snow**).

## Gear lever

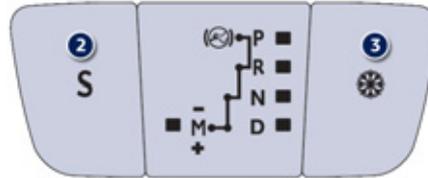

### P. Park.

- Immobilisation of the vehicle, parking brake on or off.
- Starting the engine.

### R. Reverse.

- Reversing manoeuvres, vehicle stationary, engine at idle.

### N. Neutral.

- Immobilisation of the vehicle, parking brake on.
- Starting the engine.

### D. Automatic operation.

**M.+/-** Manual operation with sequential changing of the six gears.

- ☞ Pull backwards to change up through the gears.

or

- ☞ Push forwards to change down through the gears.

## Steering mounted controls



**+** Control paddle to change up, to the right of the steering wheel.

- ☞ Press the back of "+" steering mounted paddle to change up.

**-** Control paddle to change down, to the left of the steering wheel.

- ☞ Press the back of the "-" steering mounted paddle to change down.



The steering mounted control paddles cannot be used to select neutral or to select or come out of reverse.

## Displays in the instrument panel



When you move the lever in the gate to select a position, the corresponding indicator comes on in the instrument panel.

- P.** Park
- R.** Reverse
- N.** Neutral
- D.** Drive (Automatic driving)
- S.** **Sport** programme
- \*** **Snow** programme

- 1 to 6.** Gear engaged during manual operation
- .** Invalid value during manual operation

## Moving off

- ☞ With your foot on the brake, select position **P** or **N**.
- ☞ Start the engine.

If this procedure is not followed, an audible signal is heard, accompanied by a message in the instrument panel screen.

- ☞ With the engine running, press the brake pedal.
- ☞ Release the parking brake, unless it is programmed to automatic mode.
- ☞ Select position **R**, **D** or **M**.
- ☞ Gradually release the brake pedal.

The vehicle moves off immediately.

**i** If position **N** is engaged inadvertently while driving, allow the engine to return to idle then engage position **D** to accelerate.

**!** When the engine is running at idle, with the brakes released, if position **R**, **D** or **M** is selected, the vehicle moves even without the accelerator being pressed. When the engine is running, never leave children in the vehicle without supervision.

When carrying out maintenance with the engine running, apply the parking brake and select position **P**.

## Automatic operation

- ☞ Select position **D** for **automatic** changing of the six gears.

The gearbox then operates in auto-adaptive mode, without any intervention on the part of the driver. It continuously selects the most suitable gear according to the style of driving, the profile of the road and the load in the vehicle.

For maximum acceleration without touching the lever, press the accelerator pedal down fully (kick down). The gearbox changes down automatically or maintains the gear selected until the maximum engine speed is reached. On braking, the gearbox changes down automatically to provide efficient engine braking.

If you release the accelerator sharply, the gearbox will not change to a higher gear for safety reasons.



Never select position **N** while the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is completely stationary.

## Sport and snow programmes

These two special programmes supplement the automatic operation in very specific conditions of use.

### Sport programme "S"

- ☞ Press button "**S**", after starting the engine. The gearbox automatically favours a dynamic style of driving.



**S** appears in the instrument panel.

### Snow programme "❄"

- ☞ Press button "❄", after starting the engine. The gearbox adapts to driving on slippery roads. This programme improves starting and drive when traction is poor.



❄ appears in the instrument panel.

## Return to automatic operation

- ☞ At any time, press the button selected again to quit the programme engaged and return to auto-adaptive mode.

## Manual operation

- ☞ Select position **M** for **sequential** changing of the six gears.
- ☞ Pull the lever towards the **+** sign to change up a gear.
- ☞ Push the lever towards the **-** sign to change down a gear.

It is only possible to change from one gear to another if the vehicle speed and engine speed permit; otherwise, the gearbox will operate temporarily in automatic mode.



**D** disappears and the gears engaged appear in succession on the instrument panel.

If the engine speed is too low or too high, the gear selected flashes for a few seconds, then the actual gear engaged is displayed.

It is possible to change from position **D** (automatic) to position **M** (manual) at any time. When the vehicle is stationary or moving very slowly, the gearbox selects gear **M1** automatically.

The sport and snow programmes do not operate in manual mode.

## Invalid value during manual operation



This symbol is displayed if a gear is not engaged correctly (selector between two positions).

## Stopping the vehicle

Before switching off the engine, you can engage position **P** or **N** to place the gearbox in neutral.

In both cases, apply the parking brake to immobilise the vehicle, unless it is programmed to automatic mode.

**i** If the lever is not in position **P**, when the driver's door is opened or approximately 45 seconds after the ignition is switched off, there is an audible signal and a message appears.

- ☞ Return the lever to position **P**; the audible signal stops and the message disappears.

## Operating fault

**SERVICE** When the ignition is on, a message appears in the instrument panel screen to indicate a gearbox fault. In this case, the gearbox switches to back-up mode and is locked in 3rd gear. You may feel a substantial knock when changing from **P** to **R** and from **N** to **R**. This will not cause any damage to the gearbox.

Do not exceed 60 mph (100 km/h), local speed restrictions permitting.

Have it checked by a PEUGEOT dealer or a qualified workshop.



You risk damaging the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the lever from position **P** to another position when the battery is flat.



To reduce fuel consumption when stationary for long periods with the engine running (traffic jam...), position the gear lever at **N** and apply the parking brake, unless it is programmed in automatic mode.

## 6-speed electronic gear control gearbox


Six-speed electronic gear control gearbox which offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

There are two driving modes:

- **automatic** mode for automatic control of the gears by the gearbox,
- **manual** mode for sequential gear changing by the driver.

In automatic mode, it remains possible to change gear manually by using the steering mounted control paddles when required, when overtaking, for example.

### Gear lever

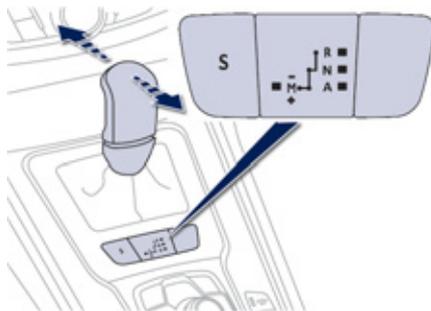

#### R. Reverse

- ☞ With your foot on the brake, lift the lever and push forwards.

#### N. Neutral.

- ☞ With your foot on the brake, select this position to start.

#### A. Automatic mode.

- ☞ Move the lever backwards to select this mode.

#### M. Manual mode with sequential gear changing.

- ☞ Move the lever to the left to select this mode, then use the steering mounted control paddles to change gear.

### Steering mounted control paddles



- + . Change up paddle to the right of the steering wheel.

- ☞ Press the back of the "+" steering mounted paddle to change up a gear.

- . Change down paddle to the left of the steering wheel.

- ☞ Press the back of the "-" steering mounted paddle to change down a gear.

**i** The steering mounted paddles cannot be used to select neutral or to engage or disengage reverse gear.

## Displays in the instrument panel



### Gear lever positions

**N.** Neutral

**R.** Reverse

**1, 2, 3, 4, 5, 6.** Gears in manual mode

**A.** This comes on when the automatic mode is selected. It switches off on changing to manual mode.



- ☞ Place your **foot on the brake** when a message appears in the instrument panel screen.

**i** Engagement of reverse gear is accompanied by an audible signal.

## Moving off

- ☞ Select position **N**.
- ☞ Press the brake pedal down fully.
- ☞ Start the engine.

**N**

**N** appears in the instrument panel screen.

**i** **N** flashes in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, if the gear lever is not in position **N** on starting.

**Foot on brake** flashes on the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, if the brake pedal is not pressed on starting.

- ☞ Select first gear (position **M** or **A**) or reverse (position **R**).
- ☞ Release the parking brake unless it is programmed to automatic mode.
- ☞ Take your foot off the brake pedal, then accelerate.

**R**

**A** and **1** or **R** appears in the instrument panel screen.

## Automatic mode

- ☞ After starting the vehicle, select position **A** for enter automatic mode.

**A<sup>1</sup>**

**A** and the gear engaged appear in the instrument panel screen.

The gearbox is then operating in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear, depending on the:

- style of driving,
- profile of the road.

**i** For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

**4**

## Manual gear changing



This selective gear change mode enables you to overtake, for example, while still remaining in automatic mode.

☞ Operate the **+** or **-** steering mounted control paddle.

The gearbox engages the gear requested if the engine speed permits. **A** is still displayed in the instrument panel.

After a few moments without any action on the controls, the gearbox resumes automatic control of the gears.

## Manual mode

- ☞ When the vehicle has moved off, select position **M** to change to manual mode.
- Pull the lever towards the **+** sign to change up a gear.
  - Push the lever towards the **-** sign to change down a gear.



**A** disappears and **M** appears with the gears engaged successively, in the instrument panel screen.

The gear change requests are only carried out if the engine speed permits.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to permit acceleration in the correct gear.

**i** At very low speed, if reverse gear is requested, this will only be taken into account when the vehicle is immobilised. A warning lamp appears in the instrument panel screen.

**!** On sharp acceleration, the gearbox will not change up unless the driver acts on the gear lever or the steering mounted paddles. Never select neutral **N** while the vehicle is moving. Only engage reverse gear **R** when the vehicle is immobilised with the brake pedal pressed.

## Stopping the vehicle

Before switching off the engine, you can choose to:

- move to position **N** to engage neutral,
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, you must apply the parking brake to immobilise the vehicle.

**!** When immobilising the vehicle, with the engine running, you must place the gear lever in neutral **N**.  
Before carrying out any work in the engine compartment, check that the gear lever is in neutral **N** and that the parking brake is applied.

## Operating fault

**SERVICE** With the ignition on, the flashing of this warning lamp, accompanied by an audible signal and a message in the instrument panel screen, indicates a malfunction of the gearbox. have it checked by PEUGEOT or a qualified workshop.

**!** You must press the brake pedal when starting the engine.  
Whatever the circumstances, you must manually apply the parking brake when parking, unless the parking brake is programmed in automatic mode.

# Stop & Start

The Stop & Start system puts the engine temporarily into standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently. Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

## Operation

### Going into engine STOP mode

 The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- **with the electronic gear control gearbox**, at speeds below 4 mph (6 km/h), press the brake pedal or put the selector lever in position **N**.

If your vehicle is fitted with the system, a time counter calculates the sum of the periods in STOP mode during a journey. It rests itself to zero every time the ignition is switched on with the key.

 For your comfort, during parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear. STOP mode does not affect the functionality of the vehicle, such as for example, braking, power steering...

 Never refuel with the engine in STOP mode; you must switch off the ignition with the key.

### Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the key,
- the electric parking brake is applied or being applied,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

 In this case, the "ECO" warning lamp flashes for a few seconds then goes off.

**This operation is perfectly normal.**

## Going into engine START mode

**ECO** The "ECO" warning lamp goes off and the engine starts with an **electronic gear control gearbox**:

- selector lever in position **A** or **M**, release the brake pedal,
- or selector lever in position **N** and the brake pedal released, move the selector lever to position **A** or **M**,
- or engage reverse gear.

## Special cases: START invoked automatically

START mode is invoked automatically when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the speed of the vehicle exceeds 7 mph (11 km/h) with the electronic gear control gearbox,
- the electric parking brake is being applied,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed for control of a system.

**ECO** In this case the "ECO" warning lamp flashes for a few seconds, then goes off.

**This operation is perfectly normal.**

## Deactivation



At any time, press the "ECO OFF" switch to deactivate the system.

This is confirmed by the switch warning lamp coming on accompanied by a message in the screen.

**i** If the system has been deactivated in STOP mode, the engine restarts immediately.

## Reactivation

Press the "ECO OFF" switch again. The system is active again; this is confirmed by the switch warning lamp going off and a message in the screen.

**i** The system is reactivated automatically at every new start using the key.

## Operating fault



In the event of a fault with the system, the "ECO OFF" switch warning lamp flashes then comes on continuously.

Have it checked by a PEUGEOT dealer or a qualified workshop.

In the event of a fault in STOP mode, the vehicle may stall. It is then necessary to switch off the ignition and start the engine again using the key.

## Maintenance

**!** Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

This system requires a battery with a special specification and technology (reference numbers available from PEUGEOT dealers). Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.

<b>ATTENTION !</b>	<b>CAUTION !</b>
Votre véhicule nécessite une batterie spécifique	Your vehicle requires a specific battery
EN CAS DE REMPLACEMENT, SE REFERER OBLIGATOIREMENT AU MANUEL DU VEHICULE	IN THE EVENT OF REPLACEMENT, REFER OBLIGATORILY TO THE HANDBOOK OF THE VEHICLE

**!** The Stop & Start system makes use of advanced technology. For any work on the system go to a qualified workshop with the skills and equipment required, which a PEUGEOT dealer is able to provide.

## Hill start assist


System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This system only operates when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- in particular conditions on a slope,
- with the driver's door closed.

The hill start assist system cannot be deactivated.

### Operation

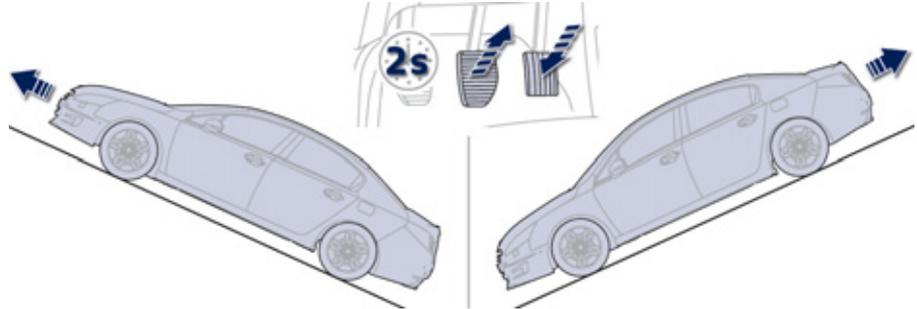

**On an ascending slope, with the vehicle stationary, the vehicle is held for a momentarily when you release the brake pedal:**

- provided you are in first gear or neutral on a manual gearbox,
- provided you are in **A** or **M** on an electronic gear control gearbox,
- provided you are in **D** or **M** on an automatic gearbox.

**On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held momentarily when you release the brake pedal.**

### Operating fault



**SERVICE**


If a fault in the system occurs, these warning lamps come on. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

**!** Do not exit the vehicle while it is being held in the hill start assist phase. If you need to exit the vehicle with the engine running, apply the parking brake manually then ensure that the parking brake warning lamp (and the warning lamp **P** in the lever of the electric parking brake) are on fixed (not flashing).


# Head-up display

System which projects various information onto a smoked strip in the field of vision of the driver so that they do not have to take their eyes off the road.


This system operates when the engine is running and the settings are stored when the ignition is switched off.

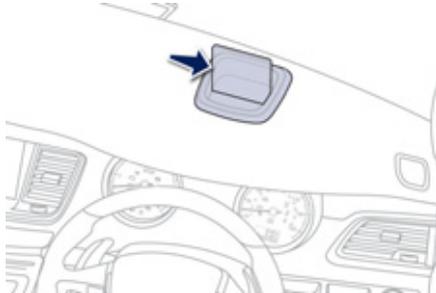


## Buttons

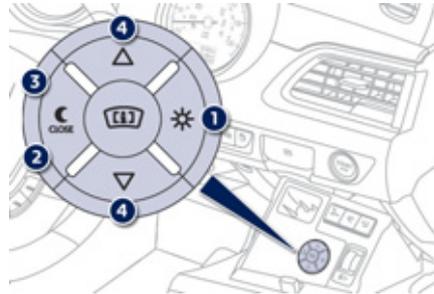

1. Head-up display on.
2. Head-up display off (long press).
3. Brightness adjustment.
4. Display height adjustment.

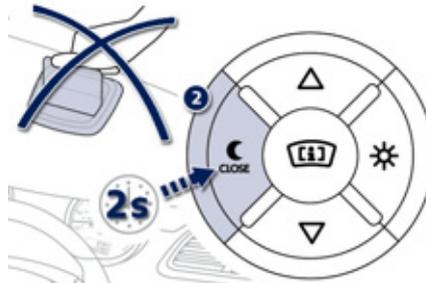

## Displays during operation

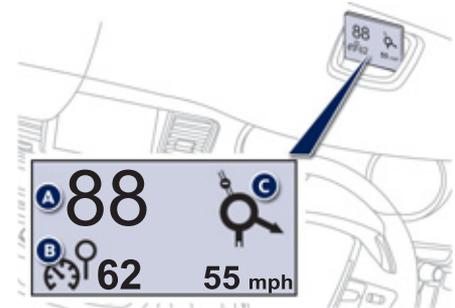


Once the system has been activated, the following information is grouped together in the head-up display:

- A. The speed of your vehicle.
- B. Cruise control/speed limiter information.
- C. Navigation information (according to version).

**i** For more information on the navigation system, refer to the "Audio and telematic" section.

## Activation/Deactivation

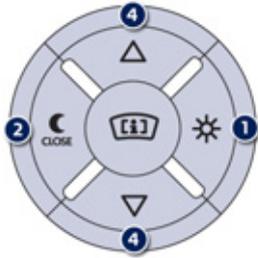


- ☞ With the engine running, press button **1** to activate the system and deploy the strip.
  - ☞ Press and hold button **2** to deactivate the system and retract the strip.
- The activated/deactivated state is saved and restored on restarting the engine.

## Height adjustment

- ☞ With the engine running, adjust the display to the desired height using buttons **4**:
  - up to move the display up,
  - down to move the display down.

## Brightness adjustment

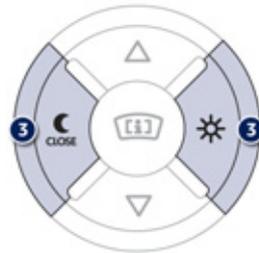

- ☞ With the engine running, adjust the brightness of the information displayed using buttons **3**:
  - the "sun" to increase the brightness,
  - the "moon" to decrease the brightness.


**!** We recommend that adjustments are made using these buttons only when the vehicle is stationary. When stationary or while driving, no objects should be placed around the strip (or in its recess) so as to not impede deployment of the strip and its correct operation.

**i** In certain extreme weather conditions (rain and/or snow, bright sunshine, ...) the head-up display may not be legible or may suffer temporary interference. Some sunglasses may hamper reading of the information. To clean the strip, use a clean, soft cloth (such as a spectacles cloth or microfibre cloth). Do not use a dry or abrasive cloth or detergent or solvent products as these could scratch the strip or damage the non-reflective coating.

# Memorising speeds

This memorising of speeds applies to both the speed limiter and the cruise control.

## Operation

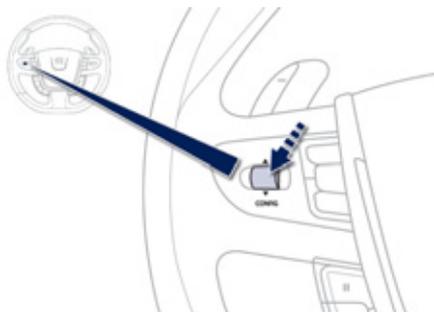

You can memorise up to 5 speeds in the system.


By default, some speeds are already memorised.

- ☞ Go to the main menu in the instrument panel screen by pressing the **"CONFIG"** button.
- ☞ Select the "Personalisation-configuration" menu and confirm.

- ☞ Select "Vehicle parameters" menu and confirm.
- ☞ Select the "Driving assistance" line and conform.
- ☞ Select the "Speeds memorised" line and confirm.
- ☞ Modify the speed.
- ☞ Select **"OK"** and confirm to save the modifications.

**!** For safety reasons, the driver must carry out these operations when stationary, using the instrument panel screen. These operations are only possible when stationary.

## Selection

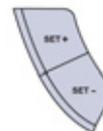

To select a memorised speed:  
☞ press and hold the **"+"** or **"-"** button; the system stops at the nearest memorised speed,

- ☞ press and hold again the **"+"** or **"-"** button to select another memorised speed.

A reminder of the speed and the state of the system (on/off) is displayed in the instrument panel.

# Speed limiter

System which prevents the vehicle from exceeding the speed programmed by the driver. When the programmed speed limit is reached, pressing the accelerator pedal no longer has any effect unless it is pressed firmly, which allows you to temporarily exceed the programmed speed. To return to the programmed speed, simply slow down to a speed below the programmed speed by releasing the accelerator.


The speed limiter is **switched on** manually: it requires a programmed speed of at least 20 mph (30 km/h).

The speed limiter is **switched off** by manual operation of the control.

The programmed speed remains in the memory when the ignition is switched off.

**i** The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

## Steering mounted controls

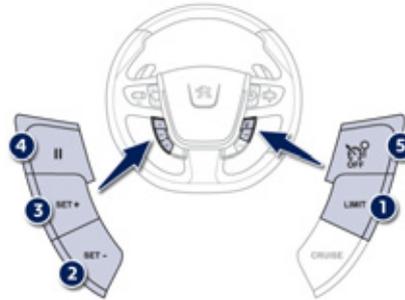

1. Speed limiter mode selection button
2. Programmed value decrease button
3. Programmed value increase button
4. Suspend/restore speed limiter (pause)
5. Speed limiter off button

## Displays in the instrument panel



The programmed information is grouped together in the instrument panel screen.

**i** This information also appears in the head-up display. For more information on the head-up display, refer to the relevant page in this "Driving" section.



- A. Speed limiter on/pause indication
- B. Speed limiter mode selection indication
- C. Programmed speed value

## Programming



- ☞ Press **1**, the speed limiter mode is activated but remains paused. You do not have to switch the speed limiter on in order to set the speed.
- ☞ Set the speed value by pressing button **2** or **3** (e.g.: 55 mph (90 km/h)).

You can then change the programmed speed using buttons **2** and **3**:






- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.
- ☞ Switch the speed limiter on by pressing button **4**.
- ☞ Suspend the speed limiter by pressing button **4**: the screen confirms the suspension with "Pause".
- ☞ Switch the speed limiter back on by pressing button **4** again.

## Exceeding the programmed speed

Pressing the accelerator pedal to exceed the programmed speed will not have any effect unless you press the pedal **firmly** past the **point of resistance**.

The speed limiter is deactivated temporarily and the programmed speed, which is still displayed, flashes.

Returning to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the programmed speed.

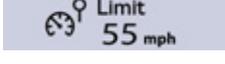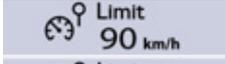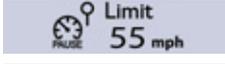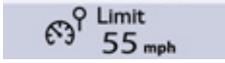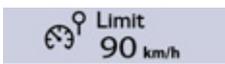

## Off/Return to normal driving

- ☞ Press **5**, the speed limiter is deactivated.

## Operating fault



In the event of a speed limiter fault, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.

- ! On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed. The use of mats not approved by PEUGEOT may adversely affect the normal operation of the accelerator pedal and impede the operation of the speed limiter. Mats approved by PEUGEOT have a third fixing in the area of the pedals to avoid any risk of interference with the pedals.

# Cruise control

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually; it requires a minimum vehicle speed of 25 mph (40 km/h) and the engaging:


- 4th gear or higher on a manual gearbox,
- 2nd gear or higher on an electronic gear control gearbox or automatic gearbox,
- position **A** on the electronic gear control gearbox or **D** on the automatic gearbox.

The cruise control is **switched off** manually or by pressing the brake or clutch pedal or on triggering of the ESP system for safety reasons.

It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal. To return to the programmed speed, simply release the accelerator pedal.

Switching off the ignition cancels any programmed speed value.

## Steering mounted controls

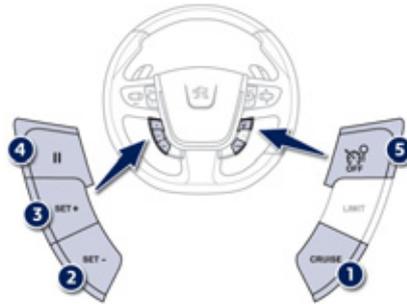

1. Cruise control mode selection button
2. Speed programming/programmed value decrease button
3. Speed programming/programmed value increase button
4. Cruise control suspension/resume button (pause)
5. Cruise control off button

**i** The cruise control cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

## Displays in the instrument panel



The programmed information is grouped together in the instrument panel screen.

**i** This information also appears in the head-up display. For more information on the head-up display, refer to the relevant page in this "Driving" section.



- A. Cruise control on/pause indication
- B. Cruise control mode selection indication
- C. Programmed speed value

## Programming



- ☞ Press 1, the cruise control is activated but remains paused.
- ☞ Set the programmed speed by accelerating to the required speed, then press button 2 or 3 (e.g.: 70 mph (110 km/h)).

You can then change the programmed speed using buttons 2 and 3:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.
- ☞ Pause the cruise control by pressing button 4: the screen confirms the suspension with "Pause".
- ☞ Switch the cruise control back on by pressing button 4 again.





## Exceeding the programmed speed

Intentional or unintentional exceeding of the programmed speed results in flashing of this speed on the display.

Return to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the speed.

## Off/Return to normal driving

- ☞ Press 5; cruise control mode is deactivated. The screen returns to the distance recorder.

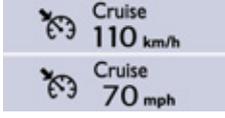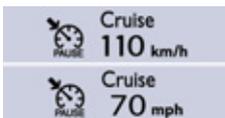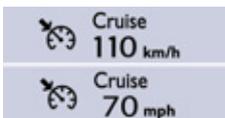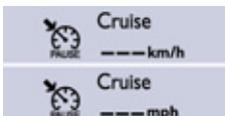

## Operating fault



In the event of a cruise control fault, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.

**!** When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.


Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

## Parking sensors

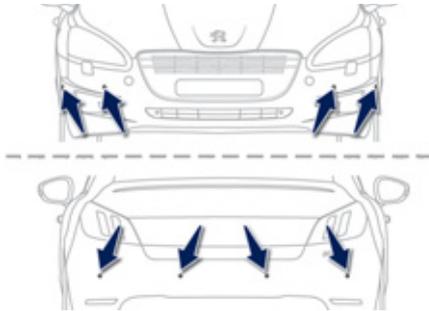


This system indicates the proximity of an obstacle (person, vehicle, tree, gate, etc.) which comes within the field of detection of sensors located in the bumper.

Certain types of obstacle (stake, roadworks cone, etc.) detected initially will no longer be detected at the end of the manoeuvre due to the presence of blind spots.

**!** This function cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

## Rear parking sensors

The system is switched on by engaging reverse gear. This is accompanied by an audible signal. The system is switched off when you exit reverse gear.

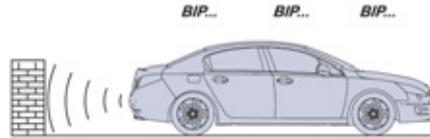

## Audible assistance

The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle. The sound emitted by the speaker (right or left) indicates the side on which the obstacle is located.

When the distance between the vehicle and the obstacle becomes less than approximately thirty centimetres, the audible signal becomes continuous.



## Visual assistance

This supplements the audible signal by displaying bars in the multifunction screen which move progressively nearer to the vehicle. When the obstacle is near, the "Danger" symbol is also displayed in the screen.

## Front parking sensors

In addition to the rear parking sensors, the front parking sensors are triggered when an obstacle is detected in front and the speed of the vehicle is still below 6 mph (10 km/h).

The sound emitted by the speaker (front or rear) indicates whether the obstacle is in front or behind.

The front parking sensors are interrupted if the vehicle stops for more than three seconds in forward gear, if no further obstacles are detected or when the speed of the vehicle exceeds 6 mph (10 km/h).

## Deactivation/Activation of the front and rear parking sensors



The function is deactivated by pressing this button. The indicator lamp in the button comes on.

Pressing this button again reactivates the function. The indicator lamp in the button goes off.

**i** The function will be deactivated automatically if a trailer is being towed or a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

## Operating fault

### SERVICE


In the event of a malfunction of the system, when reverse gear is engaged this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal (short beep). Contact a PEUGEOT dealer or a qualified workshop.

**i** In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. When the vehicle is moving at a speed below 6 mph (10 km/h), certain sound sources (motorcycle, lorry, pneumatic drill, etc.) may trigger the audible signals of the parking sensor system.

# Parking space sensors

System which measures the parking space available between two vehicles or obstacles. It measures the size of the space and gives you information on:

- the possibility of fitting into a free space, depending on the dimensions of your vehicle and the distances needed for manoeuvring,
- the level of difficulty of the parking manoeuvre.

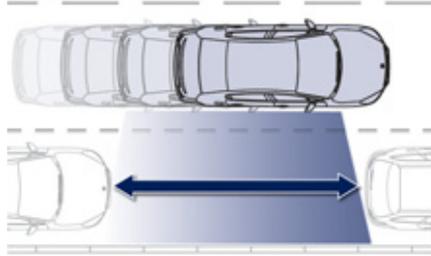


The system does not measure spaces which are clearly much smaller or larger than the size of the vehicle.

## Displays

The warning lamp in the control **A** can have two different states:

- **on fixed:** the system is switched on by a press on control **A**.
- **off:** the system is not switched on.

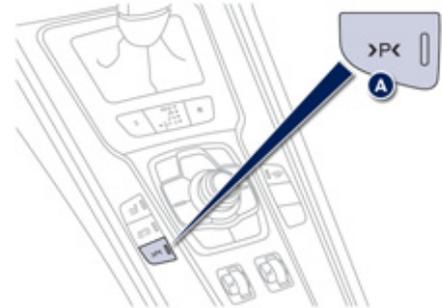


# 4

## Operation

When you have identified a parking space:

- ☞ Engage a gear on a manual gearbox or put the gear lever in position **A** (electronic gear control gearbox) or in position **D** (automatic gearbox).
- ☞ Press button **A** to start the system.
- ☞ Operate the direction indicator on the side where the space is to be measured; a message is displayed and the warning lamp flashes to confirm that measurement is in progress.
- ☞ During measurement, go forward the length of the space, at a speed less than 12 mph (20 km/h), to prepare for your manoeuvre.
- ☞ Once the measurement has been completed, the system informs you of the level of difficulty of the manoeuvre by a message in the multifunction screen accompanied by an audible signal.

The system displays one of the following messages:

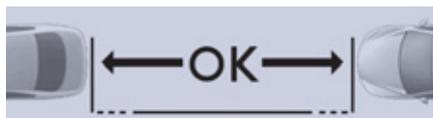

**Parking possible**



**Parking difficult**



**Parking not advised**

The system switches itself off automatically:

- when you engage reverse gear,
- when you switch off the ignition,
- if measuring is not requested,
- within five minutes of switching on the system,
- if the vehicle speed exceeds the threshold of 45 mph (70 km/h) for one minute.

**!** If the lateral distance between your vehicle and the parking space is too great, the system may not be able to measure the space.

**i** The system remains available after each measurement and can therefore measure several spaces in succession. In poor or wintry weather, ensure that the sensors are free of dirt, ice or snow. The parking space sensor system deactivates the front parking sensors when measuring forwards. If there is a fault, have the system checked by a PEUGEOT dealer or a qualified workshop.

# Lighting controls

System for selection and control of the various front and rear lamps providing the vehicle's lighting and signalling.

## Main lighting

The various front and rear lamps of the vehicle are designed to provide the best visibility for the driver and to signal the presence of the vehicle to other road users:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear,
- directional headlamps for improved visibility when cornering.

## Additional lighting

Other lamps are installed to fulfil the requirements of particular driving conditions:

- rear foglamps to better signal the presence of the vehicle in foggy conditions,
- front foglamps for better visibility in foggy conditions and to improve lighting at intersections and when parking,
- daytime running lamps to be seen during the day.


## Automatic lighting functions

Various automatic lighting functions are also available depending on options:


- guide-me-home lighting,
- directional headlamps,
- welcome lighting,
- daytime running lamps,
- automatic illumination of headlamps,
- automatic headlamp dipping.

## Selection ring for main lighting mode

Turn the ring to position the symbol required facing the mark.

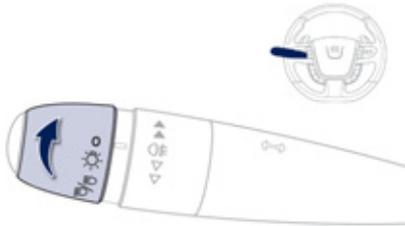


### Model without AUTO lighting

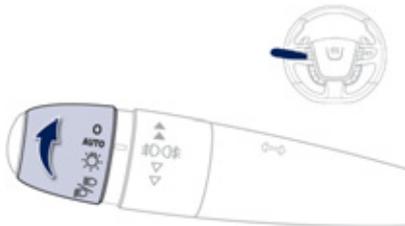

### Model with AUTO lighting



- Lighting off.
- AUTO** Automatic illumination of headlamps.
- ☀ Sidelamps only.
- ☀/☀ Dipped or main beam headlamps.

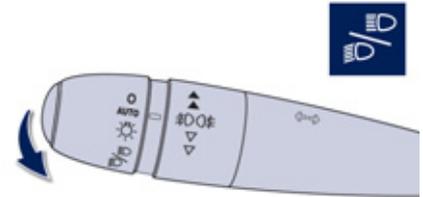

## Stalk for switching headlamps

Pull the stalk to switch the lighting between dipped/main beam headlamps.


In the lighting off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

## Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms the lighting switched on.

## Foglamps selection ring

The foglamps operate with dipped and main beam headlamps.

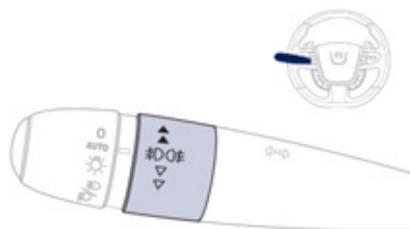

### Front and rear foglamps

Rotate and release the ring:

- ☞ forwards a first time to switch on the front foglamps,
- ☞ forwards a second time to switch on the rear foglamps,
- ☞ rearwards a first time to switch off the rear foglamps,
- ☞ rearwards a second time to switch of the front fog lamps.

When the headlamps switch off with automatic illumination of headlamps (AUTO model) or when the dipped beam headlamps are switched off manually, the foglamps and sidelamps remain on.

- ☞ Turn the ring rearwards to switch off the foglamps, the sidelamps will then switch off.

**!** In good or rainy weather, both day and night, the front foglamps and the rear foglamps are prohibited. In these situations, the power of their beams may dazzle other drivers. They should only be used in fog or snow. In these weather conditions, it is your responsibility to switch on the foglamps and dipped headlamps manually as the sunshine sensor may detect sufficient light.

Do not forget to switch off the front foglamps and the rear foglamps when they are no longer needed.

### **i** Lighting left on audible signal

An audible signal when a front door is opened warns the driver that the vehicle's exterior lighting is on, with the ignition off and in manual lighting mode. In this case, switching off the lighting stops the audible signal.

With the ignition off, if the dipped headlamps remain on, the vehicle goes into "ECO" mode to avoid discharging the battery.

The lighting goes off when you switch off the ignition, but you can always switch it on again using the lighting control stalk.

**i** In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

## Daytime running lamps

Daytime lighting, compulsory in certain countries, which comes on automatically when the engine is started making the vehicle more visible to other road users.

This function is assured:


- in countries where it is imposed by regulations, by illumination of the dipped beam headlamps with the sidelamps and number plate lamps.
- for other countries where it is provided, by the use of dedicated lamps.



This function can be activated or deactivated via the vehicle configuration menu.

## Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.

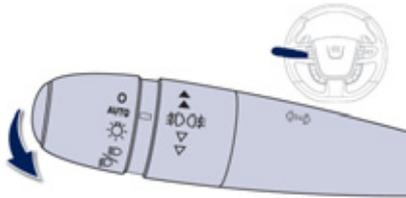


### Switching on

- ☞ Within 30 seconds or a minute after switching of the ignition (according to the automatic guide-me-home lighting duration programmed in the configuration menu), "flash" the headlamps using the lighting stalk.
- ☞ A further "headlamp flash" switches the function off.

### Switching off

The manual guide-me-home lighting switches off automatically after a set time.

## Parking lamps

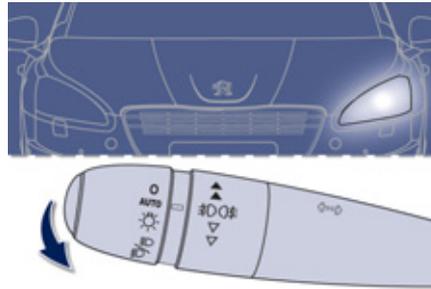

Side markers for the vehicle by illumination of the sidelamps on the traffic side only.


- ☞ Within one minute of switching off the ignition, operate the lighting control stalk up or down depending on the traffic side (for example: when parking on the left; lighting control stalk upwards; the right hand sidelamps are on).

This is confirmed by an audible signal and illumination of the corresponding direction indicator warning lamp in the instrument panel. To switch off the parking lamps, return the lighting control stalk to position 0 or switch on the ignition.

## Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

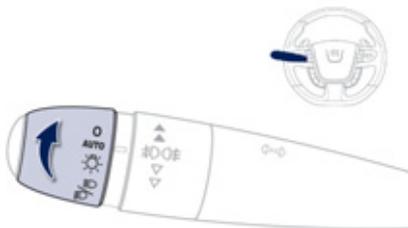

### Activation

- ☞ Turn the ring to the "AUTO" position. The automatic illumination of headlamps is accompanied by a message in the instrument panel screen.

### Deactivation

- ☞ Turn the ring to another position. Deactivation is accompanied by a message in the instrument panel screen.

## Associated with the automatic Guide-me-home lighting

Association with the automatic lighting provides the guide-me-home lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds,
- automatic activation of guide-me-home lighting when the automatic illumination of headlamps is in operation.

## Programming



Selection of the duration of the guide-me-home lighting is done in the configuration menu vehicle parameters, in the instrument panel screen.

The duration of the guide-me-home lighting is associated with and identical to that of the welcome lighting.

## Operating fault

### SERVICE

In the event of a fault with the sunshine sensor, the lighting comes on, this warning lamp

is displayed in the instrument panel and/or a message appears in the instrument panel screen, accompanied by an audible signal. Contact a PEUGEOT dealer or a qualified workshop.



In fog or snow, the sunshine sensor may detect sufficient light. In this case, the lighting will not come on automatically. Do not cover the sunshine sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

## Adaptive lighting

System which automatically changes between dipped and main beam according to the driving conditions, using a sensor in the rear view mirror.

The system is active from 15 mph (25 km/h) and is deactivated below 9 mph (15 km/h).



### Switching on

☞ put the lighting control stalk on the "AUTO" or "Dipped/main beam headlamps" position,



☞ press this button, the warning lamp comes on.

### Switching off

The driver can take over at any time, if the circumstances dictate:



☞ press this button, the warning lamp goes off,

☞ or by dipping the headlamps manually using the lighting control stalk, whether in the "AUTO" or "Dipped/main beam headlamps" position.

**i**

Flashing the headlamps does not deactivate the system. The state of the system is stored in memory when switching off the ignition. This automatic headlamp dipping system is a driving aid. The driver remains responsible for the vehicle's lighting and its correct use for the prevailing conditions of light, visibility and traffic.

**i**

The system may suffer interference or not work correctly:

- under conditions of poor visibility (for example, snowfall, heavy rain or thick fog, ...),
- if the windscreen is dirty, misted or obscured (by a sticker, ...) in front of the sensor,
- if the vehicle is facing highly reflective signs.

The system is not able to detect:

- road users that do not have their own lighting, such as pedestrians,
- road users whose lighting is obscured, such as vehicles running behind a safety barrier (on a motorway, for example),
- road users at the top or bottom of a steep slope, on twisty roads, on crossroads.

## Exterior welcome lighting

Remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated according to the level of light detected by the sunshine sensor.

### Switching on



- Press the open padlock on the remote control. The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.

### Switching off

The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

### Programming




The lighting duration is selected via the instrument panel screen configuration menu.



The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.

## Door mirror spotlamps

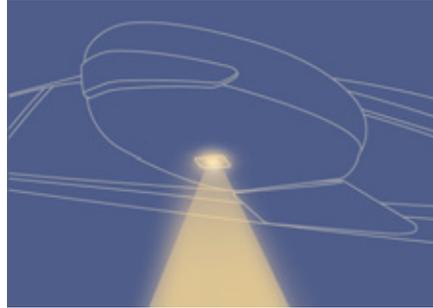

To make your approach to the vehicle easier, these illuminate:

- the zones facing the driver's and passenger's doors,
- the zones forward of the door mirrors and rearward of the front doors.

### Switching on


The spotlamps come on:

- when you unlock the vehicle,
- when you remove the key from the ignition,
- when you open a door,
- when you use the remote control.

### Switching off

They are timed to go off automatically.

## Manual adjustment of halogen headlamps

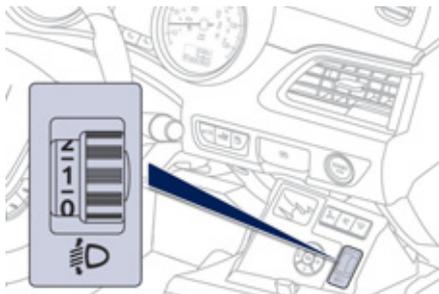


To avoid causing a nuisance to other road users, the height of the halogen headlamps should be adjusted according to the load in the vehicle.

- 0. 1 or 2 people in the front seats.
- 5 people.
- 1 Intermediate setting.  
5 people + maximum authorised load in the boot.
- 2 Driver + maximum authorised load in the boot.
- Not used.
- 3 Not used.

**i** The initial setting is position "0".

## Automatic adjustment of xenon headlamps

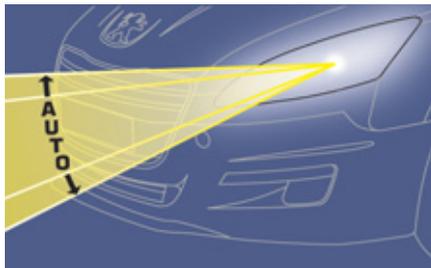

In order to avoid causing a nuisance to other road users, this system corrects the height of the xenon headlamps beam automatically and when stationary, in relation to the load in the vehicle.

### SERVICE


If a fault occurs, this warning lamp is displayed in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen. The system then places your headlamps in the lowest position.

**!** If a fault occurs, do not touch the xenon bulbs. Contact a PEUGEOT dealer or a qualified workshop.


## Main directional lighting

When the dipped or main beam headlamps are on, this function enables the light beams to provide improved lighting of the side of the road when cornering.

The use of this function, associated with the xenon headlamps only, considerably improves the quality of your lighting when cornering.

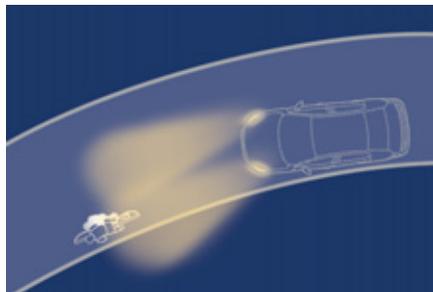

with directional lighting

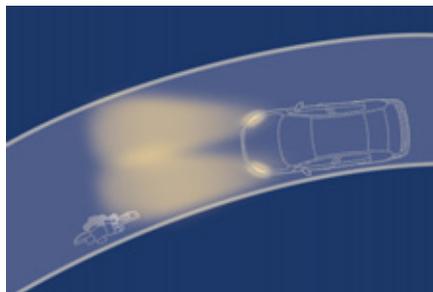

without directional lighting



When stationary or moving at very low speed or when reverse gear is engaged, the function is inactive. The status of the function remains in the memory when the ignition is switched off.

## Programming




The function is activated or deactivated via the configuration menu (in the instrument panel screen).

## Operating fault




If a fault occurs, this warning lamp flashes in the instrument panel, accompanied by a message in the instrument panel screen. Contact a PEUGEOT dealer or a qualified workshop.

## Additional directional lighting

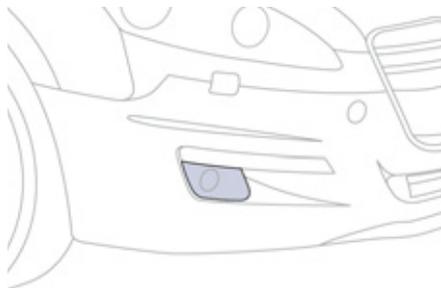


With dipped or main beams, this function makes use of the beam from a front foglamp to illuminate the inside of a bend, when the vehicle speed is below 25 mph (approximately 40 km/h).

This additional lighting is particularly useful in town, at intersections, on very winding roads, when parking, ...

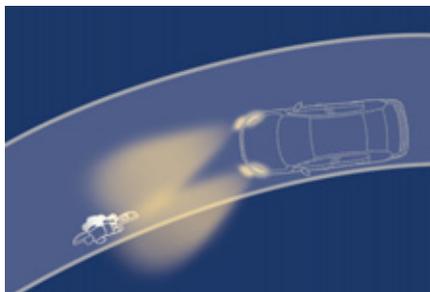

with additional directional lighting

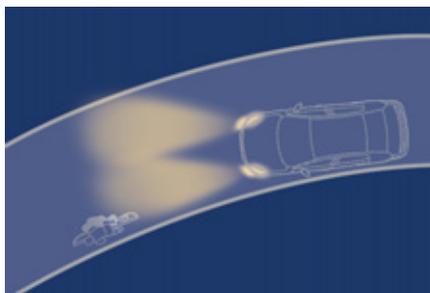

without additional directional lighting

### Switching on

This function starts

- when the direction indicator is switched on (the foglamp on the same side is switched on), or
- from a certain angle of rotation of the steering wheel.

### Switching off

The system is deactivated:

- below a certain angle of rotation of the steering wheel,
- when switching off the direction indicator,

### Programming



The system is activated or deactivated in the instrument panel screen configuration menu.

The system is activated by default.

# Wiper controls

The vehicle's front and rear wipers are designed to improve the driver's visibility progressively according to the climatic conditions.


## Programming

Various automatic wiper control modes are also available according to the following options:


- automatic rain sensitive windscreen wipers,
- rear wiper on engaging reverse gear.

## Manual controls

The wipers are controlled directly by the driver.

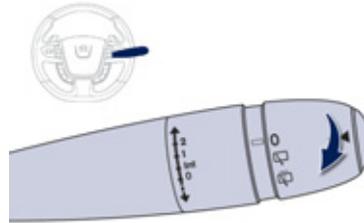

### Model with manual wiping (intermittent)

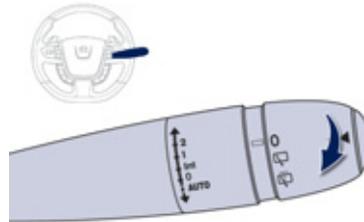

### Model with AUTO wiping


## Windscreen wipers

Wiping speed:

- 2** fast (heavy rain),
- 1** normal (moderate rain),
- I** intermittent (proportional to the speed of the vehicle),
- 0** park,
- ↓** single wipe (press down and release),

or

- AUTO ↓** automatic (press down and release),
- single wipe (pull the stalk briefly towards you).

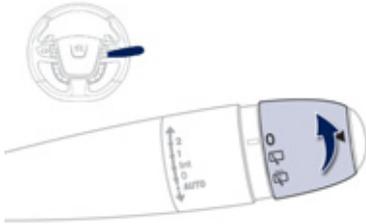

## Rear wiper

Rear wiper selection ring:

**!** If a significant accumulation of snow or ice is present, or when using a bicycle carrier on the boot, deactivate the automatic rear wiper via the instrument panel screen configuration menu.

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).

## Reverse gear


When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

## Programming



The function is activated or deactivated via the instrument panel screen configuration menu. This function is activated by default.

## Windscreen and headlamp wash

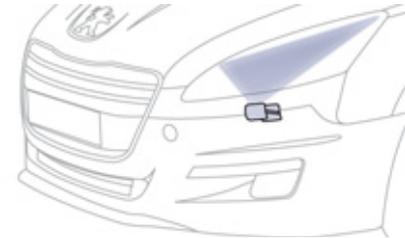

5

 Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.

The headlamp washers only operate when **the dipped beam headlamps are on**.


## Screenwash/headlamp wash level low

### SERVICE

In the case of vehicles fitted with headlamp washers, when the fluid reservoir low level is reached this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen. The warning lamp comes on when the ignition is switched on, or every time the stalk is operated, until the reservoir is refilled. Next time you stop, refill the screenwash/headlamp wash reservoir.

## Automatic rain sensitive windscreen wipers

The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

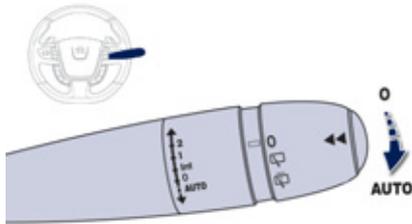


### Switching on



Briefly push the control stalk downwards.

This warning lamp comes on in the instrument panel and a message appears in the multifunction screen.

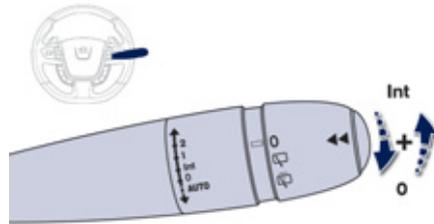

### Switching off



Briefly push the control stalk downwards again, or place the control stalk in another position (Int, 1 or 2).

This warning lamp goes off in the instrument panel and a message appears in the multifunction screen.

**i** The automatic rain sensitive windscreen wipers must be reactivated by pushing the control stalk downwards, if the ignition has been off for more than one minute.


## Operating fault

If a fault occurs with the automatic rain sensitive wipers, the wipers will operate in intermittent mode.

Have it checked by PEUGEOT dealer or a qualified workshop.

- !** Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.
- Switch off the automatic rain sensitive wipers when using an automatic car wash. In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

## Special position of the windscreen wipers

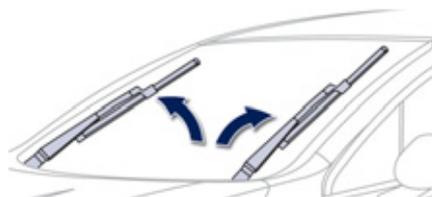

This position permits release of the windscreen wiper blades.


It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.

In the moment following switching the ignition off, any action on the stalk positions the wipers vertically on the windscreen.

To park the wipers after this has been done, switch on the ignition and operate the stalk.

- i** To maintain the effectiveness of the "flat-blade" wiper blades, it is advisable to:
- handle them with care,
  - clean them regularly using soapy water,
  - avoid using them to retain cardboard on the windscreen,
  - replace them at the first signs of wear.

# Courtesy lamps

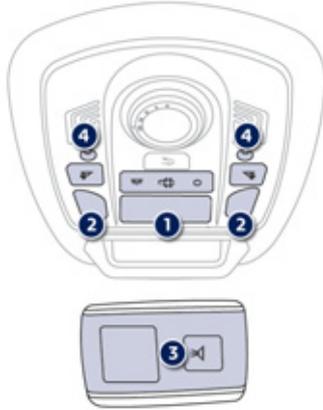

1. Front courtesy lamp
2. Front map reading lamps
3. Rear map reading lamps
4. Interior mood LEDs

## Front courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when opening a door,
- when the remote control locking button is activated, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.



With the "permanent lighting" mode, the lighting time varies according to the circumstances:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the engine running, unlimited.

## Front and rear map reading lamps

☞ With the ignition on, press the corresponding switch.

When the front courtesy lamp is on "permanent lighting", the rear map reading lamp comes on as well, unless it is "permanently off".

From the front, you can deactivate the rear map reading lamps so as to not disturb sleeping rear passengers, for example. However, the rear passengers can force the illumination of a lamp.



Take care to avoid leaving anything in contact with the courtesy lamps.

## Interior mood lighting

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.



### Switching on

At night, interior mood light emitting diodes - LEDs (courtesy lamp, doors) come on automatically when the sidelamps are switched on.



### Switching off

The interior mood lighting switches off automatically when the sidelamps are switched off. It can be switched off manually by adjusting the instrument panel lighting dimmer button to the lowest setting.

## General points relating to child seats

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings\*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats,**
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear.**

**i** PEUGEOT recommends that children should travel in the **rear seats** of your vehicle:

- **"rearwards-facing"** up to the age of 2,
- **"forwards-facing"** over the age of 2.

\* The rules for carrying children are specific to each country. Refer to the current legislation in your country.

## Child seat in the front




### "Rearwards-facing"

When a "rearwards-facing" child seat is installed on the **front passenger seat**, it is essential that the passenger airbag is deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**



### "Forwards-facing"

When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal position with the seat back upright and leave the passenger airbag activated.

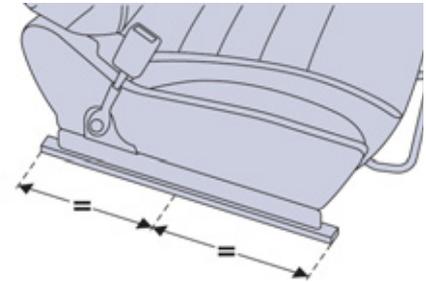

### Intermediate longitudinal position

# 6



### Passenger airbag OFF

**i** For more information on deactivating the airbag, refer to the "Safety" section then "Airbags".

## Child seats recommended by PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg	Group 1: from 9 to 18 kg
 <p><b>L1</b> "RÖMER/BRITAX Baby-Safe Plus". Installed in the rearwards-facing position.</p>	 <p><b>L2</b> "RÖMER Duo Plus ISOFIX".</p>
Groups 2 and 3: from 15 to 36 kg	
 <p><b>L4</b> "RECARO Start".</p>	 <p><b>L5</b> "KLIPPAN Optima". From the age of 6 years (approximately 22 kg), the booster is used on its own.</p>

Refer to the advice given on the label present on both sides of the sun visor(s):

### CAUTION

#### RISK OF DEATH OR SERIOUS INJURY.

DO NOT install a child seat facing rearwards on the front seat, which is fitted with an airbag.

## Installing child seats attached using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) in accordance with the weight of the child and the seat in the vehicle.

Weight of the child and indicative age					
Seat		Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (c) with height adjuster		U (R)	U (R)	U (R)	U (R)
Front passenger seat (c) without height adjuster		U	U	U	U
<b>Saloon</b>					
Outer rear seats		U	U	U	U
Centre rear seat		X	X	X	X
<b>SW</b>					
Outer rear seats		U	U	U	U
Centre rear seat		X	X	X	X

**a:** universal child seat, child seat that can be installed in all vehicles using a seat belt.

**b:** group 0, from birth to 10 kg. Shells seats and baby carriers cannot be installed in the front passenger seat.

**c:** consult the legislation in force in your country before installing your child on this seat.

**U:** seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearwards-facing" and/or "forwards-facing".

**U (R):** idem **U**, with the vehicle's seat adjusted to the highest position and as far back as possible.

**X:** seat position not suitable for installation of a child seat for the weight class indicated.

## Advice on child seats

**!** The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle. Move the seat forwards if necessary.

For optimum installation of the "forwards-facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forwards-facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rearwards-facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

### Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- a child or children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors and rear windows, use the "Child lock".


Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

## "ISOFIX" mountings


Your vehicle has been approved in accordance with the **latest ISOFIX regulations**.

The seats, represented below, are fitted with regulation ISOFIX mountings:


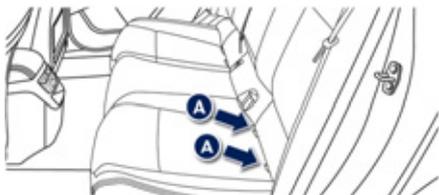


There are three rings for each seat:

- two rings **A**, located between the vehicle seat back and cushion, indicated by a label,
- a ring **B**, behind the seat, referred to as the **TOP TETHER** for fixing the upper strap.

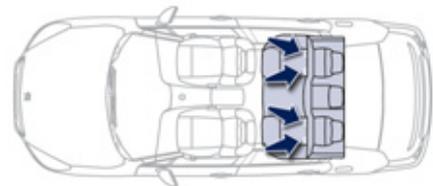

Saloon

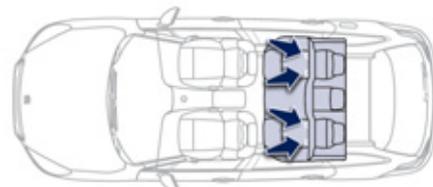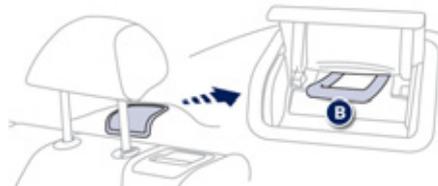

SW



This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are easily secured on the two rings **A**.

Some also have an **upper strap** which is attached to ring **B**.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on ring **B** and tighten the upper strap.

**!** The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, refer to the table showing the locations for installing ISOFIX child seats.

## ISOFIX child seat recommended by PEUGEOT and approved for your vehicle

**RÖMER Duo Plus ISOFIX** (size category **B1**)

**Group 1: from 9 to 18 kg**



Installed in the forwards-facing position.  
Fitted with an upper strap to be secured on the upper ring **B**, referred to as the TOP TETHER.  
Three seat body angles: sitting, reclining, lying.

**i** This child seat can also be used on seats which are not fitted with ISOFIX mountings. In this case, it must be attached to the vehicle seat using the three point seat belt.

**Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.**

## Locations for installing ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child/indicative age									
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years				
Type of ISOFIX child seat	Shell		"rearwards-facing"			"rearwards-facing"		"forwards-facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Front passenger seat 	Not Isofix									
<b>Saloon</b>										
Outer rear seats 	X		IL-SU			IL-SU		IUF IL-SU		
Centre rear seat 	Not Isofix									
<b>SW</b>										
Outer rear seats 	X		IL-SU			IL-SU		IUF IL-SU		
Centre rear seat 	Not Isofix									

**IUF:** seat suitable for the installation of an Isofix **U**niversal seat, "**F**orwards-facing" secured using the top belt.

**IL-SU:** seat suitable for the installation of an Isofix **S**emi-**U**niversal seat either:


- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay,
- a shell seat fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the paragraph "Isofix mountings".

**X:** seat not suitable for the installation of a child seat or shell for the weight group indicated.

## Electric child lock

Remote control system to prevent opening of the rear doors using their interior controls and use of the rear electric windows.

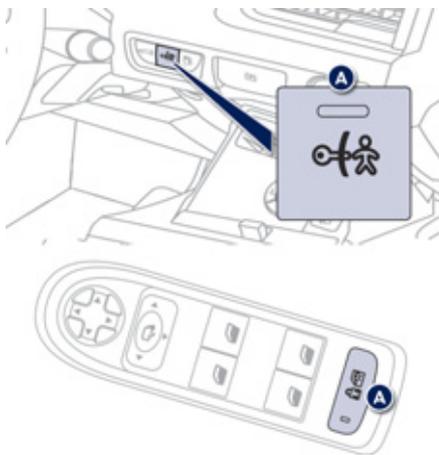

### Switching on

☞ With the ignition on, press button **A**.  
The indicator lamp on button **A** comes on, accompanied by a message to confirm that the child lock is on.  
This indicator lamp remains on until the child lock is switched off.  
It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control panel.


### Switching off

☞ With the ignition on, press button **A** again.  
The indicator lamp on button **A** goes off, accompanied by a message to confirm that the child lock is off.  
This indicator lamp remains off while the child lock is switched off.

! Any other status of the indicator lamp indicates a fault with the electric child lock.  
Have it checked by a PEUGEOT dealer or a qualified workshop.

! This system is independent and in no circumstances does it take the place of the central locking control.  
Check the status of the child lock each time you switch on the ignition.  
Always remove the key from the ignition when leaving the vehicle, even for a short time.  
In the event of a serious impact, the electric child lock is switched off automatically to permit the exit of the rear passengers.

## Direction indicators

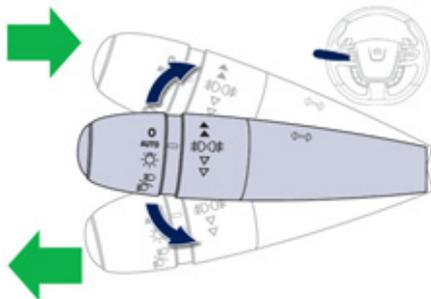


- ☞ Lower the lighting control stalk fully when moving to the left.
- ☞ Raise the lighting control stalk fully when moving to the right.

**i** If you forget to cancel the direction indicators for more than twenty seconds, the volume of the audible signal will increase if the speed is above 40 mph (60 km/h).

### "Motorway" function

Move the stalk briefly upwards or downwards, without going beyond the point of resistance; the corresponding direction indicators will flash 3 times.

## Hazard warning lamps

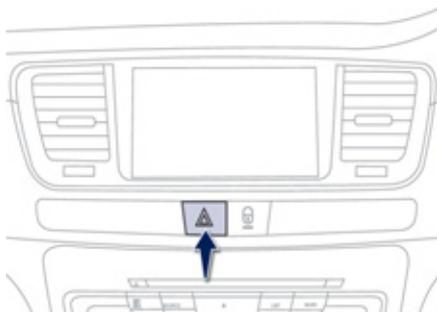

Press the button, the direction indicators flash. They can operate with the ignition off.

### Automatic operation of hazard warning lamps

When braking in an emergency, depending on the rate of deceleration, as well as when the ABS regulation is invoked or in the event of an impact, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- ☞ You can also switch them off by pressing the button.

## Emergency or assistance call



This system allows you to make an emergency or assistance call to the emergency services or to the dedicated PEUGEOT service.

For more information on the use of this function, refer to the "Audio and telematics" section.

## Horn

Audible warning system to alert other road users to an imminent danger.




☞ Press the central part of the multifunction steering wheel.

- i** Use the horn moderately and only in the following circumstances:
- immediate danger,
  - 
  - approaching a location lacking visibility.

# Tyre under-inflation detection

System which automatically checks the pressure of the tyres while driving.

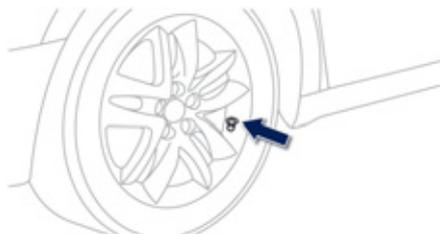

Sensors fitted in each valve trigger a warning in the event of malfunction (speed above 12 mph (20 km/h)).

The spare wheel is not fitted with a sensor.

**i** The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

## Under-inflated tyre

A message appears in the instrument panel screen, accompanied by an audible signal, to identify the wheel concerned.

☞ Check the tyre pressures as soon as possible.

This check must be carried out when the tyres are cold.

## Puncture



This warning lamp and the **STOP** warning lamp come on, accompanied by an audible signal and a message in the instrument panel screen identifying the wheel concerned.

- ☞ Stop immediately, avoiding any sudden movement of the steering wheel and the brakes.
- ☞ Change the damaged wheel (punctured or very deflated tyre), and have the tyre pressure checked as soon as possible.

## Sensor(s) not detected or faulty

A message appears in the instrument panel screen, accompanied by an audible signal, to identify the wheel or wheels which are not detected or to indicate a fault in the system. Contact a PEUGEOT dealer or a qualified workshop to replace the faulty sensor(s).

**i** This message is also displayed when one of the wheels is away from the vehicle (being repaired) or when one or more wheels without a sensor are fitted.

**!** All repairs and changing of tyres on a wheel fitted with this system must be carried out by a PEUGEOT dealer or a qualified workshop.

If, when changing a tyre, you install a wheel which is not detected by your vehicle (example: fitting of snow tyres), you must have the system reinitialised by a PEUGEOT dealer or a qualified workshop.

**i** This system does not avoid the need to have the tyre pressures checked regularly (refer to "Identification markings") to ensure that the optimum dynamic performance of the vehicle is maintained and prevent premature wear of the tyres, particularly in arduous driving conditions (heavy load, high speed).

The tyre pressures must be checked cold, at least once a month. Remember to check the pressure of the spare wheel. The tyre under-inflation detection system may experience temporary interference due to electromagnetic signals on a frequency close to that used by the system.

# Electronic stability programme (ESP)

Electronic stability programme (ESP)

incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution system (EBFD),
- the emergency braking assistance,
- the traction control (ASR),
- the dynamic stability control (DSC).

## Definitions

### Anti-lock braking system (ABS) and electronic brake force distribution system (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and offers improved control, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

### Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

### Anti-skid regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

### Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

## Snow driving assistance (Intelligent Traction Control)

Your vehicle has a system to help driving on snow: **Intelligent Traction Control**.

This automatic system continuously checks for situations of difficult surface adhesion that could make it difficult to move off or make progress on deep fresh snow or compacted snow.

In these situations, **Intelligent Traction Control** takes over from the **ASR** system, limiting the amount of wheel slip to provide the best traction and trajectory control, even without snow tyres and with or without chains. In extremely severe conditions (snow on top of ice, sand, deep mud...), it can be useful to deactivate the **ESP/ASR** systems to allow a degree of wheel spin and so recover grip.

## Operation

### Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is a fault with the ABS, which could cause loss of control of the vehicle when braking.



When this warning lamp comes on, coupled with the **STOP** warning lamp, accompanied by an audible signal and a message, it indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.


**You must stop as soon as it is safe to do so.** In both cases, contact a PEUGEOT dealer or a qualified workshop.



When changing wheels (tyres and rims), make sure that these are approved for your vehicle. Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



**In emergency braking, press very firmly without releasing the pressure.**

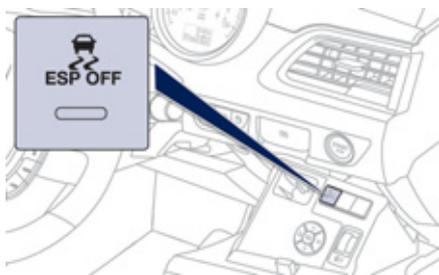

## Dynamic stability control (DSC)

### Activation

This system is activated automatically each time the vehicle is started.

It comes into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this warning lamp in the instrument panel.

### Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can move freely and regain grip.



☞ Press the **"ESP OFF"** button.



This warning lamp and the indicator lamp in the button come on: the DSC system no longer acts on the operation of the engine.



### Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h).

☞ Press the **"ESP OFF"** button again to reactivate it manually.

## Operating fault



If this warning lamp comes on, accompanied by an audible signal and a message in the instrument panel screen, this indicates a fault with the system.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.



The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed. The correct operation of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the PEUGEOT assembly and operation procedures. After an impact, have the system checked by a PEUGEOT dealer or a qualified workshop.


# Seat belts

## Front seat belts



The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

## Rear seat belts

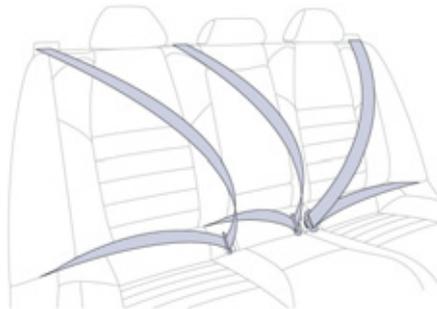

The rear seats are each fitted with a seat belt, three-point anchorages with inertia reel and force limiter (except for the centre rear seat).




### Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.


### Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

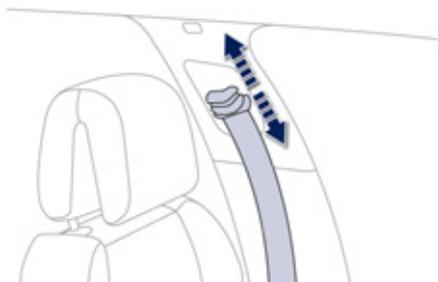

### Front seat belt height adjustment

☞ To adjust the anchorage point, squeeze the control and slide it until you find a notch.

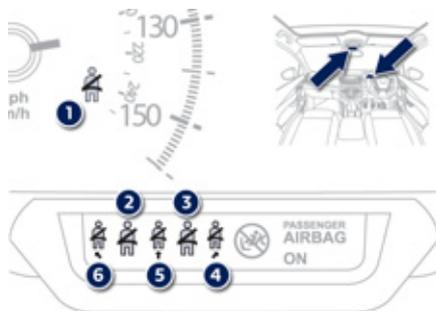

### Seat belt not fastened/ unfastened warning lamps

1. Front and/or rear seat belts not fastened/  
unfastened warning lamp in the instrument  
panel.
2. Front left seat belt warning lamp.
3. Front right seat belt warning lamp.
4. Rear right seat belt warning lamp.
5. Rear centre seat belt warning lamp.
6. Rear left seat belt warning lamp.



From approximately 12 mph (20 km/h), the warning lamp(s) flash for two minutes accompanied by an audible signal. Once these two minutes have elapsed, the warning lamp(s) remain on until the driver or one or more passengers fasten their seat belt.

### Front and rear seat belt warning lamps



On switching on the ignition, warning lamp 1 comes on in the instrument panel and the corresponding warning lamp 2 to 6 comes on in red in the passenger's seat belt and front airbag warning lamp display if the corresponding seat belt is not fastened or is unfastened.

**i** The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off. Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use. Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide.

Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

## Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

## In the event of an impact

**Depending on the nature and seriousness of the impact**, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on. Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

# Airbags

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions.


It supplements the action of the force-limiting seat belts (with the exception of the rear centre passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and protect the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide optimum protection in these situations.

## **!** The airbags do not operate when the ignition is switched off.

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

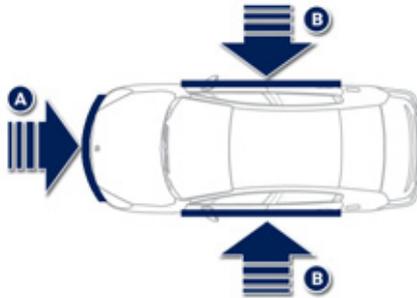

## Impact detection zones


- A. Front impact zone.
- B. Side impact zone.

**i** Deployment of the airbag(s) is accompanied by a slight emission of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience slight irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.

## Front airbags

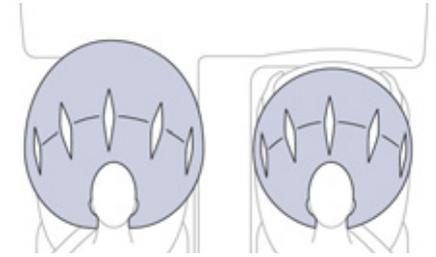


System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

## Deployment

The airbags are deployed simultaneously, unless the passenger's front airbag is deactivated, in the event of a serious front impact to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.

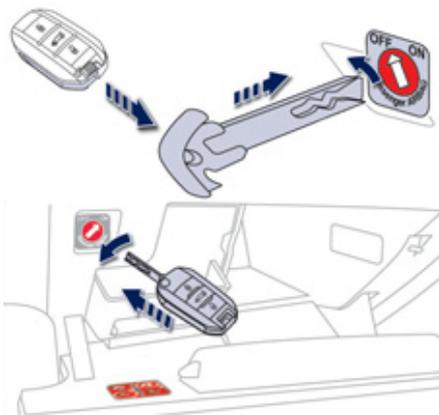

## Deactivation

Only the passenger's front airbag can be deactivated:

- ☞ **with the ignition off**, insert the key in the passenger airbag deactivation switch,
- ☞ turn it to the **"OFF"** position,
- ☞ then, remove the key keeping the switch in the new position.



According to version, this warning lamp comes on either in the instrument panel or in the seat belt and passenger's front airbag warning lamp display when the ignition is on and until the airbag is reactivated.



To assure the safety of your child, the passenger's front airbag must be deactivated when you install a "rear facing" child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

## Reactivation

When you remove the child seat, turn the switch to the **"ON"** position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.



With the ignition on, this warning lamp comes on in the seat belt and passenger's front airbag warning lamp display for approximately one minute, if the passenger's front airbag is activated.

## Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the instrument panel screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If this warning lamp flashes, contact a PEUGEOT dealer or a qualified workshop. The passenger's front airbag may no longer be deployed in the event of a serious impact.



If at least one of the two airbag warning lamps come on continuously, do not install a child seat on the front passenger seat. Have it checked by a PEUGEOT dealer or qualified workshop.

## Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder. Each lateral airbag is fitted in the seat backrest frame, door side.

### Deployment

The lateral airbags are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

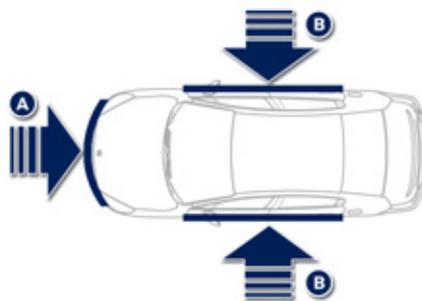

### Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

## Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head. Each curtain airbag is built into the pillars and the upper passenger compartment area.

### Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

### Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed. In the event of a rear or front collision, the airbag is not deployed.

**! For the airbags to be fully effective, observe the following safety rules:**

Sit in a normal upright position.  
Wear a correctly adjusted seat belt.  
Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.  
After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.  
All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.  
Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

**Front airbags**

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.  
Passengers must not place their feet on the dashboard.  
If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.  
Never remove or pierce the steering wheel or hit it violently.

**Lateral airbags**

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer (see "Practical information - § Accessories").  
Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.  
Do not sit with the upper part of the body any nearer to the door than necessary.

**Curtain airbags**

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.  
Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

## Temporary puncture repair kit


Complete system consisting of a compressor and a sealant cartridge which permits **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.

### Access to the kit



This kit is installed in the storage box, under the boot floor.

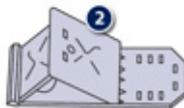

### List of tools

All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for other purposes.

1. 12 V compressor.  
Contains a sealant cartridge for the temporary repair of a tyre and can also be used for adjusting tyre pressures.
2. One chock\* to block one of the front wheels of the vehicle.
3. Removable towing eye.  
See "Towing the vehicle".

\* Depending on destination country or equipment.

## Description of the kit




- A. "Sealant" or "Air" position selector.
- B. On "I"/off "O" switch.
- C. Deflation button.
- D. Pressure gauge (in bar or p.s.i.).
- E. Compartment housing:
  - a cable with adaptor for 12 V socket,
  - various inflation adaptors for accessories, such as balls, bicycle tyres...



- F. Sealant cartridge.
- G. White pipe with cap for repair.
- H. Black pipe for inflation.
- I. Speed limit sticker.

**i** The speed limit sticker I must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use. Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

## Repair procedure

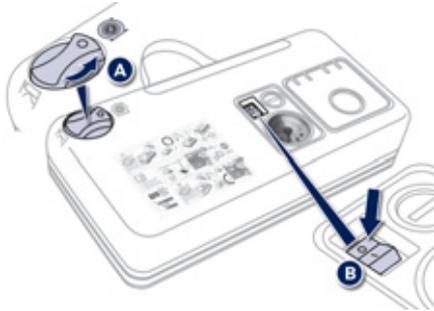


### 1. Sealing


- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "sealant" position.
- ☞ Check that the switch **B** is in position "O".



**i** Avoid removing any foreign bodies which have penetrated into the tyre.

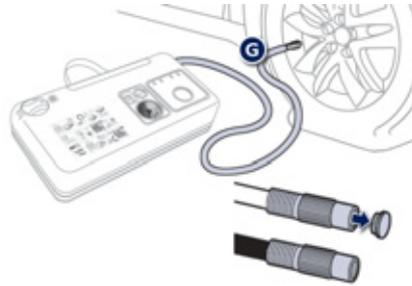


- ☞ Uncoil the white pipe **G** fully.
- ☞ Unscrew the cap from the white pipe.
- ☞ Connect the white pipe to the valve of the tyre to be repaired.

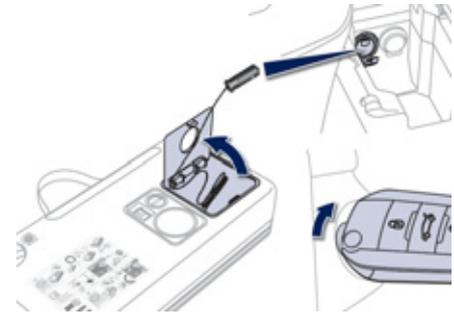


- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.

**!** Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes. Keep it out of reach of children.

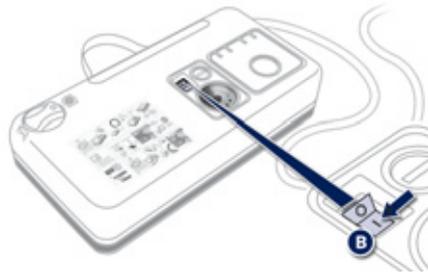

- ☞ Switch on the compressor by moving the switch **B** to position "I" until the tyre pressure reaches 2.0 bars. The sealant is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing).


**i** If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for assistance.

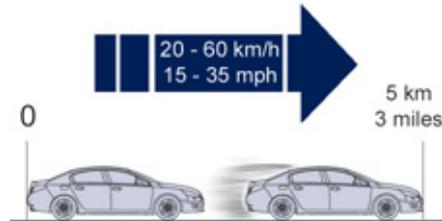

- ☞ Remove the kit and screw the cap back on the white pipe. Take care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.
- ☞ Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph [20 and 60 km/h]), to plug the puncture.
- ☞ Stop to check the repair and the tyre pressure using the kit.


### **i** Tyre under-inflation detection

If the vehicle is fitted with tyre under-inflation detection, the under-inflation warning lamp will remain on after the wheel has been repaired until the system is reinitialised by a PEUGEOT dealer or a qualified workshop.

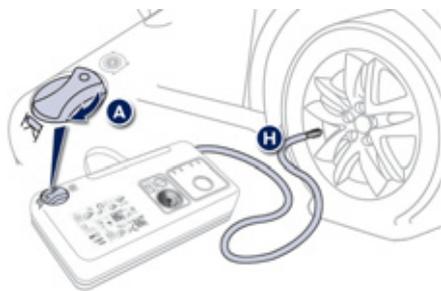

## 2. Inflation

- ☞ Turn the selector **A** to the "air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel.

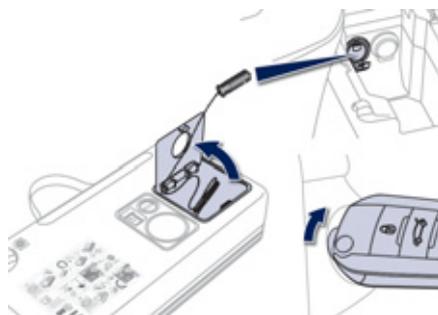

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.



☞ Visit a PEUGEOT dealer or a qualified workshop as soon as possible. You must inform the technician that you have used this kit. After inspection, the technician will inform you whether the tyre can be repaired or must be replaced.



- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).  
A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer or qualified workshop for assistance.
- ☞ Remove and stow the kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).


## Removing the cartridge



- ☞ Stow the black pipe.
- ☞ Detach the angled base from the white pipe.
- ☞ Support the compressor vertically.
- ☞ Unscrew the cartridge from the bottom.


**!** Beware of discharges of fluid.  
The expiry date of the fluid is indicated on the cartridge.  
The sealant cartridge is designed for single use; even if only partly used, it must be replaced.  
After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a PEUGEOT dealer.  
Do not forget to obtain a new sealant cartridge, available from PEUGEOT dealers or from a qualified workshop.

## Checking tyre pressures/ inflating accessories

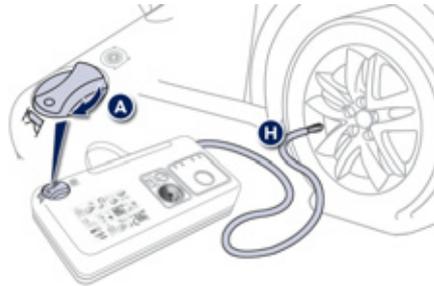

You can also use the compressor, without injecting any product, to:

- check or adjust the pressure of your tyres,
  - inflate other accessories (balls, bicycle tyres...).
- ☞ Turn the selector **A** to the "Air" position.
  - ☞ Uncoil the black pipe **H** fully.
  - ☞ Connect the black pipe to the valve of the wheel or accessory.

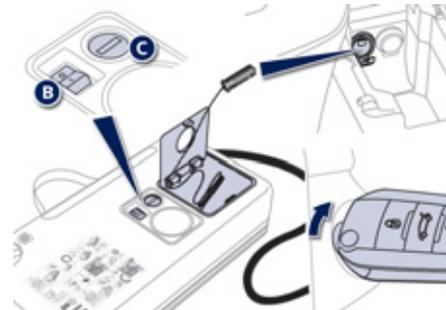


- ☞ Connect the compressor's electrical connector to the vehicle's 12 V socket.
- ☞ Start the vehicle and let the engine run.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "**I**"; to deflate: switch **B** in position "**O**" and press button **C**), according to the vehicle's tyre pressure label or the accessory's pressure label.
- ☞ Remove the kit then stow it.

# Changing a wheel

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.


## Access to the tools

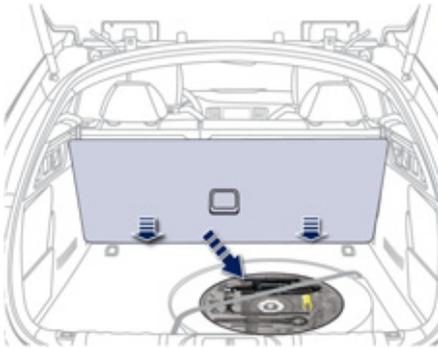

The tools are installed in the boot under the floor.

To gain access to them:

- ☞ open the boot,
- ☞ position the floor vertically (SW: in its guide) for access to the tools.

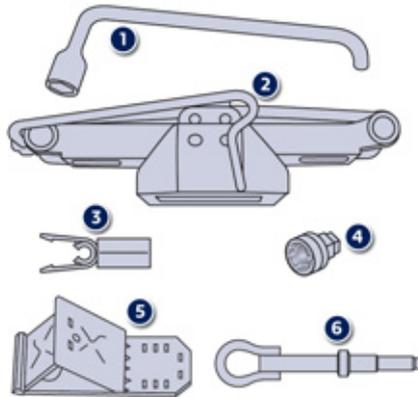

## List of tools

All of these tools are specific to your vehicle and can vary according to the level of equipment. Do not use them for other purposes.

1. Wheelbrace.  
For removing the wheel trim and removing the wheel bolts.
2. Jack with integral handle.  
For raising the vehicle.

3. "Bolt cover" tool.  
For removing the bolt protectors (covers) on alloy wheels.
4. Socket for the security bolts (located in the glove box).  
For adapting the wheelbrace to the special "security" bolts.
5. One wheel chock for immobilising the vehicle.
6. Towing eye.  
See "Towing the vehicle".

### **i** Wheel with trim


**When refitting the wheel**, refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.

## Access to the spare wheel


The spare wheel is installed in the boot under the floor.

According to country, the spare wheel may be steel, alloy or of the "space-saver" type.

To gain access to it, refer to the paragraph "Access to the tools" on the previous page.

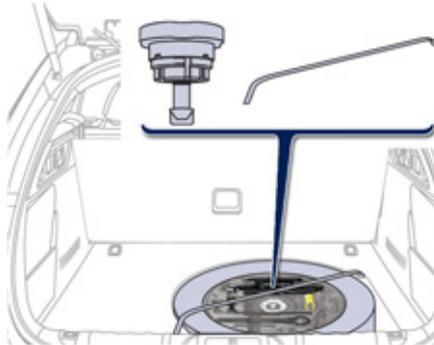


Depending on your vehicle's equipment, the spare wheel is secured either by a strap or a central bolt. For the bolt, the procedure is given below.

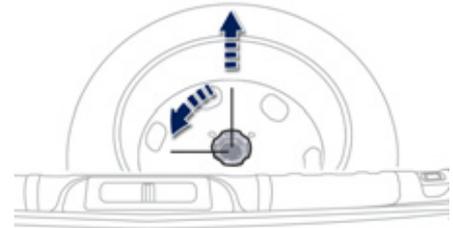

### Taking out the wheel

- ⌚ Unscrew the yellow central bolt.
- ⌚ Raise the spare wheel towards you from the rear.
- ⌚ Take the wheel out of the boot.

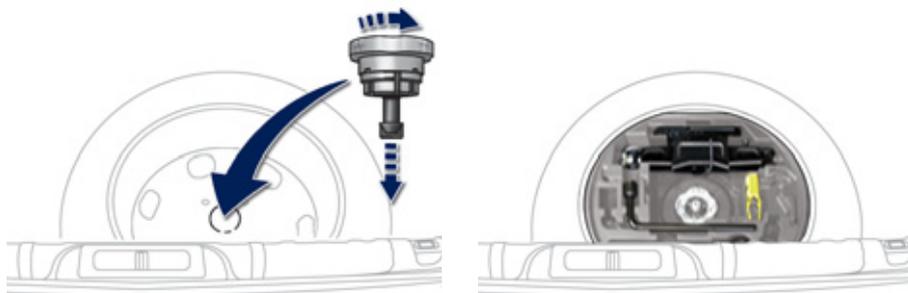

### Putting the wheel back in place

- ☞ Put the wheel back in its housing.
  - ☞ Unscrew the yellow central bolt by a few turns then put it in place in the centre of the wheel.
  - ☞ Tighten fully until the central bolt clicks to retain the wheel correctly.
- ☞ Put the box back in place in the centre of the wheel and clip it.
  - ☞ Put the polystyrene storage box back in place.

### **i** Tyre under-inflation detection

The spare wheel is not fitted with a sensor. The punctured wheel must be repaired by a PEUGEOT dealer or a qualified workshop.

## Removing a wheel


### **i** Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and not slippery.

Apply the parking brake unless it has been programmed to automatic mode, switch off the ignition and engage first gear\* to block the wheels.

Check that the braking warning lamp and the **P** warning lamp in the parking brake control lever come on.


The occupants must get out of the vehicle and wait where they are safe. Never go underneath a vehicle raised using a jack; use an axle stand.

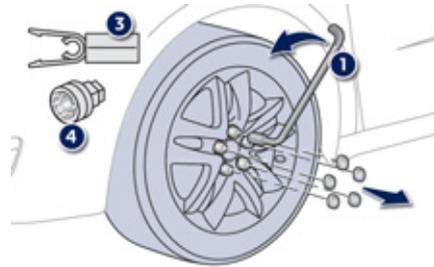


### List of operations

- ☞ Remove the bolt cover from each of the bolts using the tool **3** (according to equipment).
- ☞ Fit the security socket **4** on the wheelbrace **1** to slacken the security bolt (if fitted).
- ☞ Slacken the other bolts using the wheelbrace **1** only.


\* Position **R** for the electronic gear control gearbox; **P** for the automatic gearbox.

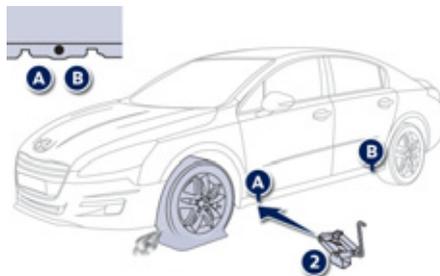

- ☞ Place the jack **2** in contact with one of the two front **A** or rear **B** locations provided on the underbody, whichever is closest to the wheel to be changed.

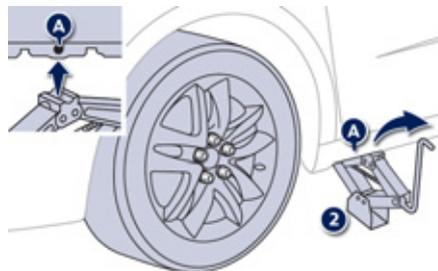


- ☞ Extend the jack **2** until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location **A** or **B** used.

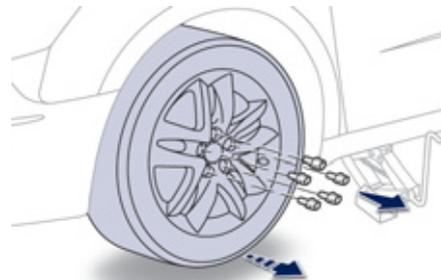

- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.

## Fitting a wheel

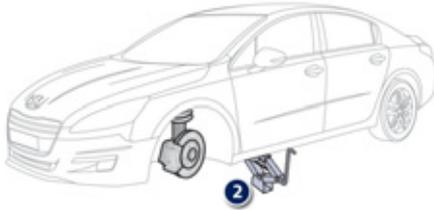

### **i** Fitting the "space-saver" spare wheel


If your vehicle is fitted with alloy wheels, when tightening the bolts on fitting, it is normal to notice that the washers do not come into contact with the "space-saver" spare wheel. The wheel is secured by the conical surface of each bolt.

### After changing a wheel

To store the punctured wheel in the boot correctly, first remove the central cover. When using the "space-saver" type spare wheel, do not exceed 50 mph (80 km/h).


Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer or a qualified workshop without delay.

Have the punctured wheel repaired and refitted to the vehicle as soon as possible.

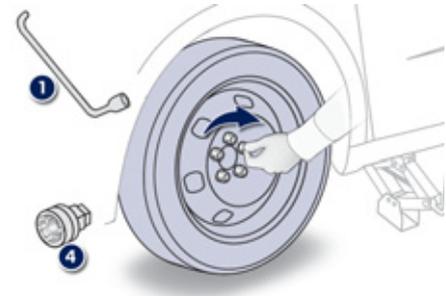

### List of operations

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the security bolt using the wheelbrace **1** fitted with the security socket **4**.
- ☞ Pre-tighten the other bolts using the wheelbrace **1** only.

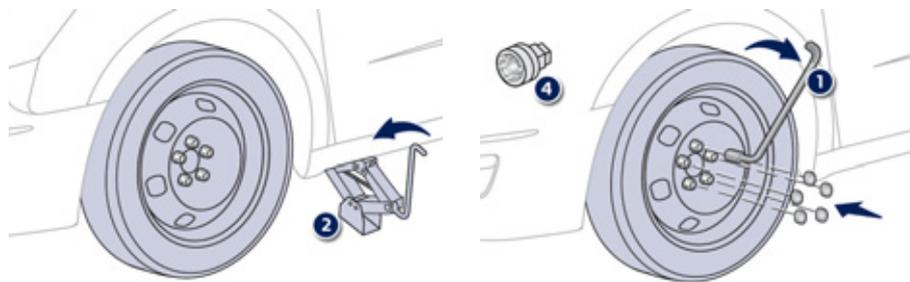


- ☞ Lower the vehicle fully.
- ☞ Fold the jack 2 and detach it.

- ☞ Tighten the security bolt using the wheelbrace 1 fitted with the security socket 4.
- ☞ Tighten the other bolts using the wheelbrace 1 only.
- ☞ Refit the bolt covers on each of the bolts (according to equipment).
- ☞ Store the tools in the box.

# Changing a bulb


## Front lamps

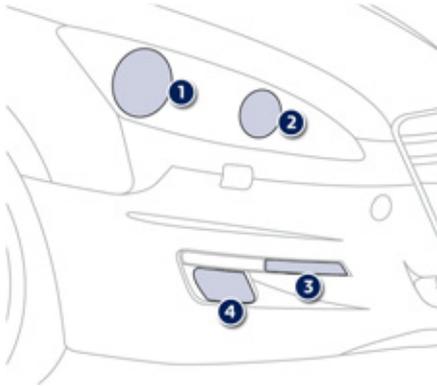

### Model with xenon and directional headlamps

1. Daytime running lamps/sidelamps (light emitting diodes - LEDs).
2. Directional dipped/main beam headlamps (D1S-35W).
3. Direction indicators (PY21-21W).
4. Foglamps (directional according to version) (H8).

**i** In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

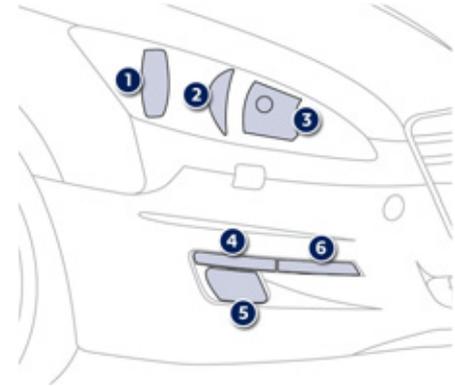

### Model with halogen headlamps

1. Dipped and main beam headlamps (H7-55W).
2. Sidelamps (W5-5W).
3. Main beam headlamps (H7-55W).
4. Daytime running lamps (SP13-13W).
5. Foglamps (directional according to version) (H8).
6. Direction indicators (PY21-21W).

For H7 type bulbs with lugs... take care to observe their correct installation so as to ensure the best lighting performance.

! The headlamps are fitted with polycarbonate glass with a protective coating:

- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- ☞ use a sponge and soapy water,
- ☞ when using a high pressure washer on persistent marks, do not direct at the lamps or their outlines for too long, so as not to damage their protective coating and seals.


- ☞ Do not touch the bulb directly with your fingers, use lint-free cloths.

Changing a bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).

It is imperative to use only anti-ultraviolet (UV) type bulbs in order not to damage the headlamp. Always replace a failed bulb with a new bulb with the same type and specification.

### ! Risk of electrocution


Xenon bulbs (D1S-35W) must be replaced by a PEUGEOT dealer or a qualified workshop.

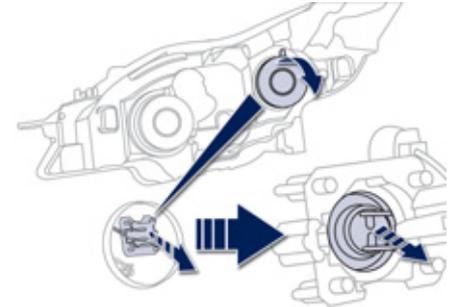

### Dipped beam headlamps (halogen model)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Extract the bulb by pulling and change it.


For reassembly, carry out these operations in reverse order.

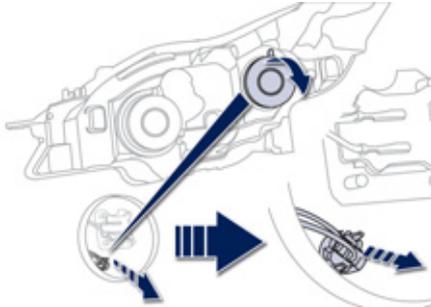

### Sidelamps (halogen model)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Unclip the bulb holder.
- ☞ Remove the bulb by pulling it out and change it.

For reassembly, carry out these operations in reverse order.

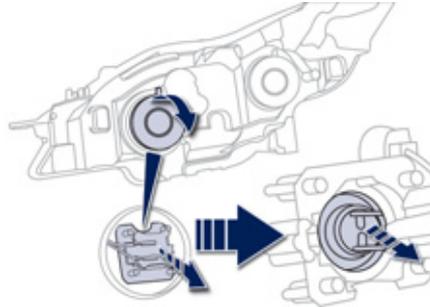

### Main beam headlamps (halogen model)



- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling it out and change it.

For reassembly, carry out these operations in reverse order.

### **i** Dipped and main beam headlamps (xenon model)

D1S xenon bulbs must be changed by a PEUGEOT dealer or a qualified workshop, as there is a risk of electrocution.

It is recommended that the D1S bulbs are changed at the same time when one of them fails.

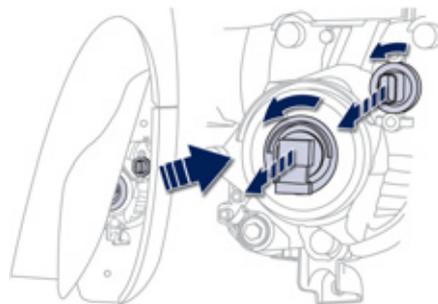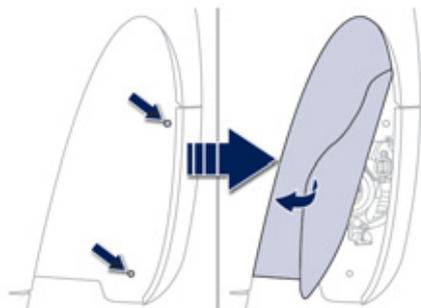


## Foglamps and daytime running lamps

- ☞ Turn the wheel fully inwards for easy access to the wheel arch liner.
- ☞ Remove the two fixing screws for the access flap, located in the wheel arch.
- ☞ Pull away the wheel arch liner.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Disconnect the bulb holder connector.
- ☞ Pull the bulb and change it.


For reassembly, carry out these operations in reverse order.

You may also contact a PEUGEOT dealer or a qualified workshop to have these bulbs replaced.

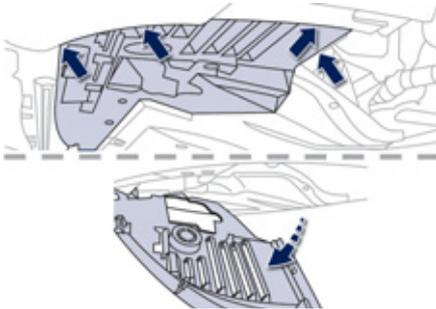

## Direction indicators


- ☞ Lie down under the vehicle.
- ☞ Remove the screws securing the underbody shield.
- ☞ Remove the underbody shield.

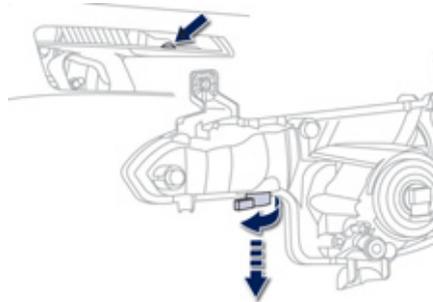

- ☞ Turn the bulb holder a quarter turn and pull it out.
- ☞ Replace the faulty bulb.

For reassembly, carry out these operations in reverse order.

You can also contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.

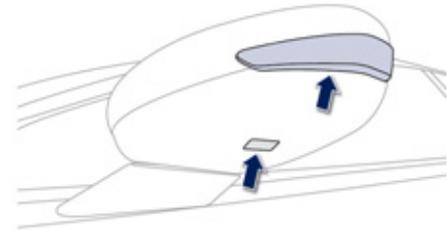


## Door mirror spotlamps

You should contact a PEUGEOT dealer or a qualified workshop for the replacement of the light emitting diode - LED.


## Integrated direction indicator side repeaters

You should contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.

## Rear lamps (Saloon)

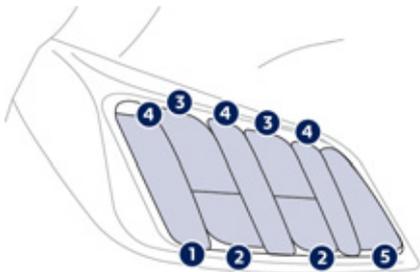


1. Brake lamps/sidelamps (light emitting diodes - LEDs).
2. Reversing lamps (P21W).
3. Direction indicators (PY21W amber).
4. Sidelamps (light emitting diodes - LEDs).
5. Foglamps (H21W).

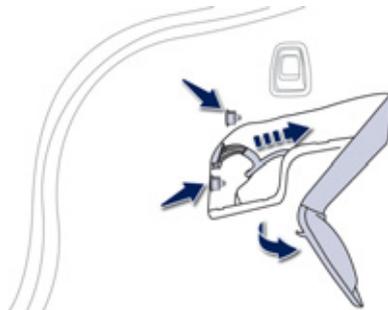

### Reversing lamp, direction indicator and foglamp bulbs

- ☞ Open the boot, then the plastic cover.
- ☞ Remove the two lamp unit fixing nuts.
- ☞ Extract the lamp unit carefully from the outside.
- ☞ Disconnect the electrical connector.

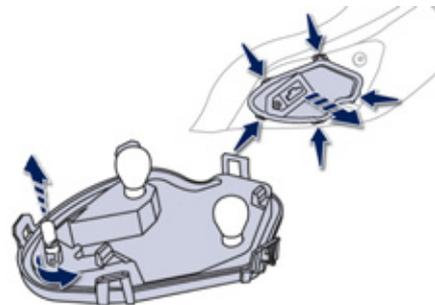


- ☞ Spread the six tabs and remove the bulb holder.
- ☞ Turn the bulb a quarter of a turn and pull it out.

For reassembly, carry out these operations in reverse order.


### **i** Changing the light emitting diode-LED lamps

For replacement, contact a PEUGEOT dealer or qualified workshop.

## Rear lamps (SW)

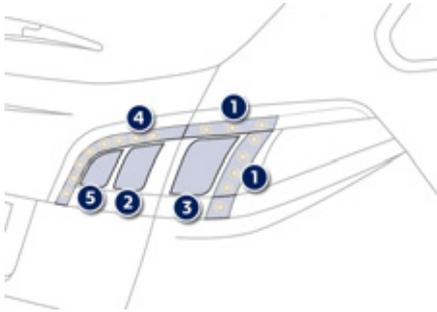


1. Brake lamps (light emitting diodes - LEDs).
2. Reversing lamps (W19W).
3. Direction indicators (PY21W amber).
4. Sidelamps (light emitting diodes - LEDs).
5. Foglamps (light emitting diodes - LEDs).

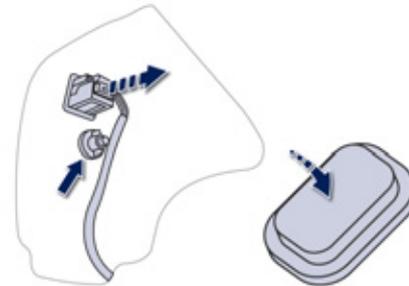

### Direction indicators (on the wings)

- ☞ Open the boot then remove the access cover.
- ☞ Remove the sealing foam.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lamp fixing nut.



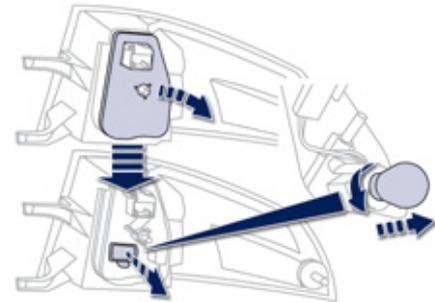


- ☞ Carefully remove the lamp unit from outside.
- ☞ Remove the sealing foam.
- ☞ Unclip the bulb holder.
- ☞ Turn the bulb a quarter of a turn and pull it out.

For reassembly, carry out these operations in reverse order.

### **i** Changing the light emitting diode-LED lamps

For replacement, contact a PEUGEOT dealer or qualified workshop.

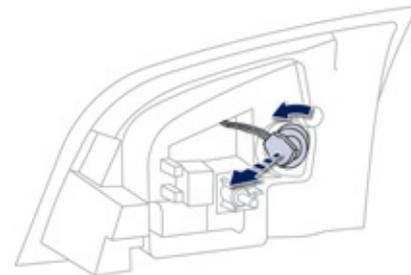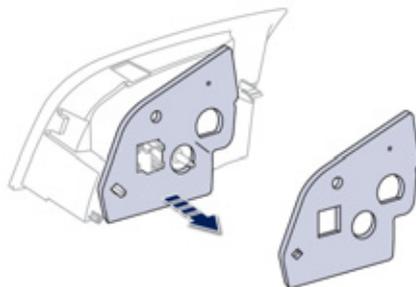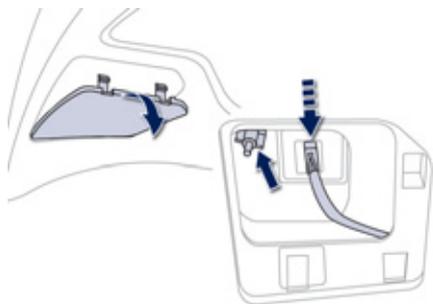


## Reversing lamp (tailgate)

- ☞ Open the tailgate and then remove the access cover.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lamp fixing nut.


- ☞ Carefully remove the lamp from the outside.
- ☞ Remove the sealing foam.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- For reassembly, carry out these operations in reverse order.

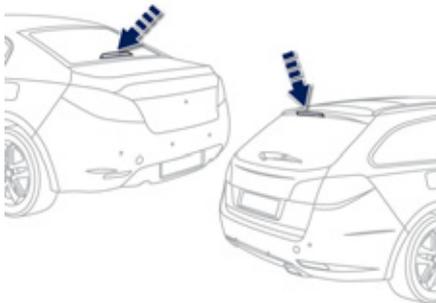

### Third brake lamp (light emitting diodes - LEDs)

Contact a PEUGEOT dealer or qualified workshop.

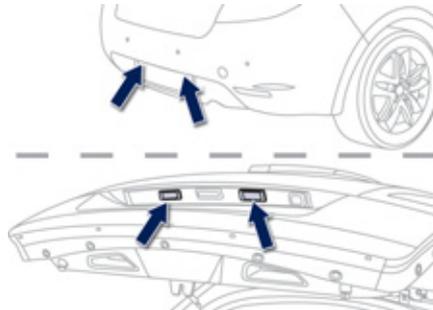


### Number plate lamps

- ☞ Insert a thin screwdriver into one of the outer holes of the lens.
- ☞ Push it outwards to unclip.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lens.
- ☞ Pull the bulb out and change it.

## Changing a fuse

Procedure for replacing a failed fuse with a new fuse to rectify a failure of the corresponding function.

### Access to the tools

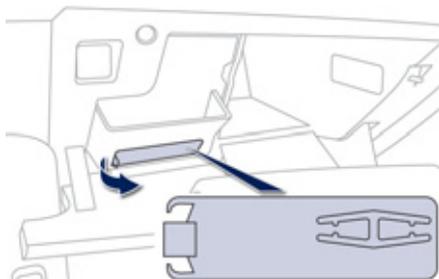


The extraction tweezers and spare fuses are located in the glove box.

### Changing a fuse



Good

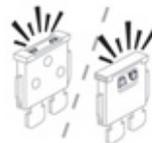

Failed

Before changing a fuse, the cause of the failure must be identified and rectified.

- ☞ Identify the failed fuse by checking the condition of its filament.
- ☞ Use the special tweezers to extract the fuse from its housing.
- ☞ Always replace the faulty fuse with a fuse of the same rating.
- ☞ Check that the number marked on the fusebox, the rating marked on the fuse and the following tables all agree.

### **i** Installing electrical accessories


Your vehicle's electrical system is designed to operate with standard or optional equipment.

Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer or a qualified workshop.



PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.


## Fuses behind the glove box

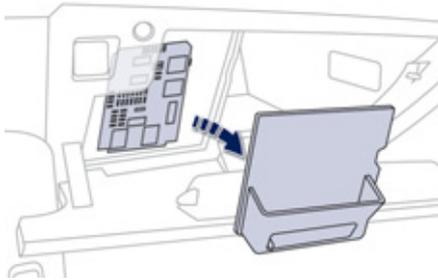


Fuse N°	Rating (A)	Functions
F6 A or B	15	Audio system.
F8	3	Alarm.
F13	10	Front cigar lighter.
F14	10	Front 12 V socket.
F16	3	Rear courtesy lamp, rear map reading lamps.
F17	3	Rear courtesy lamp, courtesy mirror.
F28 A or B	15	Audio system.
F30	20	Rear wiper.
F32	10	Audio amplifier.

### Access to the fuses

- ☞ Open the glove box.
- ☞ Remove the plastic cover.

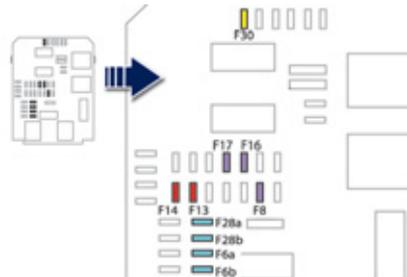

## Dashboard fuses

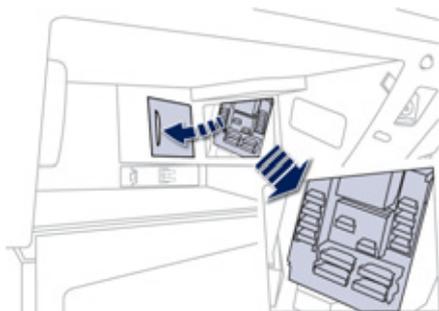


The fusebox is placed in the lower dashboard (right-hand side).


### Access to the fuses

- ☞ Open the folding panel then apply pressure to bypass the stops.

Fuse N°	Rating (A)	Functions
F3	15	Driver's electric window panel, 12 V socket for rear seats.
F4	15	12 V socket in boot.
F5	30	One-touch rear window.
F6	30	One-touch front window.
F11	20	Trailer unit.
F12	20	Audio amplifier.
F15	20	Panoramic sunroof blind (SW).
F16	5	Driver's electric window switch panel.

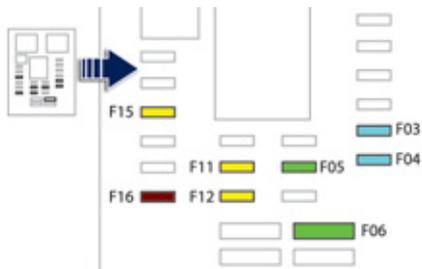

## Engine compartment fuses

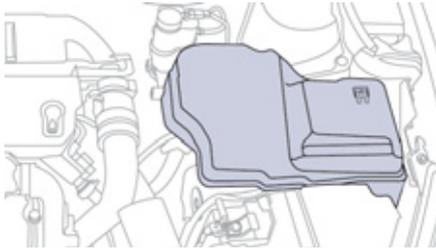


The fusebox is placed in the engine compartment near the battery.

Fuse N°	Rating (A)	Functions
F20	15	Front/rear screenwash pump.
F21	20	Headlamp wash pump.
F22	15	Horn.
F23	15	Right-hand main beam headlamp.
F24	15	Left-hand main beam headlamp.
F27	5	Left hand lamp mask.
F28	5	Right hand lamp mask.

### Access to the fuses

- ☞ Unclip the cover.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure correct sealing of the fusebox.

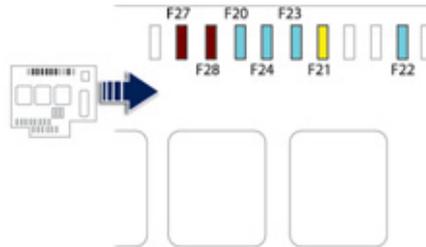

## 12 V battery


Procedure for charging your battery when it is flat or for starting the engine using another battery.



**!** The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery.  
Failure to observe this recommendation may cause premature wear of the battery.

**i** After refitting the battery, the Stop & Start system will only be active after several hours depending on the climatic conditions and the state of charge of the battery (up to about 8 hours).


### Access to the battery

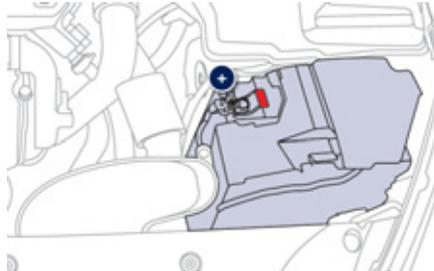

The battery is located under the bonnet. To gain access to it:

- ☞ open the bonnet using the interior release lever, then the exterior safety catch,
- ☞ remove the plastic cover to gain access to the two terminals,
- ☞ unclip the fusebox to remove the battery, if necessary.

### Disconnecting the cables

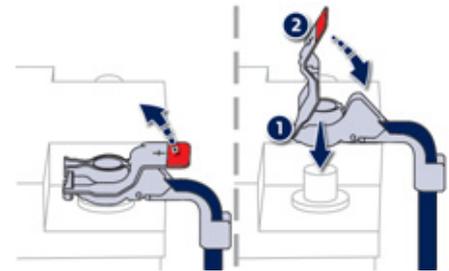


- ☞ Raise the locking tab fully.

### Reconnecting the cables


- ☞ Position the open clip 1 of the cable on the positive terminal (+) of the battery.
- ☞ Press vertically on the clip 1 to position it correctly against the battery.
- ☞ Lock the clip by spreading the positioning lug and then lowering the tab 2.

**!** Do not force the tab as locking will not be possible if the clip is not positioned correctly; start the procedure again.

## Starting using another battery

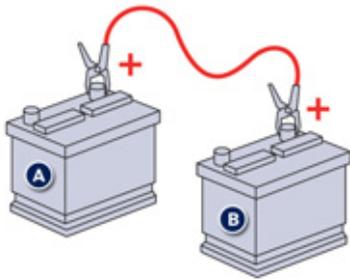

- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.

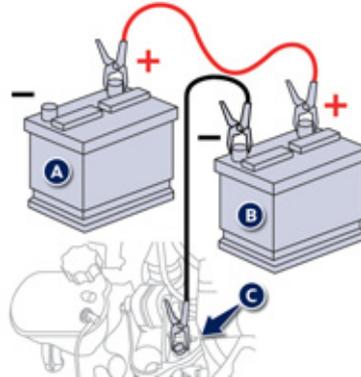

- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B**.
- ☞ Connect the other end of the green or black cable to the earth point **C** on your vehicle (engine mounting).
- ☞ Operate the starter, let the engine run.
- ☞ Wait until the engine returns to idle and disconnect the cables.

## Charging the battery using a battery charger

**i** The Stop & Start battery does not have to be disconnected for charging.

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Reconnect starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.  
Take used remote control batteries and vehicle batteries to a special collection point.



It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



Do not disconnect the terminals while the engine is running.  
Do not charge the batteries without disconnecting the terminals first.  
Do not push the vehicle to start the engine if it is fitted with a 6-speed electronic gear control gearbox or an automatic gearbox.

### **Before disconnecting the battery**

Wait 2 minutes after switching off the ignition before disconnecting the battery.

Close the windows and the doors before disconnecting the battery.

### **Following reconnection of the battery**

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a PEUGEOT dealer or a qualified workshop.

Referring to the corresponding section, you must yourself reinitialise:

- the remote control key,
- the panoramic sunroof blind,
- the GPS satellite navigation system.

## Load reduction mode

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

## Energy economy mode

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of thirty minutes.

### Switching to economy mode

A message then appears in the instrument panel screen indicating that the vehicle has switched to economy mode and the active functions are put on standby.

If a telephone call is being made at this time, it will be maintained for around 10 minutes with the Bluetooth hands-free system of your audio system.

### Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.

- ☞ In order to resume the use of these functions immediately, start the engine and let it run:
- for less than ten minutes, to use the equipment for approximately five minutes,
  - for more than ten minutes, to use the equipment for up to approximately thirty minutes.

Let the engine run for the duration specified to ensure that the battery charge is sufficient. Do not repeatedly and continuously restart the engine in order to charge the battery.

A flat battery prevents the engine from starting (refer to the "Battery" section).

## Changing a wiper blade



### Before removing a front wiper blade

- ☞ Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreen.

### Removing

- ☞ Raise the corresponding wiper arm.
- ☞ Unclip the wiper blade and remove it.

### Fitting

- ☞ Put the corresponding new wiper blade in place and clip it.
- ☞ Fold down the wiper arm carefully.


### After fitting a front wiper blade

- ☞ Switch on the ignition.
- ☞ Operate the wiper stalk again to park the wiper blades.

# Towing the vehicle

Procedure for having your vehicle towed or for towing another vehicle using a removable towing eye.

## Access to the tools

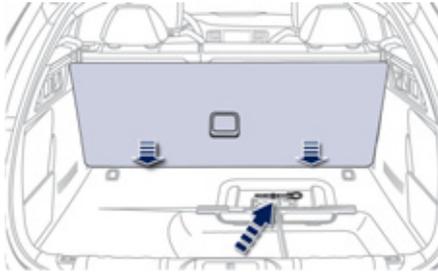


The towing eye is installed in the boot under the floor.

To gain access to it:

- ☞ open the boot,
- ☞ position the floor vertically,
- ☞ remove the towing eye.


## Towing your vehicle

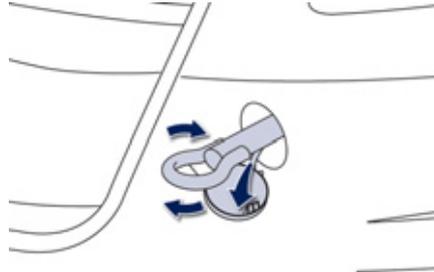

- ☞ On the front bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.

- i** ☞ Place the gear lever in neutral (position **N** on the electronic gear control gearbox or automatic gearbox). Failure to observe this special condition could result in damage to certain braking components and the absence of braking assistance the next time the engine is started.


## Towing another vehicle

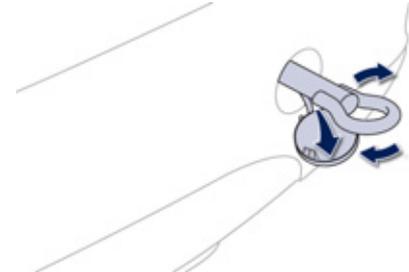

- ☞ On the rear bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.

- !** When towing with all four wheels on the ground, always use a towing bar. When towing with only two wheels on the ground, always use professional lifting equipment. When towing with the engine off, there is no longer any braking or steering assistance.

## Blanking cover

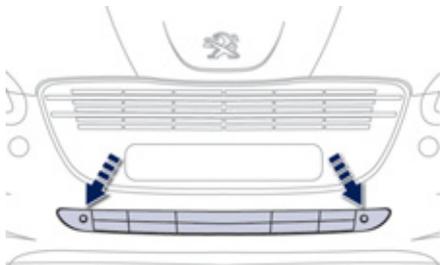

When towing, you must remove the blanking cover in the front bumper if your vehicle has one.

Contact a PEUGEOT dealer or a qualified workshop for this.

## Towing a trailer, a caravan, etc.



Towbar suitable for the attachment of a trailer or caravan with additional lighting and signalling.

Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.

**i** We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a PEUGEOT dealer or a qualified workshop. If the trailer is not fitted by a PEUGEOT dealer, it is imperative that it is fitted using the vehicle's electrical pre-equipment, in accordance with the manufacturer's instructions.

Driving with a trailer places greater demands on the towing vehicle and the driver must take particular care.

## Driving advice

### Distribution of loads

- ☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towed load must be reduced by 10 % for every 1 000 metres of altitude.

Refer to the "Technical Data" section for details of the weights and towed loads which apply to your vehicle.

### Side wind

- ☞ Take into account the increased sensitivity to side wind.

### Cooling

Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

- ☞ To lower the engine speed, reduce your speed.

The maximum towed load on a long incline depends on the gradient and the ambient temperature.

In all cases, keep a check on the coolant temperature.



- ☞ If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

### Braking

Towing a trailer increases the braking distance.

### Tyres

- ☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.


### Lighting

- ☞ Check the electrical lighting and signalling on the trailer.


**i** The rear parking sensors will be deactivated automatically if a genuine PEUGEOT towbar is used.

## Fitting roof bars

When fitting transverse roof bars, take care to position them correctly:

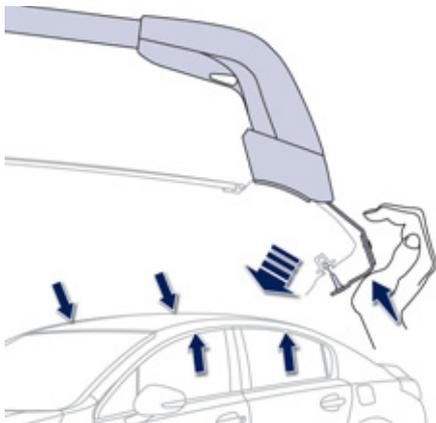

- Saloon: there are retaining pins in the door apertures.

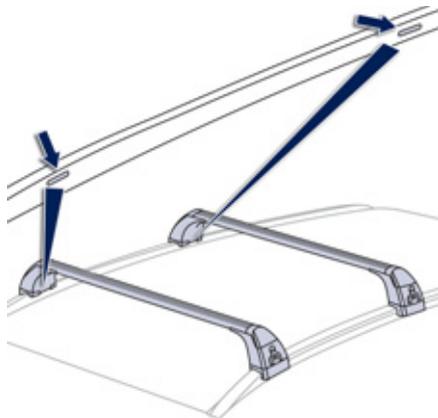

- SW: there are markings on each of the longitudinal bars.

**i** Maximum authorised weight on the roof rack, for a loading height not exceeding 40 cm (with the exception of bicycle carriers):

- Saloon: **70** kg
- SW: **100** kg

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects which are longer than the vehicle.

**!** Use accessories recommended by PEUGEOT observing the manufacturer's recommendations and fitting instructions so as to avoid the risk of damaging the body (deformation, scratches, ...).

# Accessories

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network. These accessories and parts have been tested and approved for reliability and safety. They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.

## "Comfort":

cool box, smoker's kit, 230 V socket, torch...

## "Style":

spoiler, front and rear mud flaps, aluminium gear lever knob, alloy wheels (16", 17", 18", 19"), body kit, door mirror shells, door air deflectors, ...

## "Protection":

mats\*, seat covers, vehicle covers, sun blinds, boot net, load protection net, dog guard, door and boot sill protectors, resin side rubbing strips...

## "Transport solutions":

booster seats and child seats, boot tray, roof box, ski carrier, towbar-mounted bicycle carrier, towbars (swan-neck, quickly detachable ball, folding), harnesses, sliding floor, utility vehicle conversion kit, ...

The trailer towbar and its harness must be fitted by a PEUGEOT dealer.

## "Safety and security":

speed limiter/cruise control, anti-theft alarm, microwave unit, window etching, wheel security bolts, breathalyser, first aid kit, warning triangle, high visibility vest, stolen vehicle tracking system, winter equipment (17" wheels for snow chains), reversing camera, front and rear parking sensors, boot spacers...

- \* To avoid any risk of jamming of the pedals:
- ensure that the mat is positioned and secured correctly,
  - never fit one mat on top of another.

## "Multimedia":

audio systems, portable navigation system, Takara/Sony portable video screen, Bluetooth system, speakers, DVD player, Wi-Fi, speed camera alert, video support, microwave unit...

You can also obtain products for cleaning and maintenance (exterior and interior) and topping up fluids (screenwash, ...), as well as refills (cartridge for temporary tyre repair kit...) from PEUGEOT dealers.

### **i** Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

**i** Depending on the legislation in force in the country, it may be compulsory to have a high visibility safety vest, warning triangle and spare bulbs and fuses available in the vehicle.

**!** The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.

Please note this precaution. You are advised to contact a PEUGEOT representative to be shown the range of recommended equipment and accessories.



## PARTNERS IN PERFORMANCE AND PROTECTION OF THE ENVIRONMENT

### Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles. This ensures that you obtain the best performance for your engine.

**PEUGEOT RECOMMENDS TOTAL**


### Optimum protection for your engine

By maintaining your PEUGEOT vehicle using TOTAL lubricants, you contribute to increasing the longevity and performance of your engine while protecting the environment.



# Opening the bonnet

**!** Before doing anything under the bonnet, switch off the Stop & Start system to avoid any risk of injury resulting from an automatic change to START mode.

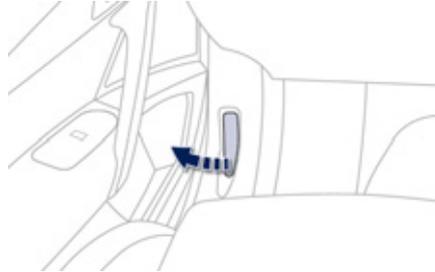

## Opening

☞ **From inside:** pull the release lever, located on the left below the dashboard, towards you.



☞ **From the outside:** lift the safety catch and raise the bonnet. A bonnet strut opens the bonnet and holds it open.

## Closing

☞ Lower the bonnet and release it at the end of its travel.  
☞ Check that it is latched correctly.

# Running out of fuel (Diesel)

The fuel system must be primed if you run out of fuel; refer to the engine compartment view on the "Diesel engine" page.

**i** If the engine does not start first time, don't keep trying. Operate the priming pump again, then the starter motor.

## 1.6 litre Turbo HDI engine



- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the styling cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until resistance is felt (there may be resistance at the first press).
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Clip the styling cover back in place.
- ☞ Close the bonnet.

## 2 litre and 2.2 litre Turbo HDI engines




- ☞ Fill the fuel tank with at least five litres of Diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the style cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until fuel appears in the transparent pipe.
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Put the style cover back in position and clip it in place.
- ☞ Close the bonnet.


## Petrol engines

The various caps and covers allow access for checking the levels of the various fluids and for replacing certain components.

1. Power steering reservoir.
2. Screenwash and headlamp wash reservoir.
3. Coolant reservoir.
4. Brake fluid reservoir.
5. Battery/Fuses.
6. Fusebox.
7. Air filter.
8. Engine oil dipstick.
9. Engine oil filler cap.

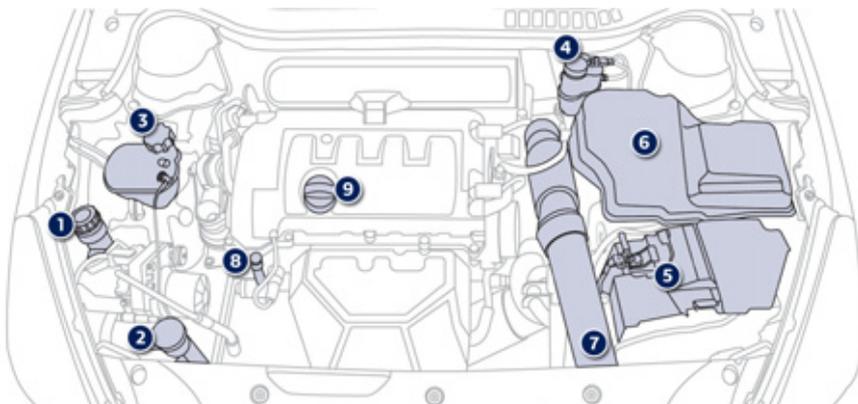

1.6 16V VTI 120 hp

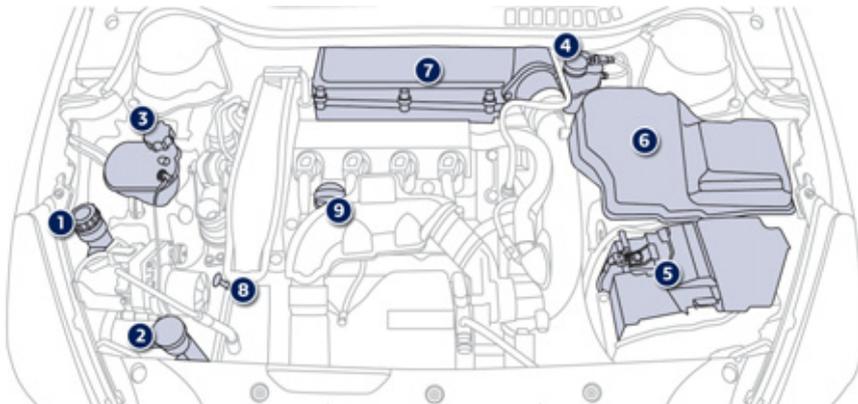


1.6 16V THP 155 hp


## Diesel engines

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Power steering reservoir.
2. Screenwash and headlamp wash reservoir.
3. Coolant reservoir.
4. Brake fluid reservoir.
5. Battery/Fuses.
6. Fusebox.
7. Air filter.
8. Engine oil dipstick.
9. Engine oil filler cap.
10. Priming pump\*.
11. Bleed screw\*.

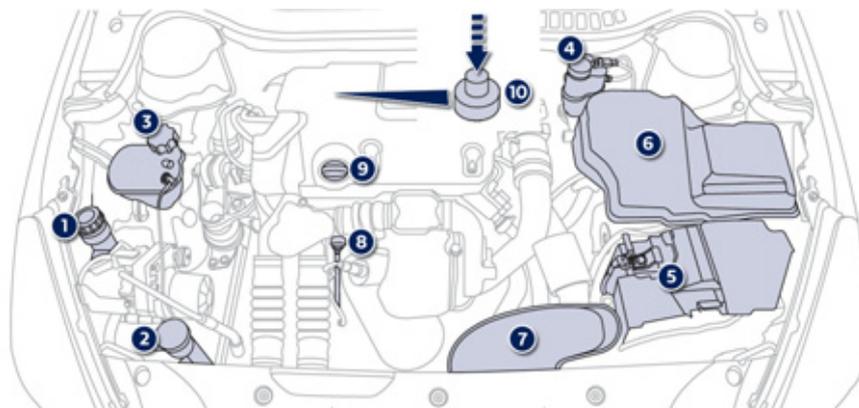

1.6 Turbo HDi 110 hp

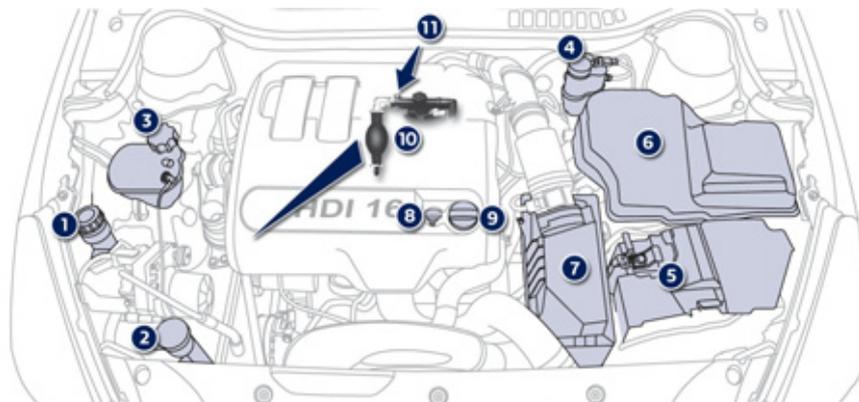


2.0 Turbo HDi 140 hp

\* According to engine.


## Diesel engines

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Power steering reservoir.
2. Screenwash and headlamp wash reservoir.
3. Coolant reservoir.
4. Brake fluid reservoir.
5. Battery/Fuses.
6. Fusebox.
7. Air filter.
8. Engine oil dipstick.
9. Engine oil filler cap.
10. Priming pump\*.
11. Bleed screw\*.

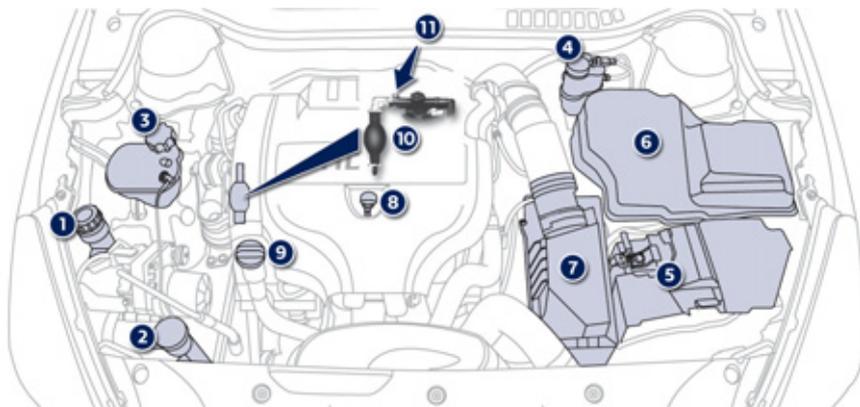

2.0 Turbo HDi 163 hp

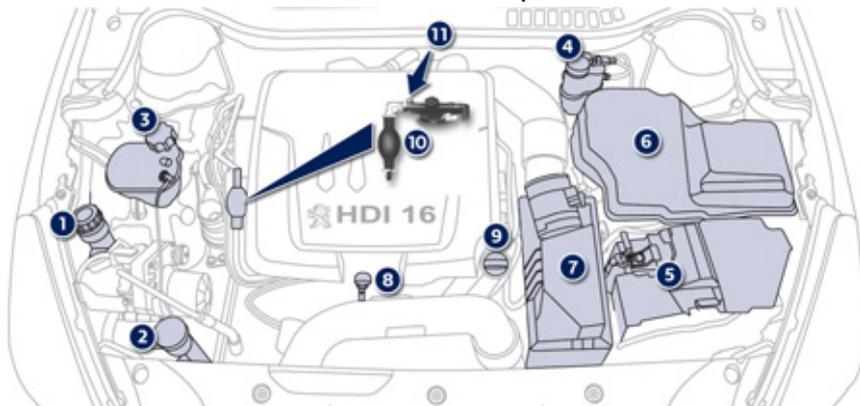

2.2 Turbo HDi 200 hp

\* According to engine.

# Checking levels

Check all of these levels regularly and top them up if necessary, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.

**!** When working under the bonnet, take care, as certain areas of the engine may be extremely hot (risk of burns).

## Oil level



The check is carried out either when the ignition is switched on using the oil level indicator on the instrument panel, or using the dipstick.

This manual check will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

It is normal to top up the oil level between two services (or oil changes). PEUGEOT recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 kms). After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel is not valid during the 30 minutes after topping up.

## Engine oil change

Refer to the Warranty and Maintenance Record for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

## Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

## Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

## Changing the fluid

Refer to the Warranty and Maintenance Record for details of the interval for this operation.

## Fluid specification

The brake fluid must conform to the manufacturer's recommendations and meet the DOT4 standard.

## Power steering fluid level



The power steering fluid level should be close to the "MAX" mark. Unscrew the cap, with the engine cold, to check the level.

## Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan. This can operate with the ignition off.

**On vehicles which are fitted with a particle emission filter, the fan may operate after the vehicle has been switched off, even if the engine is cold.**

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop.

When the pressure has dropped, remove the cap and top up the level.

## Changing the coolant

The coolant does not have to be changed.

## Fluid specification

The coolant must conform to the manufacturer's recommendations.

## Screenwash and headlamp wash fluid



In the case of vehicles fitted with headlamp washers, the low fluid level is indicated by an audible signal and a message in the instrument panel screen.

Top up the reservoir when you stop the vehicle.

## Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up with or replaced with plain water.

## Diesel additive level (Diesel engine with particle emission filter)

A low additive level is indicated by illumination of the service warning lamp, accompanied by an audible warning and a message in the instrument panel screen.

## Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

## Used products



Avoid prolonged contact of used oil or fluids with the skin.  
Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.  
Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

## Checks

Unless otherwise indicated, check these components in accordance with the Maintenance and Warranty Guide and according to your engine. Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.

### Battery



The battery does not require any maintenance.

However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "Practical information" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.



The presence of this label, in particular with the Stop & Start system, indicates the use of a specific 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or a qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may shorten the life of the battery.

### Air filter and passenger compartment filter



Refer to the Maintenance and Warranty Guide for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary** (refer to the "Engines" section). A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

### Oil filter



Replace the oil filter each time the engine oil is changed. Refer to the Maintenance and Warranty Guide for details of the replacement interval for this component.

### Particle emission filter (Diesel)

Display of this warning lamp or a specific message, together with the service warning lamp, indicates the start of saturation of the particle filter or low level in the Diesel additive reservoir.

**i** As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 40 mph (60 km/h) until the service warning lamp goes off. If the service warning lamp stays on, this indicates a low additive level. Have the additive reservoir topped up and the particle emission filter serviced by a PEUGEOT dealer or a qualified workshop. Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

## Manual gearbox



The gearbox does not require any maintenance (no oil change). Refer to the Maintenance and Warranty Guide for the details of the level checking interval for this component.

## 6-speed electronic gearbox system



The gearbox does not require any maintenance (no oil change). Refer to the Maintenance and Warranty Guide for details of the checking interval for this component.

## Automatic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the Maintenance and Warranty Guide for details of the level checking interval for this component.

## Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services. Unless there is a leak in the system, a drop in the brake fluid level indicates that the brake pads are worn.

## Brake disc wear



For information on checking brake disc wear, contact a PEUGEOT dealer or a qualified workshop.

## Manual parking brake



If a loss of effectiveness of this system is noticed, the parking brake must be checked, even between two services.

Checking this system must be done by a PEUGEOT dealer or a qualified workshop.

## Electric parking brake



This system does not require any routine servicing. However, in the event of a problem, have the system checked by a PEUGEOT dealer or a qualified workshop.

For more information, see "Driving - Electric parking brake - § Operating faults".



Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers very specific products.

To avoid damaging the electrical units, the use of a high pressure washer in the engine compartment is strictly **prohibited**.

<b>ENGINES AND GEARBOXES</b>			
<b>Petrol engines</b>	<b>1.6 litre VTi 120 hp</b>	<b>1.6 litre THP 156 hp</b>	
<b>Gearboxes</b>	Electronic gear control (6-speed)	Manual (6-speed)	Automatic (6-speed)
<b>Model codes</b>	8D5FH8/P - 8E5FH8/P 8D5FS8/P - 8E5FS8/P	8D5FV8 - 8E5FV8	8D5FNA - 8E5FNA 8D5FVA - 8E5FVA
Cubic capacity (cc)	1 598	1 598	
Bore x stroke (mm)	77 x 85.8	77 x 85.8	
Max power: EU standard (kW)	85 88	110 115	
Max power engine speed (rpm)	6 000	6 000	
Max torque: EU standard (Nm)	160	240	
Max torque engine speed (rpm)	4 250	1 400	
Fuel	Unleaded	Unleaded	
Catalytic converter	yes	yes	
<b>OIL CAPACITIES (in litres)</b>			
Engine (with filter replacement)	4.25	4.25	

WEIGHTS AND TOWED LOADS (in kg)						
Petrol engines	1.6 litre VTi 1 20 hp		1.6 litre THP 156 hp			
Gearboxes	Electronic gear control (6-speed)		Manual (6-speed)		Automatic (6-speed)	
Model codes	8D5FH8/P - 8E5FH8/P 8D5FS8/P - 8E5FS8/P		8D5FV8 - 8E5FV8		8D5FNA - 8E5FNA 8D5FVA - 8E5FVA	
Outline	Saloon	SW	Saloon	SW	Saloon	SW
- Unladen weight	1 390	1 410	1 400	1 420	1 410	1 430
- Kerb weight*	1 465	1 485	1 475	1 495	1 485	1 505
- Gross vehicle weight (GVW)	1 945	2 055	1 995	2 080	2 015	2 080
- Gross train weight (GTW) on a 12 % gradient	3 245	3 355	3 495	3 580	3 515	3 580
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 400	1 300	1 600	1 500	1 600	1 500
- Braked trailer** (with load transfer within the GTW limit)	1 575	1 600	1 775	1 800	1 775	1 800
- Unbraked trailer	730	740	735	745	740	750
- Recommended nose weight	75		75			

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

WEIGHTS AND TOWED LOADS (In kg)		
Petrol engine	1.6 litre THP 160 hp	
Gearbox	Manual (6-speed)	
Model code	-	
Outine	Saloon	SW
- Unladen weight	-	-
- Kerb weight*	-	-
- Gross vehicle weight (GVW)	-	-
- Gross train weight (GTW) on a 12 % gradient	-	-
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	-	-
- Braked trailer** (with load transfer within the GTW limit)	-	-
- Unbraked trailer	-	-
- Recommended nose weight	-	-

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

ENGINES AND GEARBOXES				
Diesel engine	1.6 litre HDi 110 hp			
Gearboxes	Manual (5-speed)		Electronic gear control (6-speed)	
Model codes	8D9HL0 - 8E9HL0		8D9HR8/PS - 8E9HR8/PS	
Outline	Saloon	SW	Saloon	SW
Cubic capacity (cc)	1 560		1 560	
Bore x stroke (mm)	75 x 88.3		75 x 88,3	
Max power: EU standard (kW)	82		82	
Max power engine speed (rpm)	3 600		3 600	
Max torque: EU standard (Nm)	240		270	
Max torque engine speed (rpm)	1 750		1 750	
Fuel	Diesel			
Catalytic converter	yes			
Particle emission filter	yes			
<b>OIL CAPACITIES (in litres)</b>				
Engine (with filter replacement)	3.25			

ENGINES AND GEARBOXES						
Diesel engines	2.0 litre HDi 140 hp		2.0 litre HDi 163 hp		2.0 litre HDi	
Gearboxes	Manual (6-speed)		Automatic (6-speed)		-	
Model codes	8DRHR8 - 8ERHR8 8DRHF8 - 8ERHF8		8DRHHA - 8ERHHA 8DRHDA - 8ERHDA		-	
Outline	Saloon	SW	Saloon	SW	Saloon	SW
Cubic capacity (cc)	1 997		1 997		-	
Bore x stroke (mm)	85 x 88		85 x 88		-	
Max power: EU standard (kW)	100 103		100 120		-	
Max power engine speed (rpm)	4 000		3 750		-	
Max torque: EU standard (Nm)	320		340		-	
Max torque engine speed (rpm)	2 000		2 000		-	
Fuel			Diesel			
Catalytic converter			yes			
Particle emission filter			yes		no	
<b>OIL CAPACITIES (in litres)</b>						
Engine (with filter replacement)	5.25		5		-	

ENGINES AND GEARBOXES		
<b>Diesel engine</b>	<b>2.2 litre HDi 204 hp</b>	
<b>Gearbox</b>	Automatic (6-speed)	
<b>Model codes</b>	8D4HLA - 8E4HLA	
<b>Outline</b>	Saloon	SW
Cubic capacity (cc)	2 179	
Bore x stroke (mm)	85 x 96	
Max power: EU standard (kW)	150	
Max power engine speed (rpm)	3 500	
Max torque: EU standard (Nm)	450	
Max torque engine speed (rpm)	2 000	
Fuel	Diesel	
Catalytic converter	yes	
Particle emissions filter	yes	
<b>OIL CAPACITIES (in litres)</b>		
Engine (with filter replacement)	5.25	

WEIGHTS AND TOWED LOADS (in kg)				
Diesel engines	1.6 litre HDi 110 hp			
Gearboxes	Manual (5-speed)		Electronic gear control (6-speed)	
Model codes	8D9HL0 - 8E9HL0		8D9HR8/PS - 8E9HR8/PS	
Outline	Saloon	SW	Saloon	SW
- Unladen weight	1 405	1 425	1 410	1 430
- Kerb weight*	1 480	1 500	1 485	1 505
- Gross vehicle weight (GVW)	1 975	2 080	2 005	2 100
- Gross train weight (GTW) on a 12 % gradient	3 175	3 180	3 205	3 200
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 200	1 100	1 200	1 100
- Braked trailer** (with load transfer with the GTW limit)	1 475	1 400	1 475	1 400
- Unbraked trailer	740	745	740	750
- Recommended nose weight				75

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

WEIGHTS AND TOWED LOADS (in kg)						
Diesel engines	2.0 litre HDi 140 hp		2.0 litre HDi 163 hp		2.0 litre HDi	
Gearboxes	Manual (6-speed)		Automatic (6-speed)		-	
Model codes	8DRHR8 - 8ERHR8 8DRHF8 - 8ERHF8		8DRHHA - 8ERHHA 8DRHDA - 8ERHDA		-	
Outline	Saloon	SW	Saloon	SW	Saloon	SW
- Unladen weight	1 430	1 500	1 520	1 540	-	-
- Kerb weight*	1 505	1 575	1 595	1 615	-	-
- Gross vehicle weight (GVW)	2 065	2 140	2 105	2 180	-	-
- Gross train weight (GTW) on a 12 % gradient	3 565	3 640	3 205	3 180	-	-
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 600	1 500	1 300	1 200	-	-
- Braked trailer** (with load transfer with the GTW limit)	1 775	1 790	1 375	1 300	-	-
- Unbraked trailer						750
- Recommended nose weight				75		

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

WEIGHTS AND TOWED LOADS (in kg)		
Diesel engine	2.2 litre HDi 204 hp	
Gearbox	Automatic (6-speed)	
Model codes	8D4HLA - 8E4HLA	
Outline	Saloon	SW
- Unladen weight	1 540	1 660
- Kerb weight*	1 615	1 735
- Gross vehicle weight (GVW)	2 155	2 280
- Gross train weight (GTW) on a 12 % gradient	3 755	3 880
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 700	1 600
- Braked trailer** (with load transfer with the GTW limit)	1 875	1 900
- Unbraked trailer		750
- Recommended nose weight		75

\* The kerb weight is equal to the unladen weight + driver (75 kg).




\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.


The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

# Dimensions (in mm)

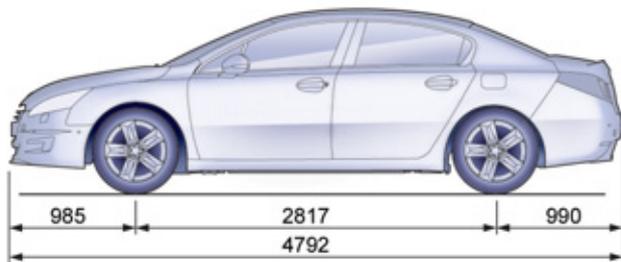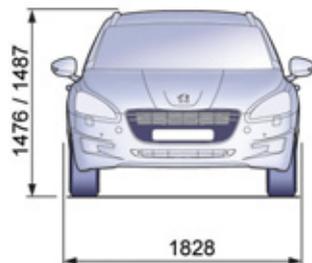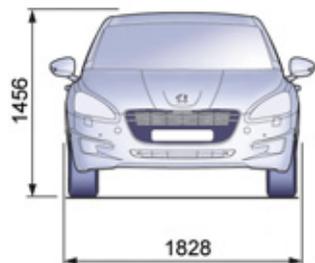


Berline

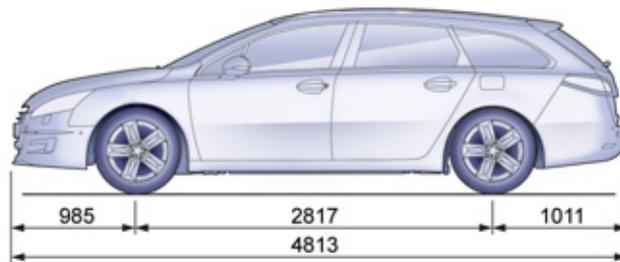

SW

## Identification markings

Various visible markings for the identification and tracing of your vehicle.

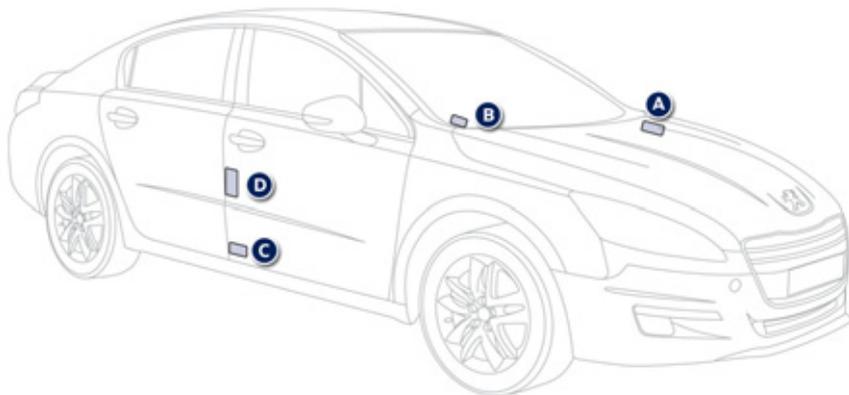

**A. Vehicle Identification Number (VIN) under the bonnet.**

This number is engraved on the bodywork near the damper support.

**B. Vehicle identification Number (VIN) on the windscreen lower crossmember.**

This number is indicated on a self-adhesive label which is visible through the windscreen.

**C. Manufacturer's label.**

The VIN is indicated on a self-destroying label affixed to the door aperture, on the driver's side.

**D. Tyre/paint label.**


This label is affixed to the door aperture, on the driver's side.

It bears the following information:

- the tyre inflation pressures with and without load,
- the wheel rim and tyre sizes,
- the brands of tyre recommended by the manufacturer,
- the inflation pressure of the spare wheel,
- the paint colour code.

**i** The tyre pressures must be checked when the tyres are cold, at least once a month.

**🍀** If the tyre pressures are too low, this increases fuel consumption.

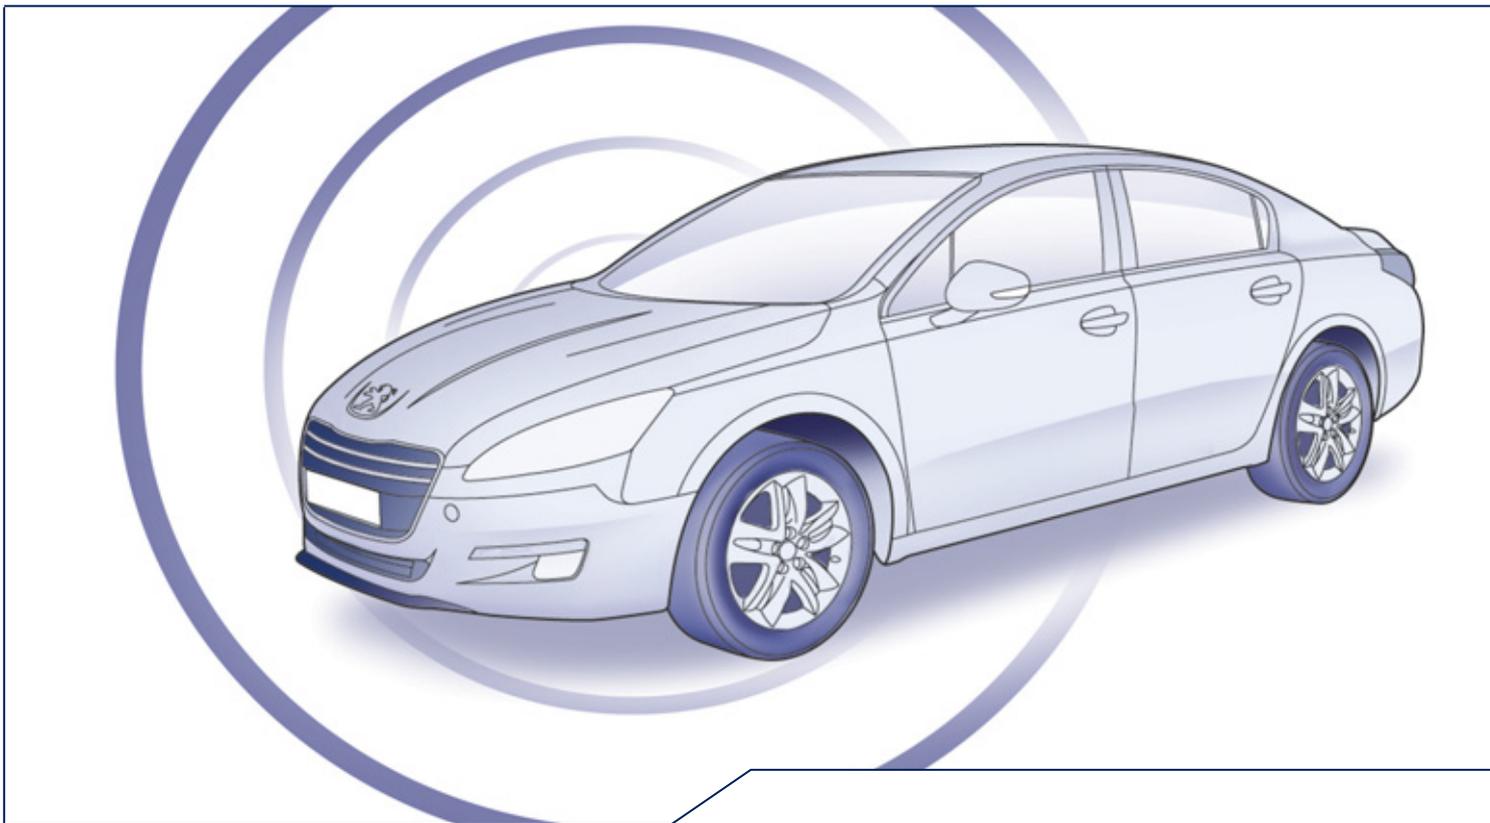

## **EMERGENCY OR ASSISTANCE CALL**

# EMERGENCY OR ASSISTANCE CALL

## PEUGEOT CONNECT SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the PEUGEOT Emergency team\*.

Pressing this button again immediately cancels the request. The green LED goes off.

A press (at any time) of more than 8 seconds on this button, cancels the request.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

This call is dealt with by the PEUGEOT Emergency team which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly declined, the call is dealt with directly by the emergency services (112) without the vehicle location.

 If an impact is detected by the airbag ECU, and independently of the deployment of any airbags, an emergency call is made automatically.

\* These services are subject to conditions and availability. Consult a PEUGEOT dealer.

## PEUGEOT CONNECT ASSISTANCE



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made\*.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

## OPERATION OF THE SYSTEM



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.  
If the orange LED is on continuously: the backup battery must be replaced.  
In either case, contact a PEUGEOT.

If you purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons, particularly to improve the quality of PEUGEOT CONNECT services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

# JBL EQUIPMENT

The HiFi system is a 5.1 system developed jointly by PSA and JBL.




4 two-way speaker kits, separated by an active filter, are fitted at front and rear.


These are based on a fabric dome tweeter delivering stable and balanced treble reproduction and a 50WRMS neodymium magnet inverted motor medium-woofer possessing a very high output of bass frequencies.

The central line in the dashboard improves reproduction of the musical scene, putting the listener in a situation that realistically reproduces the original musical recording.

The bass unit located in the boot carries a 150W triple-coil true subwoofer in an optimised space, giving depth and impact to the bass ranges.

This set of speakers is controlled by a 10-way 500W RMS 2 ohm amplifier, using advanced surround sound and sound distribution handling, so as to deliver optimum performance both for the driver and for the passengers in the vehicle.

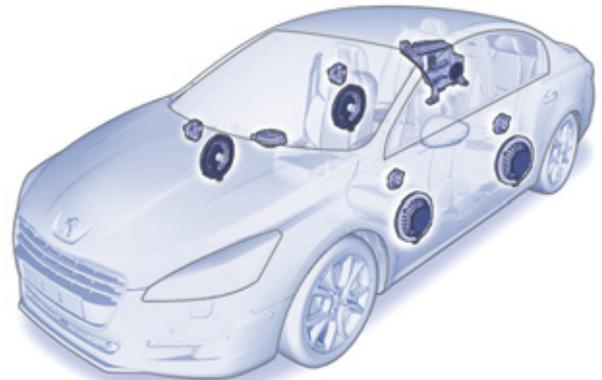

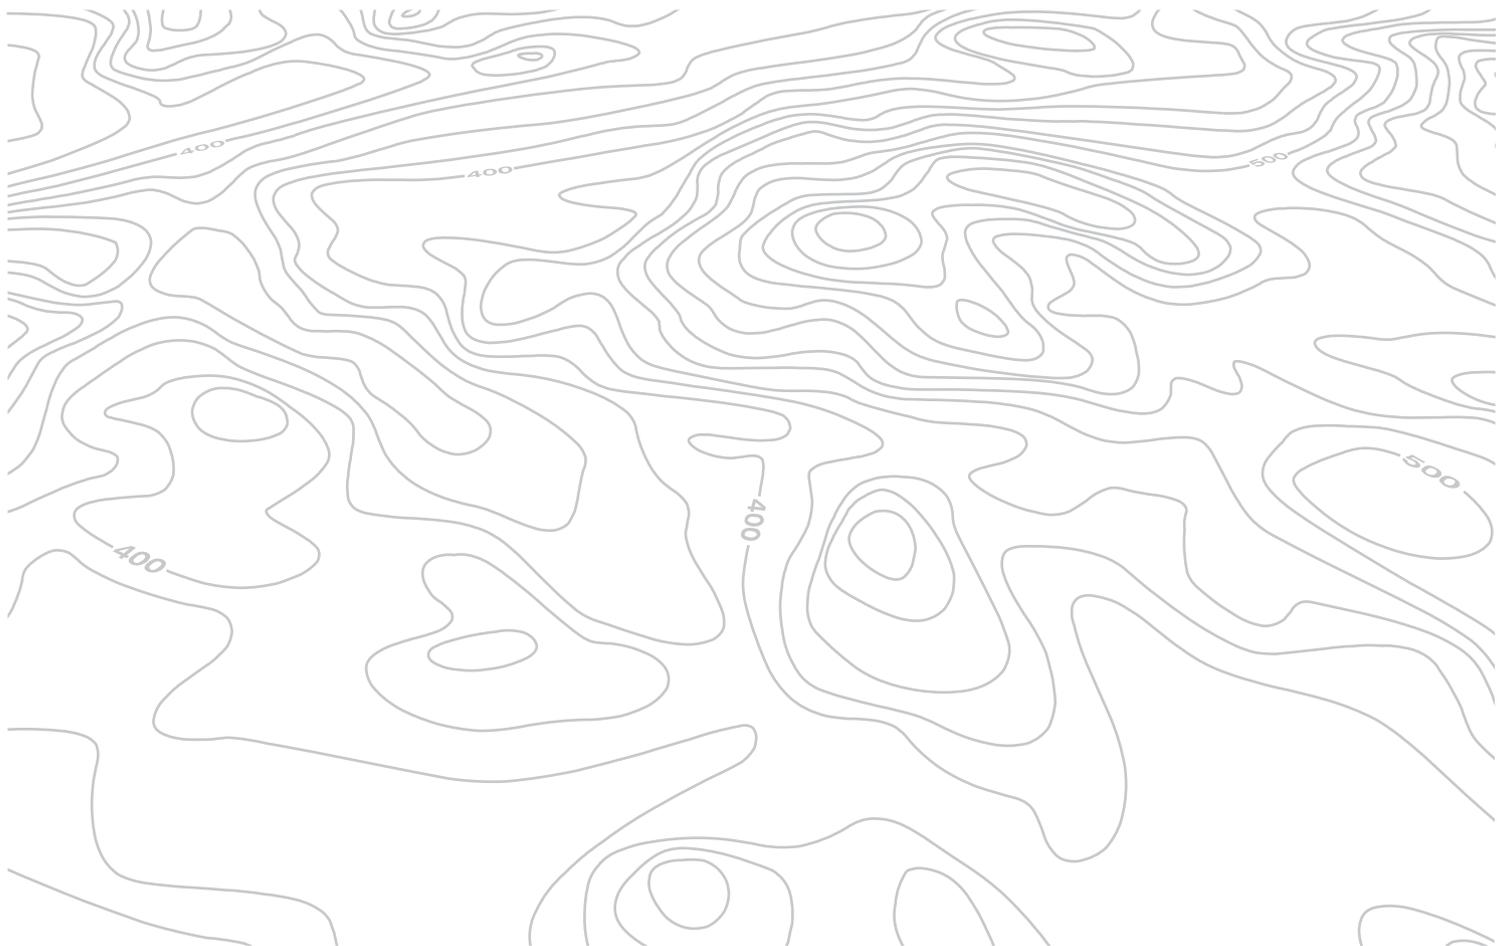



# PEUGEOT CONNECT NAVIGATION (RT6) SATELLITE NAVIGATION SYSTEM MULTIMEDIA BLUETOOTH TELEPHONE AUDIO SYSTEM

## CONTENTS

<b>01 First steps - Control panel</b>	<b>p.</b>	<b>234</b>
<b>02 Steering mounted controls</b>	<b>p.</b>	<b>236</b>
<b>03 General operation</b>	<b>p.</b>	<b>237</b>
<b>04 Navigation - Guidance</b>	<b>p.</b>	<b>239</b>
<b>05 Traffic information</b>	<b>p.</b>	<b>253</b>
<b>06 Using the telephone</b>	<b>p.</b>	<b>256</b>
<b>07 Contacts - ADDR BOOK</b>	<b>p.</b>	<b>264</b>
<b>08 Radio</b>	<b>p.</b>	<b>267</b>
<b>09 Music media players</b>	<b>p.</b>	<b>270</b>
<b>10 Audio settings</b>	<b>p.</b>	<b>276</b>
<b>11 Configuration</b>	<b>p.</b>	<b>277</b>
<b>12 Screen menu map</b>	<b>p.</b>	<b>278</b>
<b>Frequently asked questions</b>	<b>p.</b>	<b>281</b>



The system is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.





For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

# 01 FIRST STEPS

## CONTROL PANEL

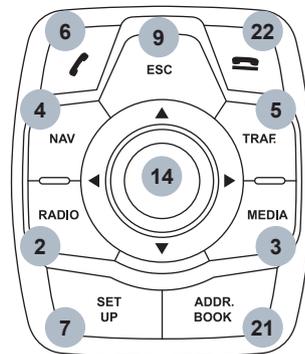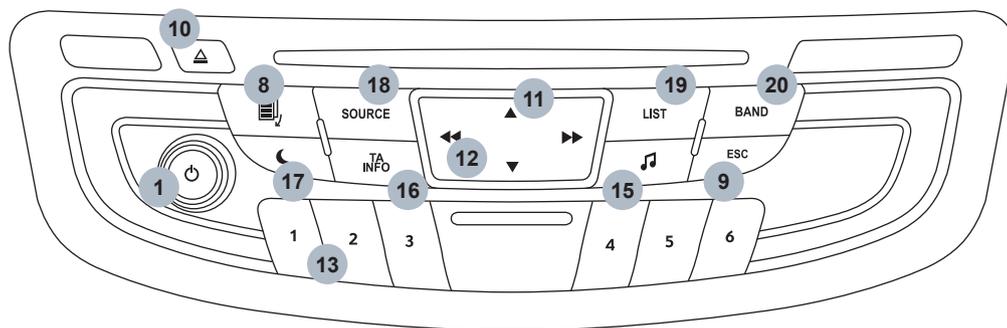

Buttons 2, 3, 4, 5, 6 and 12: selection of the left or right of the screen, when a Menu is displayed in the screen.

# 01 FIRST STEPS

1. Rotary control:
  - Short press engine not running: on/off.
  - Short press engine running: mute on/off.
  - Rotation: volume adjustment (each source is independent, including TA messages and navigation information).
2. Radio source, access to the "**FM/AM band**" menu and display the list of stations.
3. Access to the "**MEDIA**" menu and display the list of tracks.
4. Access to the "**Navigation - guidance**" menu and display the last destinations.
5. Access to the "**Traffic information**" menu and display the current traffic alerts.
6. Access to the "**Telephone**" menu and display the recent calls list or accept an incoming call.
7. Access to the "**Configuration**" menu.  
Long press: access to the GPS coverage and the navigation demonstration mode.
8. **MODE** button:  
Selection of the type of permanent display.
9. ESC: abandon the operation in progress, up one level in the menu.  
Long press: return to permanent display.
10. CD eject.  
Continuous press: reinitialisation of the system.
11. According to context:  
Selection of the previous/next line in a list or menu.  
Selection of the previous/next media folder.  
Step by step selection of the previous/next radio frequency.  
Selection of the next/previous MP3 folder.  
Move up/down in "**Move the map**" mode.
12. According to context:  
Automatic selection of the next lower/higher radio frequency  
Selection of the previous/next CD, MP3 or media track  
Selection of left/right on the screen when a menu is displayed.  
Move left/right in "**Move the map**" mode.
13. Buttons 1 to 6:  
Short press: selection of the stored radio station.  
Long press: store the current radio station.
14. Dial for selection and OK confirmation:  
Selection of an item on the screen or in a list in a menu, then confirmation with a short press.  
Other than for menus and lists, a short press displays a contextual menu depending on the current screen.  
Rotation with map displayed: zoom the map scale in and out.
15. Access to "**Audio settings**": musical ambience, base, treble, loudness, distribution, left/right balance, front/rear balance, automatic volume correction.
16. TA (Traffic Announcement) function On/Off.
17. Display black screen (DARK).
18. Selection of audio source:  
CD, USB, AUX, Bluetooth, Radio.
19. Display the list of stations received, the CD/MP3 tracks or folders.  
Long press: manage the sorting of MP3/WMA files/update the list of stations received.
20. Selection of FM and AM wavebands.
21. Display the list of contacts/Access to the "Directory of contacts" menu.
22. Reject an incoming call or end the call in progress.

## 02 STEERING MOUNTED CONTROLS



		<ul style="list-style-type: none"> <li>- Press: access to the instrument panel screen menu.</li> <li>- Rotation: navigation in the instrument panel screen menu.</li> </ul>
		<ul style="list-style-type: none"> <li>- Increase volume.</li> </ul>
		<ul style="list-style-type: none"> <li>- Mute/restore sound.</li> </ul>
		<ul style="list-style-type: none"> <li>- Decrease volume.</li> </ul>

		<ul style="list-style-type: none"> <li>- Rotation. Radio: automatic selection of next/previous frequency. Media: previous/next track.</li> <li>- Press then rotation: access to 6 preset stations.</li> </ul>
		<ul style="list-style-type: none"> <li>- Change the audio source.</li> <li>- TEL button: Accept an incoming call Call in progress: access to telephone menu: hang up, secret mode, hands-free mode.</li> <li>- TEL button (long press): Reject an incoming call or end a call in progress. When not making a call, access to the telephone menu (Dial, Contacts, Calls log, Voice mailbox).</li> </ul>
		<ul style="list-style-type: none"> <li>- Select the type of permanent display on the screen.</li> </ul>
		<ul style="list-style-type: none"> <li>- Radio: display the list of stations. Media: display the list of tracks.</li> </ul>

# 03 GENERAL OPERATION




Press the **MODE** button several times in succession for access to the following displays:


"RADIO/MEDIA"



"TELEPHONE"  
(If conversation in progress)

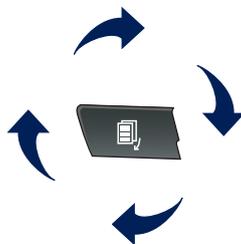

"FULL SCREEN MAP"

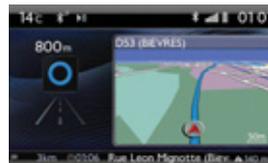

"MAP IN WINDOW"



**SETUP: PARAMETERS**

date and time, display parameters, sound.



Changing the audio source:

**RADIO:** radio broadcasts.

**MUSIC:** playing MEDIA.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

# 03 GENERAL OPERATION

## DISPLAY ACCORDING TO CONTEXT



A press on the OK dial gives access to short-cut menus according to the display in the screen.

### RADIO:

- 1 Activate/Deactivate TA
- 1 Activate/Deactivate RDS

### TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold
- 1 DTMF ring tones
- 1 Hang up

### MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

### FULL SCREEN MAP OR IN A NEW WINDOW:

- 1 Stop/Restore guidance

- 1 Select destination
- 2 Enter an address
- 2 Directory
- 2 GPS coordinates
- 1 Divert route
- 1 Move the map
- 2 Info. on location
- 2 Select as destination
- 2 Select as stage
- 2 Save this place (contacts)
- 2 Quit map mode
- 1 Guidance criteria


# 04 NAVIGATION - GUIDANCE

## Access to the "NAVIGATION" menu



Press **NAV**.

A long press on the end of the lighting control stalk repeats the last navigation message.

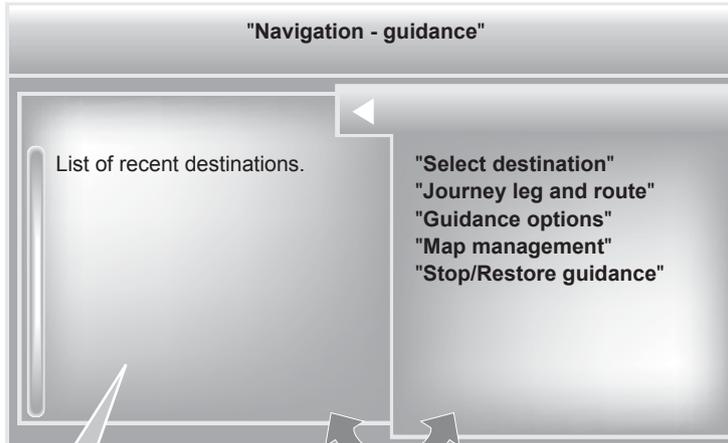

Updates for the mapping are on CD available from PEUGEOT dealers.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).







OR







# 04 NAVIGATION - GUIDANCE

## SELECTING A DESTINATION

### TOWARDS A NEW DESTINATION
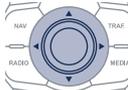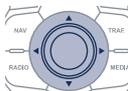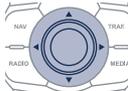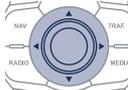
<b>1</b>	 <p>Press <b>NAV</b> to display the "Navigation - guidance" menu.</p>	
<b>2</b>	 <p>Select "<b>Select destination</b>" and confirm, then select "<b>Enter an address</b>" and confirm.</p>	
<b>3</b>	 <p>Select the "<b>Country</b>" function then confirm.</p>	
<b>4</b>	 <p>Select "<b>Town</b>" function then confirm to enter the destination town.</p>	
<b>5</b>	 <p>Select the letters in the name of the town one at a time, confirming each one with the dial.</p>	
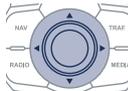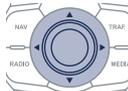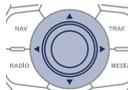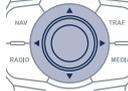
<b>6</b>	Selection the town from the list offered, then confirm. A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming " <b>List</b> " on the screen.	
<b>7</b>	 <p>Turn the dial and select "<b>OK</b>" then confirm.</p>	
<b>8</b>	 <p>If possible, enter the "<b>Road</b>" and "<b>N°/X</b>" information in the same way.</p>	
	Select " <b>Archive</b> " to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.	
<b>9</b>	 <p>Confirm "<b>OK</b>" to start guidance.</p>	
<b>10</b>	 <p>Select the guidance criteria: "<b>Fastest route</b>", "<b>Shortest route</b>" or optimised "<b>Distance/Time</b>", then select the desired restriction criteria: "<b>With tolls</b>", "<b>With Ferry</b>", or "<b>Traffic info</b>" then confirm "<b>OK</b>".</p>	

# 04 NAVIGATION - GUIDANCE


## SELECTING A DESTINATION

### TO ONE OF THE RECENT DESTINATIONS

1




Press **NAV** twice to open the list of recent destinations.

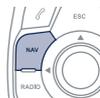

2



Select the desired destination and confirm to start guidance.

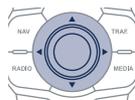

### TOWARDS A CONTACT IN THE CONTACTS DIRECTORY


i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1




Press **NAV** to display the "**Navigation - guidance**" menu.

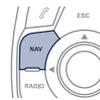

2




Select "**Select destination**" and confirm, then select "**Directory**" and confirm.

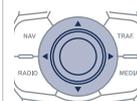

3






Selection the desired destination from your contacts and confirm "**OK**" to start the guidance.




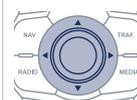


# 04 NAVIGATION - GUIDANCE

## TOWARDS GPS COORDINATES
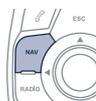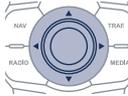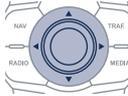
<p>1</p> 	<p>Press <b>NAV</b> to display the "Navigation - guidance" menu.</p>	
<p>2</p> 	<p>Select "<b>Select destination</b>" and confirm, then select "<b>GPS coordinates</b>" and confirm.</p>	
<p>3</p> 	<p>Enter the GPS coordinates and confirm "<b>OK</b>" to start the guidance.</p>	

## TOWARDS A POINT ON THE MAP
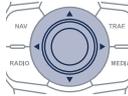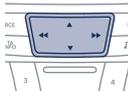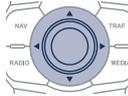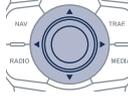
<p>1</p> 	<p>With the map displayed, press <b>OK</b> to display the contextual menu. Select "<b>Move the map</b>" and confirm.</p>	
<p>2</p> 	<p>Move the cursor using the screen navigation buttons <b>◀</b>, <b>▶</b>, <b>▲</b>, <b>▼</b> to identify the desired destination.</p>	
<p>3</p> 	<p>Press <b>OK</b> to display the contextual menu for "<b>Move the map</b>" mode.</p>	
<p>4</p> 	<p>Select "<b>Select as destination</b>" or "<b>Select as stage</b>" and confirm.</p>	

# 04 NAVIGATION - GUIDANCE


## TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1




Press **NAV** to display the "**Navigation - guidance**" menu.

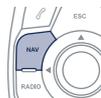

2



Select the "**Enter an address**" function and confirm, then select **Select destination** and confirm.

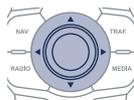


Select "**Search by Name**" to search for POIs by name and not by proximity.

4



Search for POIs in the categories suggested in the following pages.

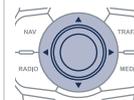


3



To select a POI close to your current location, select "**POI**" and confirm, then select "**Around the current place**" and confirm.

To select a POI as a stage on the route, select "**POI**" and confirm, then select "**On the route**" and confirm.


To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "**POI**" and confirm, finally select "**Near**" and confirm.

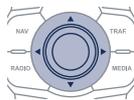

5



Select the POI and confirm "**OK**" to start the guidance.

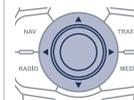

# 04 NAVIGATION - GUIDANCE

This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



## LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Automatic speed camera\*
-  Red light camera\*
-  Risk area\*

\* According to availability in the country.

## 04 NAVIGATION - GUIDANCE

### UPDATING THE RISK AREAS POIs (speed camera information)

i

The detailed procedure is available from PEUGEOT dealers.

1



Download the "Risk areas POIs" update file onto a CD ROM or USB memory stick from the Internet. This service\* is available on <https://www.wipinforadars.fr> or <https://www.peugeot-connect-downloads.co.uk>.

i

The files must be copied to the root on the chosen medium.

2



Insert the medium (CD ROM or USB memory stick) containing the POI database into the system's CD player or USB port.

The system detects the medium inserted automatically. Confirm the start of the update by validating "YES".

3

Successful downloading is confirmed by a message. The medium used must not contain any other data.

\* Available in certain countries.


# 04 NAVIGATION - GUIDANCE

## ALERT PARAMETERS RISK AREAS

1



Press **NAV** to display the "Navigation - guidance" menu.

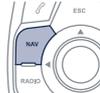


These functions are only available if risk areas have been downloaded and installed on the system.

2



Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.

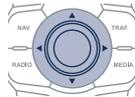

3




Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".





The choice of time of notification defines how long in advance that guidance announcements are given.

Select "**OK**" to confirm the screen.



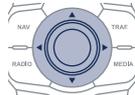


# 04 NAVIGATION - GUIDANCE

## ADDING A STAGE
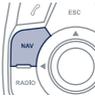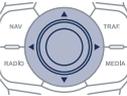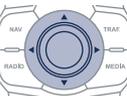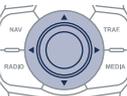
<p>1</p> 	<p>Press <b>NAV</b> to display the "Navigation - guidance" menu.</p>	
<p>2</p> 	<p>Select "<b>Journey leg and route</b>" then confirm.</p>	
<p>3</p> 	<p>Select "<b>Add a stage</b>" then confirm. The address of the stage is entered as a destination, by "<b>Enter an address</b>", a contact in "<b>Directory</b>", ou "<b>Previous destinations</b>".</p>	
<p>4</p> 	<p>Select "<b>Close to</b>" a route passing close to the stage or "<b>Strict</b>" for a route passing through the stage. Confirm "<b>OK</b>" to start the guidance, and give a general indication of the guidance route.</p>	

## ORGANISING STAGES
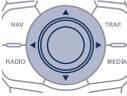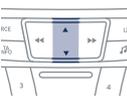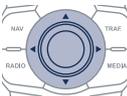
<p>1</p> 	<p>To organise stages, carry out operations 1 to 2 again, then select "<b>Order/delete journey legs</b>" and confirm.</p>	
<p>2</p> 	<p>Select the stage that you want to move in the order, using the <b>▲</b> and <b>▼</b> buttons until the desired position is reached.</p>	
<p>3</p> 	<p>Select and confirm to save the modifications.</p>	
	<p>Select "<b>Delete</b>" to delete the stage.</p>	

# 04 NAVIGATION - GUIDANCE

## ROUTE OPTIONS

### CALCULATION CRITERIA

1




Press **NAV** to display the "Navigation - guidance" menu.



2



Select "**Guidance options**" and confirm.

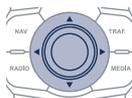


3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

- the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").

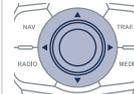


i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



Select "**OK**" and confirm to save the modifications.

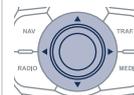

# 04 NAVIGATION - GUIDANCE


## MAP MANAGEMENT

### SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1




Press **NAV** to display the "Navigation - guidance" menu.

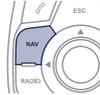

4




Select from the various categories the ones that you want to display on the screen.

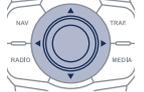

2



Select "**Map management**" and confirm.

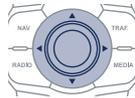


Select "**By default**" to have only "**Oil stations, garages**" and "**Accident-prone area**" appear on the map (if installed in the system).

3




Select "**Map details**" and confirm.

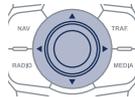

5



Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.

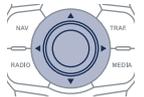


# 04 NAVIGATION - GUIDANCE

## MAP ORIENTATION

1




Press **NAV** to display the "Navigation - guidance" menu.

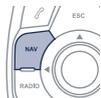

2




Select "**Map management**" and confirm.

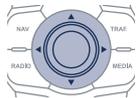

3



Select "**Map orientation**" and confirm.

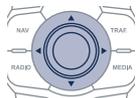


4



Select:

- "**Vehicle direction**" to have the map follow the direction of travel,
- "**North direction**" to keep the map always North up,
- "**Perspective view**" to display a perspective view.

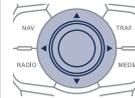

The colour of the map, different from the day and night mode, is configured in the "**SETUP**" menu.



Street names are visible when the map is displayed at the 50 m scale, with either direction of travel or North orientation.

# 04 NAVIGATION - GUIDANCE

## ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

### ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP"/"Voice synthesis" menu.




The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1




Press **NAV** to display the "Navigation - guidance" menu.

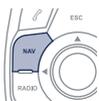

2




Select "**Guidance options**" and confirm.

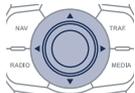

3




Select "**Set speech synthesis**" and confirm.

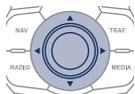

4




Select the volume graph and confirm.

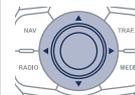

5



Adjust the volume to the desired level and confirm.

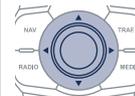


Select "**Deactivate**" to deactivate voice messages.

6



Select "**OK**" and press the dial to confirm.

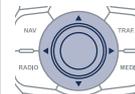

# 04 NAVIGATION - GUIDANCE

## MALE VOICE/FEMALE VOICE

1




Press **SETUP** to display the configuration menu.



2




Select "**Voice synthesis**" and confirm.

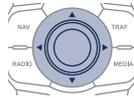

3



Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.

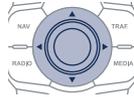


# 05 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC"

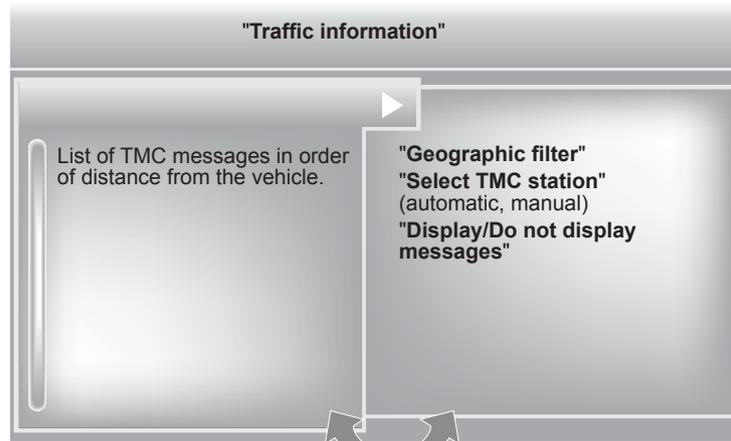

Go from the list to the menu (left/right).



OR



# 05 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the **Traffic information** menu.



2



Select the **"Geographic filter"** function and confirm.

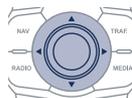

i

We recommend:

- a filter on the route and
- a filter around the vehicle of:
  - 12 miles (20 km) in urban areas,
  - 30 miles (50 km) on motorways.

3




The system offers a choice of:

- **"Retain all the messages"**,

or

- **"Retain the messages"**


- **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
- **"On the route"**.

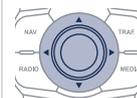

4



Confirm **"OK"** to save the modifications.

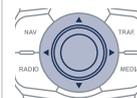

# 05 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, for example:



## RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1




Press **RADIO** to display the "FM/AM band" menu.



2




Select "**Guidance options**" then confirm.

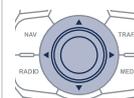

3



Select "**Activate/Deactivate TA**" then confirm.

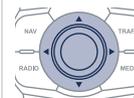


! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

# 06 USING THE TELEPHONE

## Access to the "TELEPHONE" menu



Press **PHONE**.

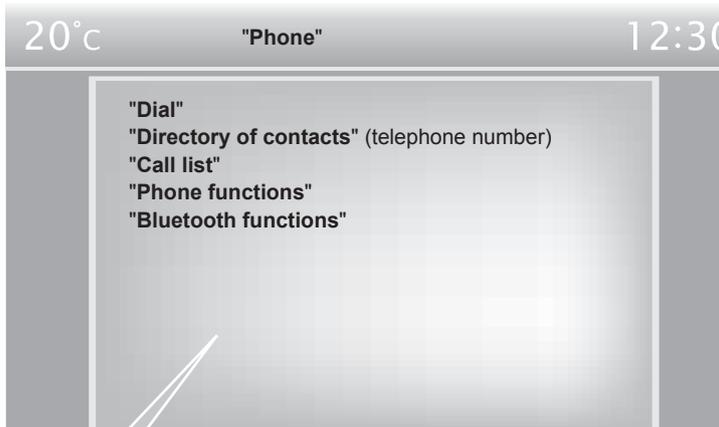

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronization of address book in progress.



Telephone call in progress.

In "**Call list**", select a number in the list and confirm **OK** to start the call.



Calls received.



Calls sent.



Connecting a different telephone deletes the list of recent calls.

# 06 USING THE TELEPHONE

## PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION



Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).

1



Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2




Press **PHONE**.



3



Select "**Bluetooth functions**" and confirm.

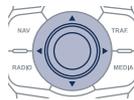


For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

4



Select "**Peripherals search**" and confirm.


The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.

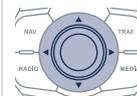

5



Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.

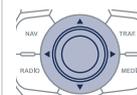


6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

Select "**OK**" and confirm.

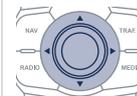

## 06 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.




The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".

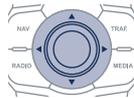

8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible).

To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

# 06 USING THE TELEPHONE

## MAKING A CALL

### CALLING A NEW NUMBER

1




Press **PHONE**.



2




Select "**Dial**" then confirm.

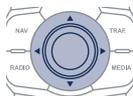

3



Dial the telephone number using the virtual keypad selecting each number in turn.  
Confirm "**OK**" to make the call.

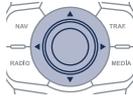

Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

### CALLING A CONTACT

1




Press **PHONE** or make long press on **TEL**.



2




Select "**Directory of contacts**" then confirm.

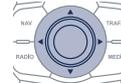

3



Select the desired contact and confirm.

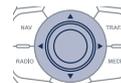

4



Select the number and confirm to start the call.



# 06 USING THE TELEPHONE

## CALLING A RECENTLY DIALLED NUMBER

1




Press **PHONE** or make a long press on **TEL**, select "**Call list**" and confirm,



2



Select the desired number and confirm.

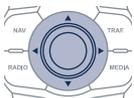

To erase the calls log, press **PHONE**, select "**Phone functions**" and confirm then select "**Delete calls log**" and confirm.

i

It is still possible to make a call directly from the telephone; park the vehicle first as a safety measure.

## ENDING A CALL

1



Press **HANG UP**



or  
Or make a long press on the steering mounted **TEL** button.



# 06 USING THE TELEPHONE

## RECEIVING A CALL


1

An incoming call is announced by a ring and a superimposed display in the screen.

2




"Yes" to accept the call is selected by default. Press "**OK**" to accept the call. Select "**No**" and confirm to reject the call.

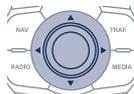

A short press on **TEL** or **PHONE** accepts an incoming call.



A long press on **TEL** or **PHONE** or a press on **HANG UP** rejects an incoming call.

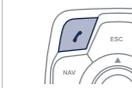



# 06 USING THE TELEPHONE

## OPTIONS DURING A CALL \*

1




During a call, press the **MODE** button several times to select display of the telephone screen, then press **"OK"** to open the contextual menu.

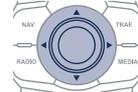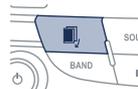

2a




Select **"Private mode"** and confirm to take the call on the handset.  
Or select **"Hands-free mode"** and confirm to take the call via the vehicle's speakers.

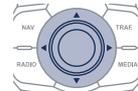

2b




Select **"Put call on hold"** and confirm to put the current call on hold.  
Or select **"Resume the call"** and confirm to resume the call on hold.

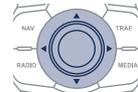

2c




Select **"DTMF ring tones"** to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.

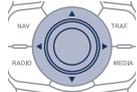

2d



Select **"Hang up"** to end the call.


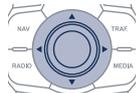


it is possible to hold a 3-way conference call by making 2 calls in succession. Select **"Conference mode call"** in the contextual menu accessible using the **TEL** button at the steering mounted controls.





\* Depending on the compatibility of the phone and your service plan.

# 06 USING THE TELEPHONE

## MANAGING PAIRED TELEPHONES
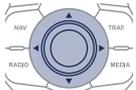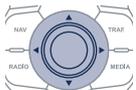
<p>1</p>  <p>Press <b>PHONE</b>.</p>	
<p>2</p>  <p>Select "<b>Bluetooth functions</b>".</p>	
<p>3</p>  <p>Select "<b>List of the paired peripherals</b>" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none"><li>- "<b>Connect</b>" or "<b>Disconnect</b>" the selected telephone,</li><li>- delete the pairing of the selected telephone.</li></ul> <p>It is also possible to select all pairings.</p>	

## CHANGING THE RING TONE
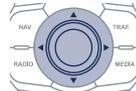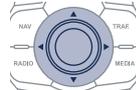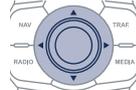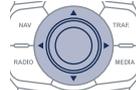
<p>1</p>  <p>Press <b>PHONE</b>.</p>	
<p>2</p>  <p>Select "<b>Phone functions</b>" and confirm.</p>	
<p>3</p>  <p>Select "<b>Ring options</b>" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the ring tone used.</p>	
<p>5</p>  <p>Select "<b>OK</b>" and confirm to save the changes.</p>	


# 07 DIRECTORY - ADDR BOOK

## Access to the "CONTACTS" menu



Press **ADDR BOOK**.

**i** The sorting of the list of contacts depends on the telephone used.

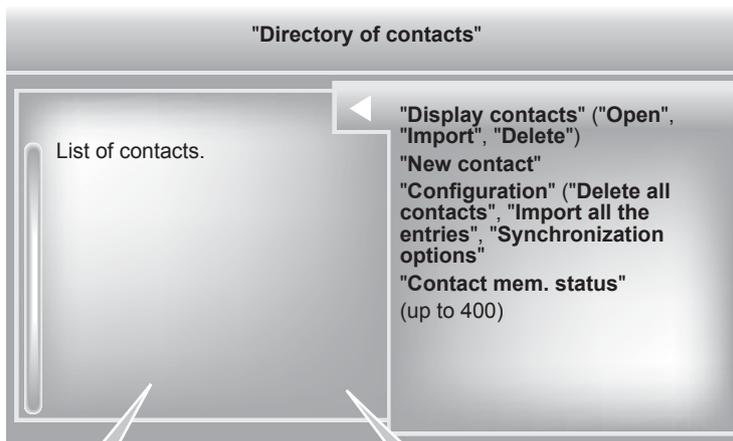

### Destination:

- from the contacts in the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a contact and confirm.

Then select **"Guide"** and confirm.



### Telephone contacts:

- from the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a telephone contact and confirm to start the call.


# 07 DIRECTORY - ADDR BOOK

## DIRECTORY/SYNCHRONIZING CONTACTS

1



Press **ADDR BOOK** twice then select **"New contact"** to enter a new contact.

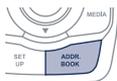

2




Press **ADDR BOOK** twice then select **"Configuration"** and confirm.



2a




Select **"Delete all contacts"** to delete the contacts saved in the system.

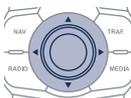

2b



Select **"Import all the entries"** to import all the contacts in the telephone and save them in the system.

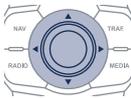


2c



Select **"Synchronization options"** and confirm:


- No synchronization: only the contacts saved in the system (always present).
- Display telephone contacts: only the contacts saved in the telephone.
- Display SIM card contacts: only the contacts saved on the SIM card.
- Display all phone contacts: contacts on the SIM card and in the telephone.

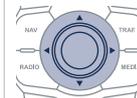

3



Press **ADDR BOOK** twice then select **"Contact mem. status"** to see the number of contacts saved in the system or imported, and the free memory.

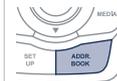


# 07 DIRECTORY - ADDR BOOK

## MANAGING CONTACTS

1




Press **ADDR BOOK** twice then select **"Display contacts"** and confirm.

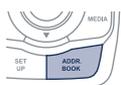

2




Select the desired contact and confirm.

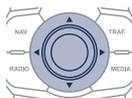

3



Select **"Open"** to view an external contact or modify a contact saved in the system.

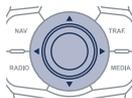


i

It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.

4




Select **"Import"** to copy one contact to the system.

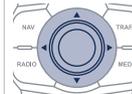

5




Select **"Delete"** to delete a contact saved in the system.

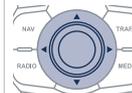

6



Select **OK** or **ESC** to exit this menu.

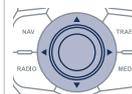

# 08 RADIO


## Access to the "RADIO" menu




Press **RADIO**.



A long press on **LIST** refreshes the list of stations received.

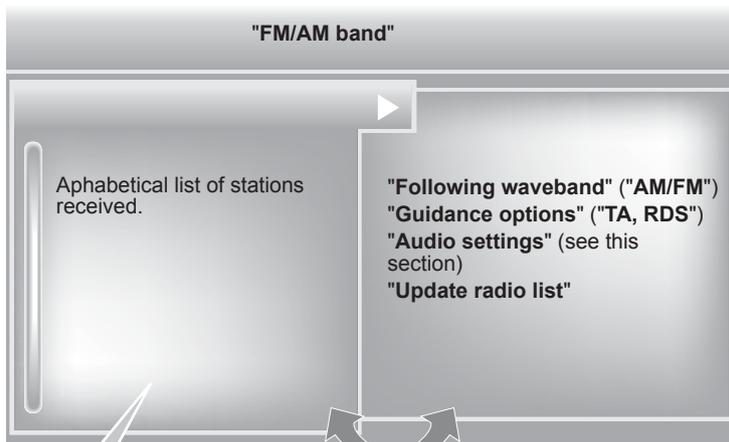

Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.

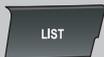

This list can also be displayed by pressing **LIST** on the steering mounted controls.

Go from the list to the menu (left/right).



or



# 08 RADIO

## SELECTING A STATION

**!** The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.




The quality of reception is represented by this symbol.

1a



### By alphabetical list

Press **RADIO** or **LIST**, select the station of your choice and confirm.

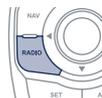


1b



### By automatic frequency search

Press **◀** or **▶** for the automatic search for a lower or higher radio frequency.

Or turn the thumb wheel on the steering mounted control.

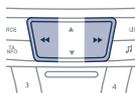


1c



### By manual frequency search

Press **▲** or **▼** to adjust the radio frequency step by step.

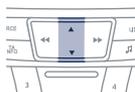


## PRESETTING A STATION

1



Press one of the buttons on the numerical keypad for 2 seconds to preset the current station.

An audible signal confirms that the station has been preset.

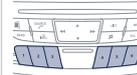

2



Press the button on the numerical keypad to recall a preset station.

Or press then turn the thumb wheel at the steering mounted controls.



# 08 RADIO

## ACTIVATE/DEACTIVATE RDS




RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



Press **RADIO**.

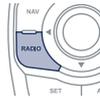


Radio displayed, press "**OK**" to display the contextual menu.

Select "**Activate/Deactivate RDS**".

2




Select "**Guidance options**" and confirm.

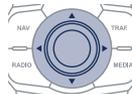

3



Select "**Activate/Deactivate RDS**" and confirm.

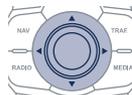


# 09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MEDIA**.

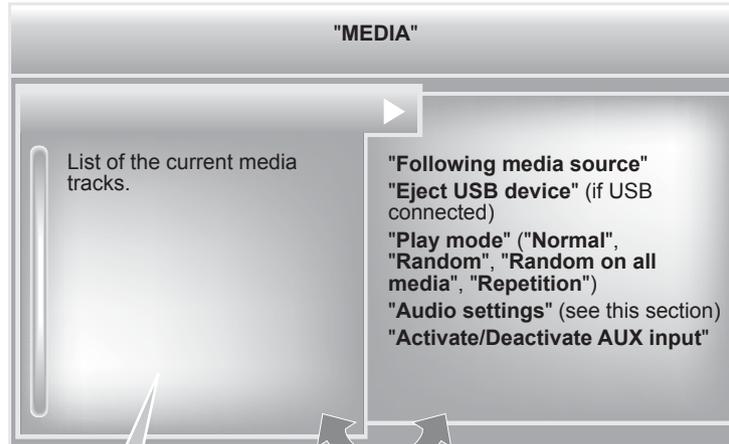

List of the current media tracks.

"Following media source"

"Eject USB device" (if USB connected)

"Play mode" ("Normal", "Random", "Random on all media", "Repetition")

"Audio settings" (see this section)

"Activate/Deactivate AUX input"

LIST

This list can also be displayed by pressing **LIST** at the steering mounted controls.

Go from the list to the menu (left/right).



or



# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD/USB PLAYER

### INFORMATION AND ADVICE



The audio equipment will only play audio files with ".m4a, .m4b, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports the VBR (Variable Bit Rate) mode.

No other type of file (.wma, .mp4, .m3u...) can be played.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).

Control of the peripheral device is with the audio system controls.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.

# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD, USB PLAYER




Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied).

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick.

Play starts automatically after a period which depends on the capacity of the USB memory stick.

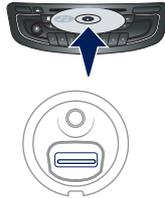

## SELECTION OF SOURCE




The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.



1




Press **MEDIA** to display the "**MEDIA**" menu.

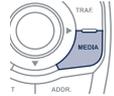

2



Select "**Following media source**" and confirm.

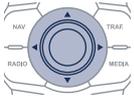

3

Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

# 09 MUSIC MEDIA PLAYERS

## SELECTING A TRACK

Previous track.	 / 	<b>LIST: List of USB or CD tracks or folders</b> 
Next track.	 / 	
Previous folder.		Up or down in the list.  /  / 
Next folder.		
Fast forward.	Long press 	Confirm, next menu level.  /  / 
Fast backward.	Long press 	
Pause: long press on <b>SRC</b> .		Up one menu level.  +  /  / 

# 09 MUSIC MEDIA PLAYERS

## IPOD/IPHONE

1

Connect the iPod or iPhone to the USB port using a suitable cable (not supplied).  
Play starts automatically.

2

Control is via the audio system.

i

The classifications available are those of the portable device connected (artists/albums/genres/playlists/audiobooks/podcasts). The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

## AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see "USING THE TELEPHONE".  
Select "**Audio**" or "**All**" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.  
Control is from the peripheral device only.

!

Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

# 09 MUSIC MEDIA PLAYERS

## USING THE AUXILIARY INPUT (AUX) Cable not supplied

1


Connect the portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.



2




Press **MEDIA** to display the "**MEDIA**" menu.

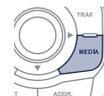

3



Select "**Activate/Deactivate AUX input**" and confirm.  
First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

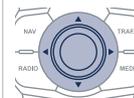

!


Display and management of the controls are via the portable device.

# 10 AUDIO SETTINGS

1



They are accessible by a long press on **RADIO** or **MUSIC** or from the "FM/AM band" or "MEDIA" menus.

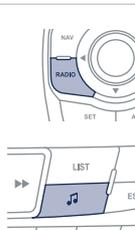

i

**Arkamys©**: in a vehicle, the sound quality suffers from the physical constraints imposed by the safety standards and the requirement to optimise the space available in the passenger compartment. Speakers are fitted in the doors, which can result for the driver and passenger in the sound being too one-sided, either "all on the right" or "all on the left".

The Arkamys© software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space facing passengers, at the height of the windscreen.

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The distribution (or spatialisation using the Arkamys© system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.  
The settings for distribution and balance are common to all sources.

# 11 CONFIGURATION

## DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.



2




Select "**Display configuration**" and confirm.

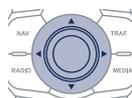

3a



Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press **OK** to save the changes. The settings for day and night are independent.

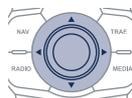


3b



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.

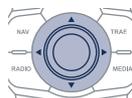


## SETTING THE DATE AND TIME

1




Press **SETUP** to display the "Configuration" menu.

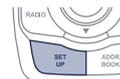

2




Select "**Display configuration**" and confirm.

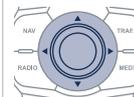

3



Select "**Set date and time**" and confirm.

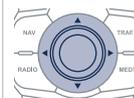


Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.


4



Select the setting to adjust. Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.

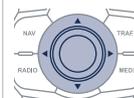

Adjust the settings one by one. Then select **OK** on the screen and confirm to save the settings.

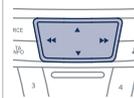

# 12 SCREEN MENU MAP



## MAIN FUNCTION

- 1 **OPTION A**
- 2 option A1
- 3 option A2
- 2 **OPTION B...**

## "Navigation - guidance" MENU

- 1 **Select destination**
- 2 Enter an address
- 2 Directory
- 2 GPS coordinates (Archive)
- 1 **Journey leg and route**
- 2 **Add a stage**
- 3 Enter an address
- 3 Directory

- 3 Previous destinations
- 2 **Order/delete journey legs**
- 2 Divert route
- 2 Chosen destination
- 1 **Guidance options**
- 2 Define calculation criteria
- 2 Set speech synthesis
- 2 Delete last destinations
- 2 Set parameters for risk areas
- 1 **Map management**
- 2 Map orientation
- 2 Map details
- 2 Move the map/"Vehicle monitoring"
- 2 Mapping and updating
- 2 Description of risk areas database
- 1 **Stop/Restore guidance**

## "TRAFFIC" MENU

- 1 **Geographic filter**
- 2 **Retain all the messages:**
- 2 **Retain the messages:**
- 3 Around the vehicle
- 3 On the route
- 1 **Select TMC station**
- 2 Automatic TMC
- 2 Manual TMC
- 2 List of TMC stations
- 1 **Display/Do not display messages**

# 12 SCREEN MENU MAP

## "Phone" MENU

- 1 Dial
- 1 Directory of contacts
- 1 Call list
- 1 Phone functions
- 2 Ring options
- 2 Delete calls log
- 1 Bluetooth functions
- 2 List of the paired peripherals
- 3 Connect
- 3 Disconnect
- 3 Delete
- 3 Delete all
- 2 Peripherals search
- 2 Rename radiotelephone

## "Directory of contacts" MENU

- 1 Display contacts
- 2 Open
- 2 Import
- 2 Delete
- 1 New contact
- 1 Configuration
- 2 Delete all contacts
- 2 Import all the entries
- 2 Synchronization options
- 3 No synchronization
- 3 Display telephone contacts
- 3 Display SIM card contacts
- 3 Display all phone contacts
- 1 Contact mem. status

## "RADIO" MENU

- 1 Following waveband
- 1 Options
- 2 Activate/Deactivate TA
- 2 Activate/Deactivate RDS
- 1 Audio settings
- 2 Equalizer
- 3 None
- 3 Classical
- 3 Jazz
- 3 Rock
- 3 Techno
- 3 Vocal

# 12 SCREEN MENU MAP

- 2 Bass
- 2 Treble
- 2 Loudness
- 2 Distribution
- 3 Driver
- 3 All passengers
- 2 Le-Ri balance
- 2 Fr-Re balance
- 2 Auto. Volume
- 1 Update radio list

## "MEDIA" MENU

- 1 Following media source
- 1 Eject USB support
- 1 Read mode
- 2 Normal
- 2 Random
- 2 Random on all media
- 2 Repetition
- 1 Audio settings (same as RADIO)
- 1 Activate/Deactivate AUX input

## "SETUP" MENU

- 1 Display configuration
- 2 Choose colour
- 3 Harmony:
- 3 Cartography:
- 4 Day mode
- 4 Night mode
- 4 Auto Day/Night
- 2 Adjust luminosity
- 2 Set date and time
- 1 Voice synthesis
- 2 Guidance instructions volume
- 2 Select male voice/Select female voice

# FREQUENTLY ASKED QUESTIONS

The following tables groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options"\ "Define calculation criteria".
The Risk area POIs do not appear.	The Risk area POIs have not been selected.	Select the Risk area POIs in the list of POIs.
	The Risk area POIs have not been downloaded.	Download the Risk area POIs from the PEUGEOT website.
The speed camera audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a speed camera alert for a speed camera which is not on my route.	Other than guidance, the system announces all speed cameras positioned in a cone located in front of the vehicle. It may provide an alert for speed cameras located on nearby or parallel roads.	Zoom in on the map to view the exact position of the speed camera. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>Le CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the battery charge.</p> <p>The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>
<p>Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).</p>	<p>Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).</p>	<p>Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.</p>
<p>When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.</p>	<p>When the iPhone connects automatically as a telephone, it is possible that it connects streaming and telephone functions simultaneously. The streaming function takes the place of the USB function which is then not useable.</p>	<p>Two possible solutions (depending on the iPhone):</p> <ul style="list-style-type: none"> <li>- disconnect then reconnect the USB connection (the USB function then takes the place of the streaming function),</li> <li>- go to the "Bluetooth functions" / "List of the paired peripherals" menu, disconnect the iPhone then reconnect it in "Hands-free mode" only.</li> </ul>



## AUDIO SYSTEM/BLUETOOTH

### CONTENTS

<b>01</b>	<b>First steps</b>	p.	<b>288</b>
<b>02</b>	<b>Steering mounted controls</b>	p.	<b>289</b>
<b>03</b>	<b>Main menu</b>	p.	<b>290</b>
<b>04</b>	<b>Audio</b>	p.	<b>291</b>
<b>05</b>	<b>Using the telephone</b>	p.	<b>301</b>
<b>06</b>	<b>Audio settings</b>	p.	<b>309</b>
<b>07</b>	<b>Configuration</b>	p.	<b>310</b>
<b>08</b>	<b>Trip computer</b>	p.	<b>311</b>
<b>09</b>	<b>Screen menu maps</b>	p.	<b>312</b>
	<b>Frequently asked questions</b>	p.	<b>314</b>




The system is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your PEUGEOT dealer for configuration of the system.



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.  
When the engine is switched off and to prevent discharging of the battery, the audio system may switch off after a few minutes.

# 01 FIRST STEPS

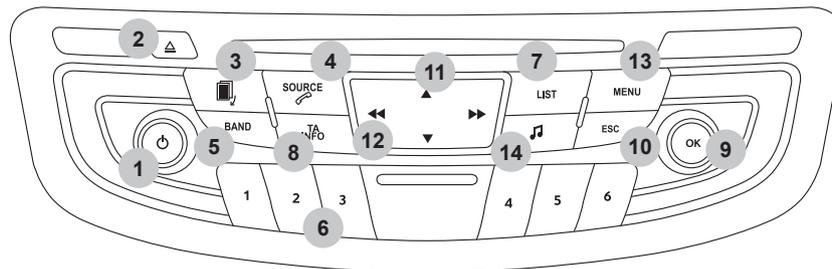

1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes:  
Full screen: Audio (or if a telephone call is in progress)/  
New window: Audio (or telephone if a call is in progress) - Time or Trip computer.  
Long press: black screen (DARK).
4. Selection of source:  
Radio, CD, AUX, USB, Streaming.  
Accept an incoming call.
5. Selection of FM1, FM2, DAB and AM wavebands.
6. Buttons 1 to 6:  
Selection of a preset radio station.  
Long press: preset a station.
7. Display the list of stations received, the CD/MP3 tracks or folders.  
Long press: MP3/WMA file order/update the list of stations received.
8. TA (Traffic Announcement) function on/off.  
Long press: access to the type of information.
9. Confirmation or display of contextual menu.
10. Abandon current operation  
Up one level (menu or folder).
11. Automatic search for a lower/higher radio frequency.  
Selection of previous/next CD, USB, streaming track.  
Navigation in a list.
12. Manual step by step search for a lower/higher radio frequency.  
Selection of the previous/next MP3 folder.  
Selection of the previous/next USB device folder/genre/artist/playlist.  
Navigation in a list.
13. Main menu.
14. Audio settings:  
equalizer, treble, bass, loudness, distribution, left/right balance, front/rear, automatic volume.

## 02 STEERING MOUNTED CONTROLS



- Press: access to the instrument panel screen menu.
- Rotation: navigation in the instrument panel screen menu.



- Increase volume.



- Mute/restore sound.



- Decrease volume.



- Rotation:  
Radio: search for previous/next station.  
Media: previous/next track.  
Press: confirmation.



- Change the audio source.
- Long press: mute.
- Accept an incoming call.
- Access to the Telephone menu if a call is in progress.
- Long press: reject an incoming call or end a call in progress.
- Long press: access to the "Telephone" menu if no call in progress.



- Select the type of permanent display on the screen between window and full screen modes.
- Long press: black screen (DARK).



- Radio: display the list of stations.  
Media: display the list of tracks.  
Long press: update the list of stations received.

# 03 MAIN MENU

> SCREEN C

**"Multimedia"**: Media parameters, Radio parameters.

**"Bluetooth connection"**: Connections management, Search for a device.



**"Telephone"**: Call, Directory management, Telephone management, Hang up.



For a detailed global view of the menus available, refer to "Screen menu maps" in this section.

# 04 AUDIO

## RADIO


### SELECTING A STATION

**i** The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

1




Press **SOURCE** several times in succession and select radio.

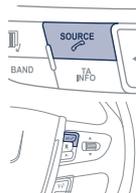

2




Press **BAND** to select a waveband among: FM1, FM2, DAB (digital radio), AM.

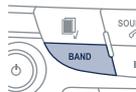


Press **LIST** to display the list of stations received in alphabetical order.



Select the desired radio station and confirm by pressing **OK**.

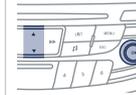

A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).

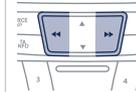

A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.



# 04 AUDIO


## RDS

**i** RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

**1**  When the radio is displayed on the screen, press **OK** to display the contextual menu.




**2**  Select **"RDS"** and confirm to save. **"RDS"** is displayed in the screen.

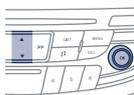

## RECEIVING TA MESSAGES

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


**1**  Press **TA INFO** to activate or deactivate the reception of traffic messages.

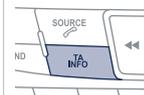


## LISTENING TO INFO MESSAGES

**i** The INFO function gives priority to TA alert messages. To be active, this function needs good reception of a radio station that transmits this type of message. When a message is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to receive the INFO message. Normal play resumes at the end of the message transmission.

**1**  Make a long press on **TA INFO** to display the list of categories.

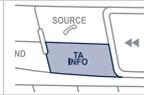

**2**  Select or deselect categories to activate or deactivate the reception of the corresponding messages.

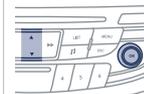

# 04 AUDIO

## DISPLAY RADIO TEXT


**!** Radio text is information transmitted by the radio station related to the current programme or song.

### Screen C

1



With the radio displayed on the screen, press **OK** to display the contextual menu.

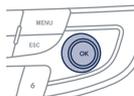

2



Select "**RadioText (TXT) display**" and confirm **OK** to save.



# 04 AUDIO

## AUDIO CD

### PLAYING A CD




Insert 12 cm diameter circular compact discs only.  
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.  
Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select "CD".

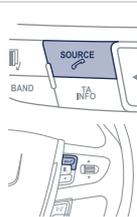

2



Press one of the buttons to select a track on the CD.

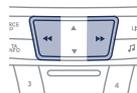

!




Press **LIST** to display the list of tracks on the CD.



3



Press and hold one of the buttons for fast forward or backward.

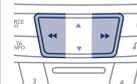

# 04 AUDIO

## CD, USB

### INFORMATION AND ADVICE



The audio system will only play files with extension ".mp3" or ".wma" and a compression rate that is constant or variable between 32 Kbps and 320 Kbps.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



The playlists accepted are types .m3u and .pls.  
The number of files is limited to 5 000 in 500 directories on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD. During play, the folder structure is not observed.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet. If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality. In the particular case of a multi-session CD, the Joliet standard is recommended.



Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

# 04 AUDIO

## CD, USB

### PLAYING A COMPILATION



Insert an MP3 compilation in the CD player or connect a memory stick to the USB port, directly or via an extension lead.



The system creates playlists (temporary memory) the creation time for which can take from a few seconds to several minutes.

The playlists are updated every time the ignition is switched off or a USB memory stick is connected.

Play starts automatically after a period which depends on the capacity of the USB memory stick.



At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.

1




To play a disc or memory stick which has already been inserted, press **SOURCE** several times in succession and select "CD" or "USB".



2




Press one of the buttons to select the next or previous track.

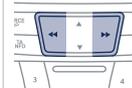

3



Press one of the buttons to select the next or previous folder in the order chosen.

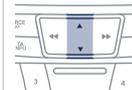

4



Press and hold one of the buttons for fast forwards or backwards.






5






Press **LIST** to display the menu of folders in the compilation.



# 04 AUDIO
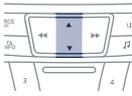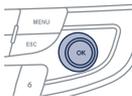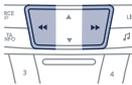
<p>6</p>  <p>Select a line in the list.</p> 	 
<p>7</p>  <p>Select a track or a folder.</p>	
<p>8</p>  <p>Up a level in the menu.</p>	
<p>9</p>  <p>Jump a page.</p>	

## USB MEMORY STICK - FILE CLASSIFICATION
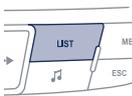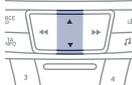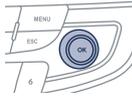
<p>1</p>  <p>Make a long press on <b>LIST</b> or press <b>MENU</b>, select "<b>Multimedia</b>", then "<b>Media parameters</b>" and finally "<b>Choice of track listing</b>" to display the different classifications.</p>	
<p>2</p>  <p>Having selected the desired classification ("<b>By folders</b>", "<b>By artists</b>", "<b>By genres</b>", "<b>By playlists</b>") press <b>OK</b>.</p> <p>Then confirm <b>OK</b> to save the modifications.</p> <ul style="list-style-type: none"> <li>- <b>By folders</b>: all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.</li> <li>- <b>By artists</b>: all of the artist names defined in the ID3 Tags, in alphabetical order.</li> <li>- <b>By genres</b>: all of the genres defined in the ID3 Tags.</li> <li>- <b>By playlists</b>: if playlists have been saved.</li> </ul> 	 

## 04 AUDIO

### IPOD® or PORTABLE PLAYER



The audio files on a Mass Storage portable player\* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).



Management of the device is via the audio system controls.



If the portable player is not recognised by the USB port, connect it to the auxiliary Jack socket.



The Ipod® must be updated regularly for the best connection.



The playlists are those defined in the Ipod®.



The Ipod® must be generation 5 or later.

\* Check your player's manual.

# 04 AUDIO

## AUXILIARY SOCKET (AUX)

### AUXILIARY JACK SOCKET



The auxiliary Jack socket permits the connection of a portable non-mass storage device or an iPod® if not recognised by the USB port.



Do not connect a device to the USB port and to the auxiliary Jack socket at the same time.

1


Connect the portable device to the auxiliary Jack socket using a suitable cable (not supplied).



2



Press the **SOURCE** button several times in succession and select "**AUX**".

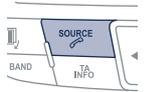

3

First adjust the volume on your portable device.



4



Then adjust the volume of the audio system.



The display and management of controls is on the portable device.



# 04 AUDIO

## STREAMING - PLAYING AUDIO FILES VIA BLUETOOTH

**i** Depending on the compatibility of the phone

**💡** Streaming allows music files on a telephone to be heard via the vehicle's speakers. The telephone must support the appropriate bluetooth profiles (Profiles A2DP/AVRCP).

**1**  Pair/connect the telephone: see the "USING THE TELEPHONE" section.

**2**  Activate the streaming source by pressing **SOURCE**. Control of playback is via the audio system. The contextual information can be displayed in the screen.

**!** In certain cases, playing of the audio files must be initiated from the telephone.

**!** The audio quality depends on the quality of the transmission from the telephone.

## PLAY MODE

- !** The play modes available are:
- Normal: the tracks are played in order, depending on the classification of the selected files.
  - Random: the tracks in an album or folder are played in a random order.
  - Random all: all of the tracks saved in the media ar played in random order.
  - Repeat: the tracks played are only those from the current album or folder.


**1**  Press **OK** for access to the contextual menu. or Press **MENU**.




**2**  Select "**Multimedia**" and confirm.




**3**  Select "**Media parameters**" and confirm.

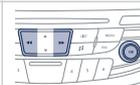

**4**  Select "**Read mode**" and confirm.

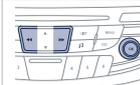

**5**  Select the desired play mode and confirm **OK** to save the modifications.

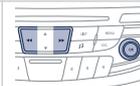

# 05 USING THE TELEPHONE

## PAIRING A TELEPHONE FIRST CONNECTION


 The services offered depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Consult your telephone's manual and your operator to find out which services are available to you.

 For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the **vehicle stationary** and the ignition on. Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).


**1**  
Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone user guide).




**2**  
 Press **MENU**.

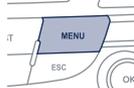

**3**  
  
 Select "**Bluetooth connection**" and confirm.

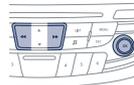


**4**  
  
 Select "**Search for a device**".

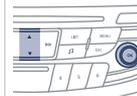

**5**  
A window is displayed "**Search in progress...**".

**6**  
  
 Select the telephone to be connected from the list. Only one telephone can be connected at a time.

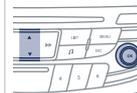

# 05 USING THE TELEPHONE




In some cases, the reference number of the telephone or the Bluetooth address may appear instead of the name of the telephone.

7



A virtual keypad is displayed on the screen: enter a code with at least 4 digits and confirm with **OK**.

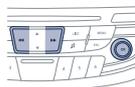

8

A message is displayed on the screen of the telephone: enter the same code and confirm.



If pairing fails, try again; the number of attempts is not limited.

9

Accept the connection to the telephone.

10

A message appears in the screen to confirm the result of the connection.



Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.



The directory and the calls list can be accessed after the synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

## STREAMING - PLAYING AUDIO FILES VIA BLUETOOTH



Pair/connect the telephone then listen: see the AUDIO section.

# 05 USING THE TELEPHONE


## MANAGING CONNECTIONS

**i** The telephone connection automatically includes hands free operation and audio streaming.  
The ability of the system to connect to just one profile depends on the telephone. Both profiles may connect by default.

1




Press **MENU**.

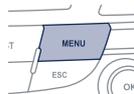

2




Select "**Bluetooth connection**" and confirm.

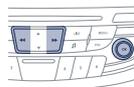

3



Select "**Connections management**" and confirm. The list of paired telephones is displayed.

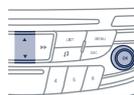

Indicates that a device is connected.



Indicates connection of the audio streaming profile.




Indicates connection of the hands-free profile.

4




Select a telephone and confirm.

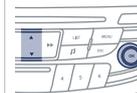

5

Then select and confirm:

- "**Connect telephone**"/"**Disconnect telephone**": to connect/disconnect the telephone or the hands-free connection only.
- "**Connect media player**"/"**Disconnect media player**": to connect/disconnect only streaming.
- "**Connect telephone + media player**"/"**Disconnect telephone + media player**": to connect/disconnect the telephone (hands-free and streaming).
- "**Delete connection**": to delete the pairing.

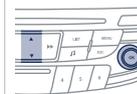


# 05 USING THE TELEPHONE

## MAKING A CALL - DIALLING

1




To display the "TELEPHONE" menu:  
- Make along press on **SOURCE**.  
- Or, press **OK** to display the contextual menu. Select "**Call**" and confirm.  
- Or, press **MENU**, select "**Telephone**" and confirm. Select "**Call**" and confirm.

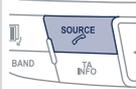

2




Select "**Dial**" to enter a number and confirm.

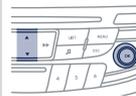

3



Select numbers one at a time using the **◀** and **▶** buttons and confirm.

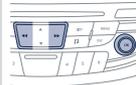


Correction allows numbers to be deleted one at a time.

4



Select **OK** and confirm to start the call.

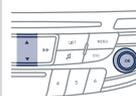


## MAKING A CALL - RECENTLY CALLED NUMBERS\*

1




Repeat the previous step 1 to display the "TELEPHONE" menu.

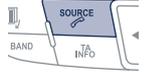

2



Select "**Calls list**" and confirm.

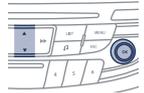

3



Select the number and confirm to start the call.



The calls list includes calls sent and received in the vehicle using the connected telephone.



It is possible to make a call directly from the telephone; park the vehicle first as a safety measure.

\* Depending on the compatibility of the telephone.


# 05 USING THE TELEPHONE

## MAKING A CALL - FROM THE DIRECTORY

1




Repeat the previous step 1 to display the "TELEPHONE" menu.

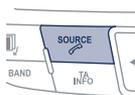

2



Select "Directory" and confirm.

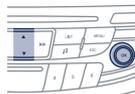

3



Select a contact then confirm.




Home

Business

Mobile


(depending on the information available in the contact records of the telephone connected).

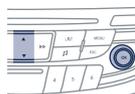

4



Select the number and confirm.

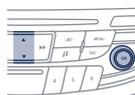

## RECEIVING A CALL

1

An incoming call is announced by a ring and a superimposed display in the multifunction screen.

2





"YES" to accept the call is selected by default.

Press **OK** to accept the call.


Select "**NO**" and confirm to reject the call.

or

Press **SOURCE** or **SRC** to accept the call.

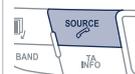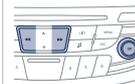

A long press on **ESC** or on **SOURCE** also rejects an incoming call.

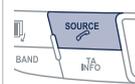


# 05 USING THE TELEPHONE

## MANAGING CALLS

1



During a call, press **OK** to display the contextual menu.

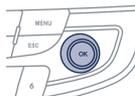

2b


### Secret - Mute

(so that the caller cannot hear)



In the contextual menu:

- select "**Micro OFF**" to switch off the microphone.
- deselect "**Micro OFF**" to switch the microphone on.

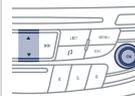

2a

### Hang up



In the contextual menu, select "**Hang up**" to end the call.



2c


### Combined mode

(to leave the vehicle without ending the call)




In the contextual menu:

- select "**Telephone mode**" to transfer the call to the telephone.
- deselect "**Telephone mode**" to transfer the call to the vehicle.

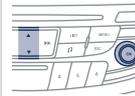

A long press on **SOURCE** or **TEL** also ends the call.

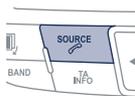

In certain cases, the combined mode has to be activated from the telephone.


If the contact has been cut off, when you reconnect on returning to the vehicle, the Bluetooth connection will be restored automatically (depending on the compatibility of the telephone).

# 05 USING THE TELEPHONE

## 2d Interactive voice response



From the contextual menu, select **"DTMF tones"** and confirm to use the digital keypad to navigate in the interactive voice response menu.

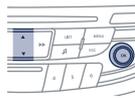

## 2e Consultation call



From the contextual menu, select **"Switch"** and conform to return to a call left on hold.



# 05 USING THE TELEPHONE

## DIRECTORY



The telephone directory is sent to the system, depending on the compatibility of the telephone.



The directory is provisional and depends on the Bluetooth connection.




Contacts imported from the telephone to the audio system directory are saved in a permanent directory visible to all, whatever the telephone connected.

1




Make a long press on **SOURCE** for access to the directory or press **OK**, and select **"Call"** and confirm.

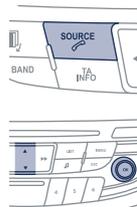

2



Select **"Directory"** to see the list of contacts.

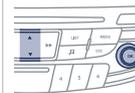

3



To modify the contacts saved in the system, press **MENU** then select **"Telephone"** and confirm.

Select **"Directory management"** and confirm.

You can:

- **"Consult an entry",**
- **"Delete an entry",**
- **"Delete all entries".**



# 06 AUDIO SETTINGS


## SCREEN C



1



Press  to display the audio settings menu.

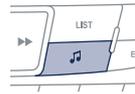

2


The settings available are:

- Ambience,
- Bass,
- Treble,
- Loudness,
- Distribution: Personalised or Driver,
- Left/right balance,
- Fader (front/rear balance),
- Auto. volume.

3



Select and confirm "**Other settings...**" to display the next setting in the list.

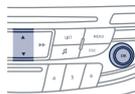

The distribution (or spatialisation using the Arkamys® system), is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.



The Ambience, Treble and Bass audio settings are different and independent for each sound source.



**Arkamys®**: in a vehicle, the sound quality suffers from the physical constraints imposed by the safety standards and the requirement to optimise the space available in the passenger compartment. Speakers are fitted in the doors, which can result for the driver and passenger in the sound being too one-sided, either "all on the right" or "all on the left".

The Arkamys® software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space facing passengers, at the height of the windscreen.

# 07 CONFIGURATION

## SETTING THE DATE AND TIME

### SCREEN C

1




Press the **MENU** button.



4




Using the arrows, select "**Date and time adjustment**" and confirm.

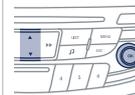

2




Using the arrows, select "**Personalisation-configuration**" and confirm.

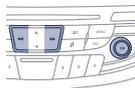

5



Select the setting to be modified. Confirm by pressing **OK**, then make the change and confirm again to save the modification.

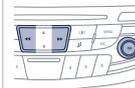

3




Using the arrows, select "**Display configuration**" and confirm.



6



Adjust the settings one by one, confirming by pressing the **OK** button. Next select the "**OK**" tab on the screen then confirm to exit from the "**Date and time adjustment**" menu.

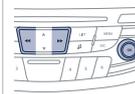

# 08 TRIP COMPUTER



Each press of the button, located on the steering wheel, displays the different trip computer information in succession, depending on the screen.

- the "vehicle" tab with:
  - the range, the current fuel consumption or the Stop & Start time counter,
- the "1" tab (trip 1) with:
  - the average speed, the average fuel consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.



## A FEW DEFINITIONS

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

### Stop & Start time counter

(minutes/seconds or hours/minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the key.

# 09 SCREEN MENU MAP

## SCREEN C



### MAIN FUNCTION

1 OPTION A

2 Option A1

2 Option A2

1 OPTION B

### Multimedia

1 Media parameters

2 Choice of playback mode

3 Normal

3 Random

3 Random all

3 Repeat

2 Choice of track listing

3 By folders

3 By artists

3 By genres

3 By playlists

1 Radio parameters

### Telephone

1 Call

2 Dial

2 Directory

2 Calls list

2 Voice mail box

1 Directory management

2 Consult an entry

2 Delete an entry

2 Delete all entries

1 Telephone management

2 Telephone status

1 Hang up

# 09 SCREEN MENU MAP

## Trip computer

1 Vehicle diagnosis\*

## Bluetooth connection

1 Connections management

1 Search for a device

## Personalisation- Configuration

1 Choice of language

1 Display configuration

2 Choice of units

2 Date and time adjustment

2 Display parameters

2 Brightness

\* The parameters vary according to the vehicle.

# FREQUENTLY ASKED QUESTIONS

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.	Choosing an ambience imposes settings for treble and bass. Modifying one without the other is not possible.	Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.
When changing the balance setting, distribution is deselected.	Choosing a distribution setting imposes a balance setting. Modifying one without the other is not possible.	Modify the balance setting or the distribution setting to obtain the desired sound quality.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, DAB*) on which the stations are stored.


\* Digital Audio Broadcasting.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The message "USB device error" is displayed on the screen.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick (FAT 32).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
A telephone connects automatically, disconnecting another telephone.	Automatic connection overrides manual connection.	Modify the telephone settings to remove automatic connection.
An iPod is not recognised when connecting to the USB port.	The iPod is of a generation that is not compatible with the USB.	Connect the iPod to the AUX Jack socket using a suitable cable (not supplied).
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. <b>Caution:</b> ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
When streaming, the sound cuts momentarily.	Some telephones prioritise connection of the "hands-free" profile.	Delete the "hands-free" connection profile to improve streaming.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

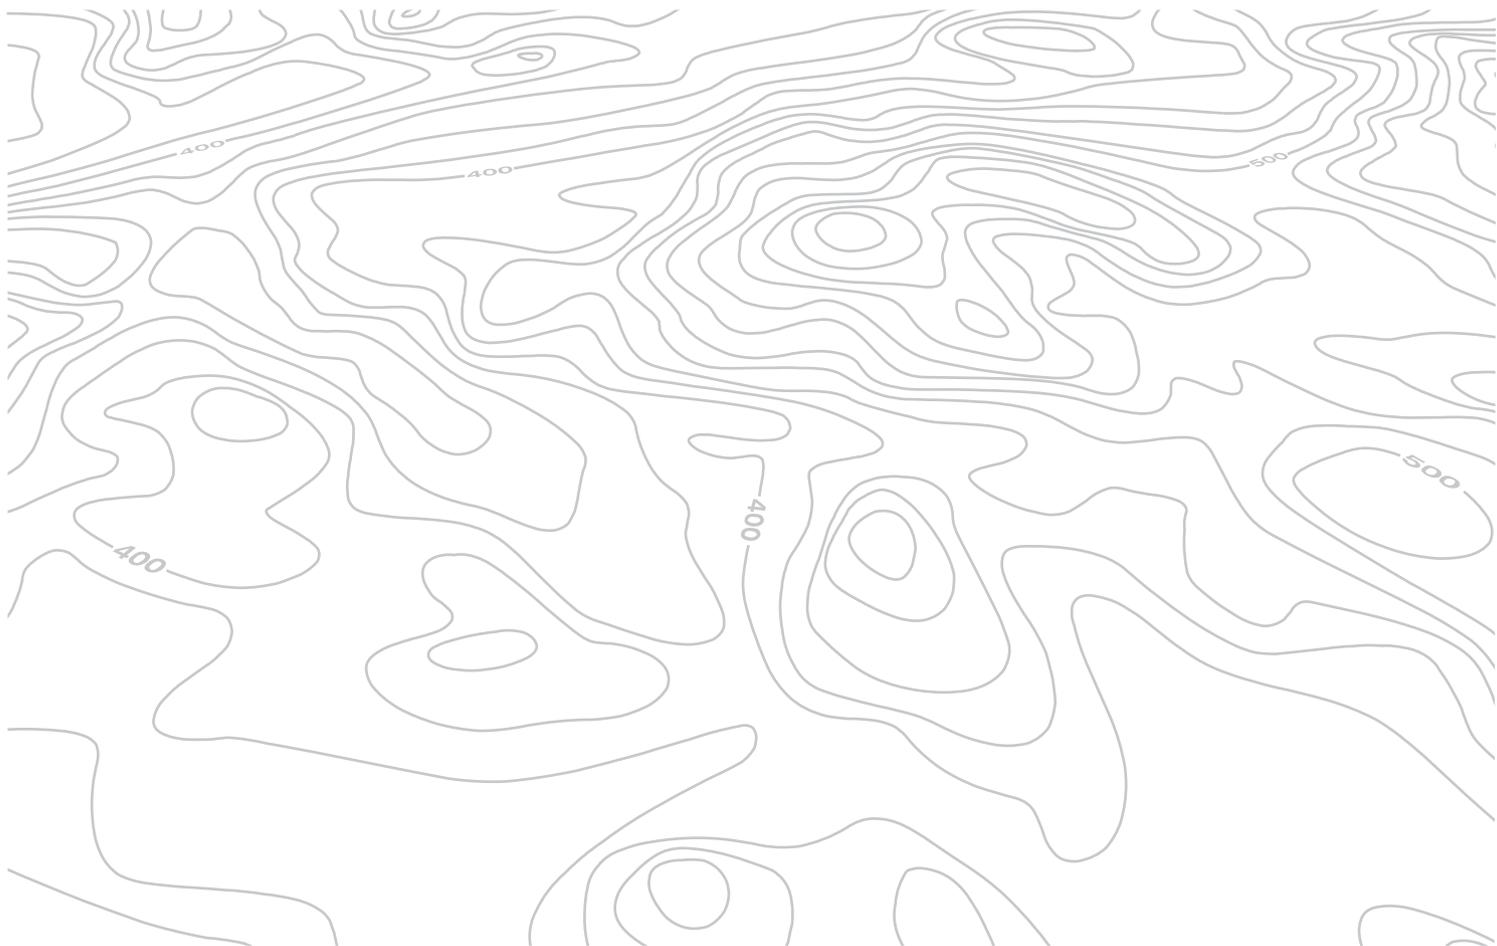

4-zone air conditioning ..... 87, 90, 92

## A

Accessories ..... 205  
 Accessories socket, 12 volt ..... 71  
 Adjusting headlamps ..... 137  
 Adjusting head restraints ..... 61, 64  
 Adjusting seat belt height ..... 164  
 Adjusting the steering wheel ..... 70  
 Airbags ..... 30  
 Air conditioning ..... 83  
 Air conditioning (digital) ..... 81, 84  
 Air conditioning (manual) ..... 81, 82  
 Air filter ..... 216  
 Air vents ..... 80  
 Alarm ..... 48  
 Anti-theft steering lock ..... 95  
 Armrest ..... 71  
 Assistance call ..... 158, 230  
 Audible warning ..... 158  
 Audio streaming (Bluetooth) ..... 274, 300, 302  
 Audio system (radio) ..... 287  
 Automatic gearbox ..... 106, 217  
 Automatic illumination of headlamps ..... 130, 134  
 Automatic operation  
   of hazard warning lamps ..... 157  
 Automatic rain sensitive  
   windscreen wipers ..... 140, 142  
 Auxiliary sockets ..... 299

## B

Battery ..... 196, 216  
 Battery, remote control ..... 45-47

Battery recharge ..... 196  
 Bluetooth (hands-free) ..... 257, 301  
 Bluetooth (telephone) ..... 257  
 Boot ..... 52  
 Boot (opening) ..... 40  
 Brake discs ..... 217  
 Brake lamps ..... 188, 189  
 Brake pads ..... 217  
 Brakes ..... 217

## C

Capacity, fuel tank ..... 58  
 CD ..... 294  
 CD MP3 ..... 295, 296  
 Central locking ..... 41  
 Changing a bulb ..... 183, 188, 189, 191  
 Changing a fuse ..... 192  
 Changing a wheel ..... 176, 177  
 Changing a wiper blade ..... 143, 200  
 Changing the date ..... 277  
 Changing the remote control battery ..... 45, 46  
 Changing the time ..... 277, 310  
 Checking levels ..... 213, 215  
 Checking the engine oil level ..... 35  
 Checking tyre pressures  
   (using the kit) ..... 170  
 Checks ..... 210-212, 216, 217  
 Children ..... 149, 153, 154  
 Child seats ..... 146  
 Child seats, conventional ..... 148, 149  
 Child seats, Isofix ..... 154  
 Closing the boot ..... 52  
 Closing the doors ..... 41  
 Colour and map display DT ..... 237, 278  
 Connectors, audio ..... 73, 297, 299  
 Control stalk, wipers ..... 140-142  
 Coolant level ..... 31, 213

Coolant temperature ..... 31  
 Coolant temperature indicator ..... 31  
 Courtesy lamps ..... 144  
 Cruise control ..... 120, 123  
 Cup holder ..... 71  
 Curtain airbags ..... 168, 169

## D

Dashboard fusebox ..... 192  
 Date (display) ..... 277  
 Daytime running lamps ..... 132, 183, 187  
 Deactivating ESP ..... 162  
 Deactivating the passenger airbag ..... 166  
 Deadlocking ..... 42  
 Defrosting ..... 92  
 Diesel additive level ..... 215  
 Diesel engine ..... 60, 209, 211, 212, 221, 224  
 Dimensions ..... 227  
 Dipped beam ..... 129, 183-185  
 Dipstick ..... 35, 213  
 Directional lighting ..... 138, 139  
 Direction indicators ..... 133, 157, 183, 187-189  
 Door mirrors ..... 68, 69  
 Driving positions (memorising) ..... 63  
 Dual-zone air conditioning ..... 92  
 Dynamic emergency braking ..... 96

## E

Economy mode ..... 199  
 Electric parking brake ..... 96  
 Electronic engine immobiliser ..... 47, 95  
 Electronic gear control gearbox ..... 110, 114, 217

Electronic key .....	39-41, 45
Emergency boot release .....	55
Emergency call .....	158, 230
Emergency warning lamps .....	77, 157
Energy economy mode .....	199
Engine compartment .....	210-212
Engine compartment fusebox .....	192
Engine oil level indicator .....	35, 213
Engines .....	218, 221, 224
Environment .....	46
ESP/ASR .....	162

## F

Filling with fuel .....	58, 60
Fitting roof bars .....	204
Fittings, boot .....	74, 75
Flashing indicators .....	133, 157
Foglamps .....	183
Folding the rear seats .....	66
Front airbags .....	166, 169
Front foglamps .....	131, 183, 186
Front head restraints .....	61, 64
Front parking sensors .....	126
Front seats .....	61-63
Front wash-wipe .....	141
Fuel .....	60
Fuel filler cap .....	58
Fuel filler flap .....	58
Fuel gauge .....	58
Fuel tank .....	58
Fuses .....	192

## G

G.P.S. ....	242
Gear lever, automatic gearbox .....	106
Gear lever, electronic gear control gearbox .....	110
Gear lever, manual gearbox .....	104
Gear shift indicator .....	105
Guidance .....	240, 248
Guide-me-home .....	134

## H

Halogen headlamps .....	183, 184
Hands-free telephone .....	257, 301
Hands Free, Access and Starting .....	23, 39, 47
Hazard warning lamps .....	77, 157
Head-up display .....	118, 121, 123
Headlamp adjustment .....	137
Headlamps, directional .....	138, 183
Headlamp wash .....	141
Headlamp wash reservoir .....	213
Heated seats .....	61, 64
Heating .....	82, 90, 93
Height and reach adjustment, steering wheel .....	70
High load retaining net .....	78
Hill start assist .....	117

## I

Indicator/warning lamps .....	23, 26, 27
Indicators, direction .....	157
Inflating accessories (using the kit) .....	170
Inputs for audio system .....	299

Instrument panel .....	20
Instrument panels .....	21
Instrument panel screen .....	21, 105
Intelligent Traction Control .....	161
Interior fittings .....	71
Interior mood lighting .....	145
ISOFIX child seats .....	152, 153
ISOFIX mountings .....	152

## J

Jack .....	176, 177
JBL (audio system) .....	7, 231

## K

Keeping children safe .....	146, 154, 166
Key .....	39-41, 45, 47
Key with remote control .....	95

## L

Labels, identification .....	228
Lamps, warning and indicator .....	21, 25, 26
Lateral airbags .....	168, 169
Level, brake fluid .....	213
Level, headlamp wash .....	141, 213
Level, power steering fluid .....	213
Levels and checks .....	210-213, 215
Lighting, guide-me home .....	133, 134
Lighting, interior .....	144, 145

Lighting bulbs  
 (replacement).....183, 188, 189, 191  
 Lighting on reminder .....131  
 Lighting stalk .....129, 133  
 Loading.....204  
 Load reduction mode .....198  
 Load space cover.....76  
 Locating your vehicle .....44  
 Long objects, transporting .....73  
 Luggage retaining strap.....74, 75

**M**

Main beam .....129, 183-185, 187  
 Manual gearbox .....104, 105, 114, 217  
 Manufacturer's identification plates.....228  
 Map reading lamps .....144  
 Markings, identification .....228  
 Massage function .....65  
 Mat .....72  
 Menu, main .....290  
 Mini fuel level .....58  
 Monochrome screen .....290, 312  
 Motorway function (direction indicators).....157  
 Mountings for ISOFIX seats .....152  
 MP3 CD.....295, 296  
 Multifunction screen  
 (with audio equipment) .....290  
 Music media players .....270

**N**

Navigation .....239, 240  
 Number plate lamps.....191

**O**

Oil filter .....216  
 Oil level.....35, 213  
 Opening the boot .....39, 40, 52  
 Opening the doors .....39  
 Opening the panoramic sunroof blind .....56  
 Operation indicator lamps.....21, 23, 25, 27

**P**

Paint colour code .....228  
 Panoramic sunroof.....56  
 Parking brake .....99, 103, 217  
 Parking lights .....133  
 Parking space sensor .....127  
 Particle emission filter .....215, 216  
 Passenger compartment filter .....216  
 Petrol engine .....60, 210, 218  
 PEUGEOT CONNECT ASSISTANCE.....230  
 Peugeot Connect Navigation (RT6).....233  
 PEUGEOT CONNECT SOS.....230  
 Player, CD MP3.....295, 296  
 Priming the fuel system .....209  
 Protecting children .....146, 149, 152-154, 162  
 Puncture.....170

**R**

Radio .....267, 268, 291  
 Rear armrest .....72  
 Rear foglamps.....131, 188, 189, 191  
 Rear head restraints .....66  
 Rear parking sensors.....125  
 Rear screen (demisting).....92  
 Rear seats.....66

Rear view mirror.....70  
 Rear wash-wipe .....141  
 Rear wiper .....141  
 Recharging the battery .....196  
 Reduction of electrical load .....198  
 Refitting a wheel .....179  
 Reinitialising the remote control .....45, 46  
 Remote control.....39-41, 47  
 Removing a wheel .....179  
 Removing the mat .....72  
 Repair kit, puncture.....170  
 Replacing bulbs .....183, 188, 189, 191  
 Replacing fuses .....192  
 Replacing the air filter .....216  
 Replacing the oil filter .....216  
 Replacing the particle emission filter .....216  
 Replacing the passenger  
 compartment filter .....216  
 Replacing wiper blades.....143, 200  
 Resetting the service indicator .....34  
 Reversing lamp .....188, 189  
 Roof bars.....204  
 Roof blind.....56  
 Routine checks .....216, 217  
 Running out of fuel (Diesel).....209

**S**

Safety for children .....149  
 Satellite navigation system .....240  
 Screen, instrument panel.....21, 36  
 Screen-wash reservoir.....213  
 Screen menu map.....278, 312, 313  
 Screenwash fluid level.....141, 213

Seat adjustment .....	61, 62
Seat belts .....	163-165
Serial number, vehicle .....	228
Service indicator .....	33
Setting the clock .....	277
Short-cut menus .....	238
Sidelamps .....	129, 133, 183, 185, 187-189
Side repeater.....	187
Side spotlamps .....	136, 187
Ski flap .....	73
Spare wheel .....	176, 177
Speed limiter .....	120, 121
Stability control (ESP).....	162
Starting the vehicle .....	94, 106, 110
Status indicator lamps .....	23, 27
Steering mounted controls.....	236
Steering mounted controls, audio .....	289
Stopping the vehicle .....	94, 106, 110
Stop & Start.....	38, 58, 85, 88, 92, 114, 196, 208, 216, 311
Storage.....	71, 72, 74, 75
Storage wells.....	74, 75
Storing the driving positions.....	63
Stowing rings .....	74, 75
Synchronising the remote control.....	45, 46
Synthesiser, voice.....	251
Systems, ASR and ESP.....	162

Technical data .....	218, 219, 221, 224
Telephone .....	257, 259
Temperature control for heated seats.....	64
Temporary tyre repair kit.....	170
Third brake lamp .....	191
Time .....	310
TMC (Traffic info).....	254
Tools.....	176, 177
Towbar.....	202
Towed loads .....	219, 224
Towing another vehicle .....	201
Traction control (ASR) .....	162
Traffic information (TA).....	255, 269, 292
Traffic information (TMC).....	254, 255
Trip computer .....	36, 37
Tyre pressures .....	228
Tyre under-inflation detection .....	159

Table of weights .....	219, 224
Tables of engines.....	218, 221, 224
Tables of fuses .....	192

Under-inflation (detection) .....	159
Unlocking .....	39
Unlocking the boot .....	40
USB (Peugeot Connect) .....	73
USB port.....	73, 297

Vehicle identification .....	228
Ventilation .....	80-82


Warning triangle.....	77
Weights .....	219, 224
Welcome function .....	63
Welcome lighting.....	136
Wipers .....	140, 142

Xenon headlamps .....	183
-----------------------	-----






# Interior

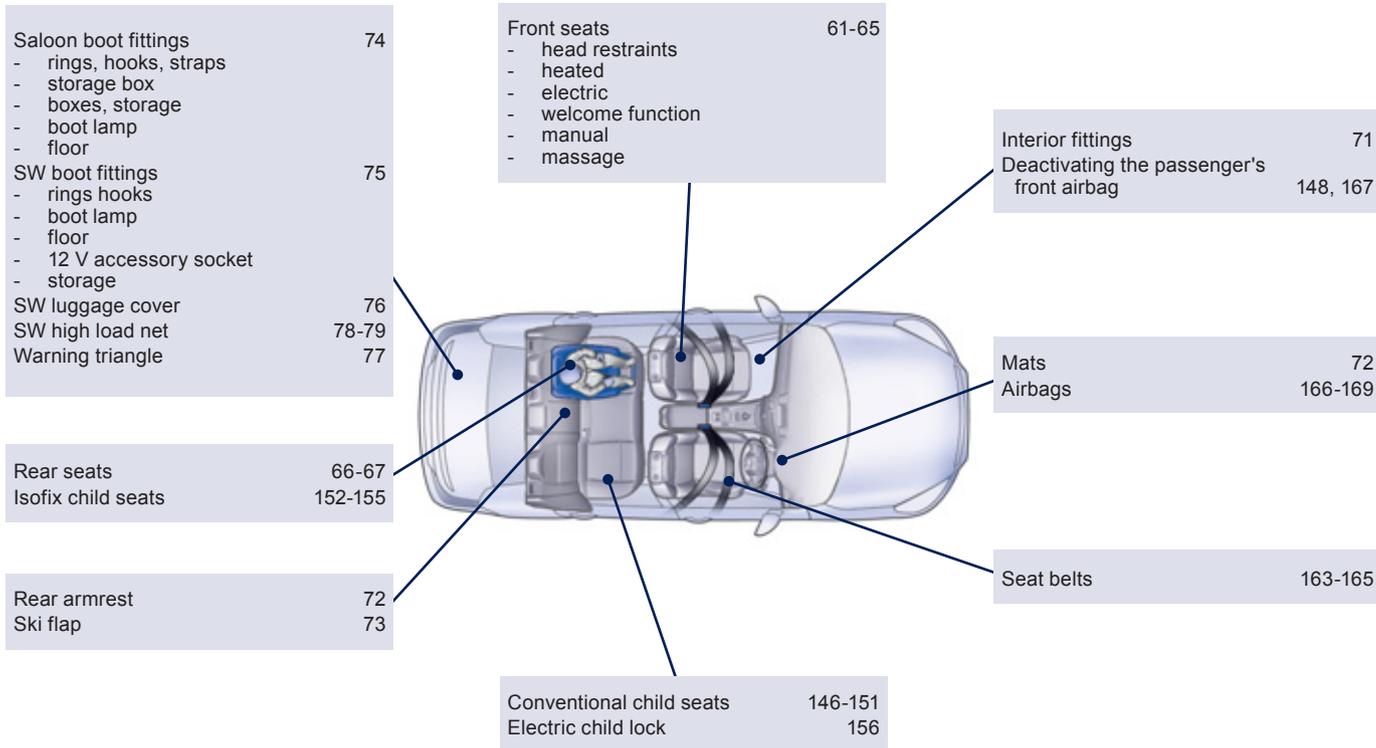


# Instruments and controls

<p>Fuses behind the glove box 192-193</p> 	<p>Courtesy lamps 144              Seat belt/passenger's front airbag warning lamps display 164, 167              Rear view mirror 70              SW panoramic sunroof 56-57</p>	  <p>Peugeot Connect Navigation (RT6) 233-286              Setting the date/time 277</p>  <p>Audio system 287-317              Setting the date/time 310</p>
<p>Opening the bonnet 208</p>		<p>Electric parking brake 96-102              Dashboard fuses 194</p> 
<p>5/6-speed manual gearbox 104              Gear shift indicator 105              Automatic gearbox 106-109              Electronic gear control gearbox 110-113              Stop &amp; Start 114-116              Hill start assist 117</p>	<p>Door mirrors 68-69              Electric windows, deactivating 50-51</p>	
<p>Manual parking brake 103</p>	<p>Heating, ventilation 80-81              Manual air conditioning 82-83              Dual-zone air conditioning 84-86              Quad-zone front air conditioning 87-89              Demisting/defrosting 92</p>	
<p>Peugeot Connect USB 73</p>	<p>Quad-zone rear air conditioning 90-91</p>	

# Instruments and controls (continued)

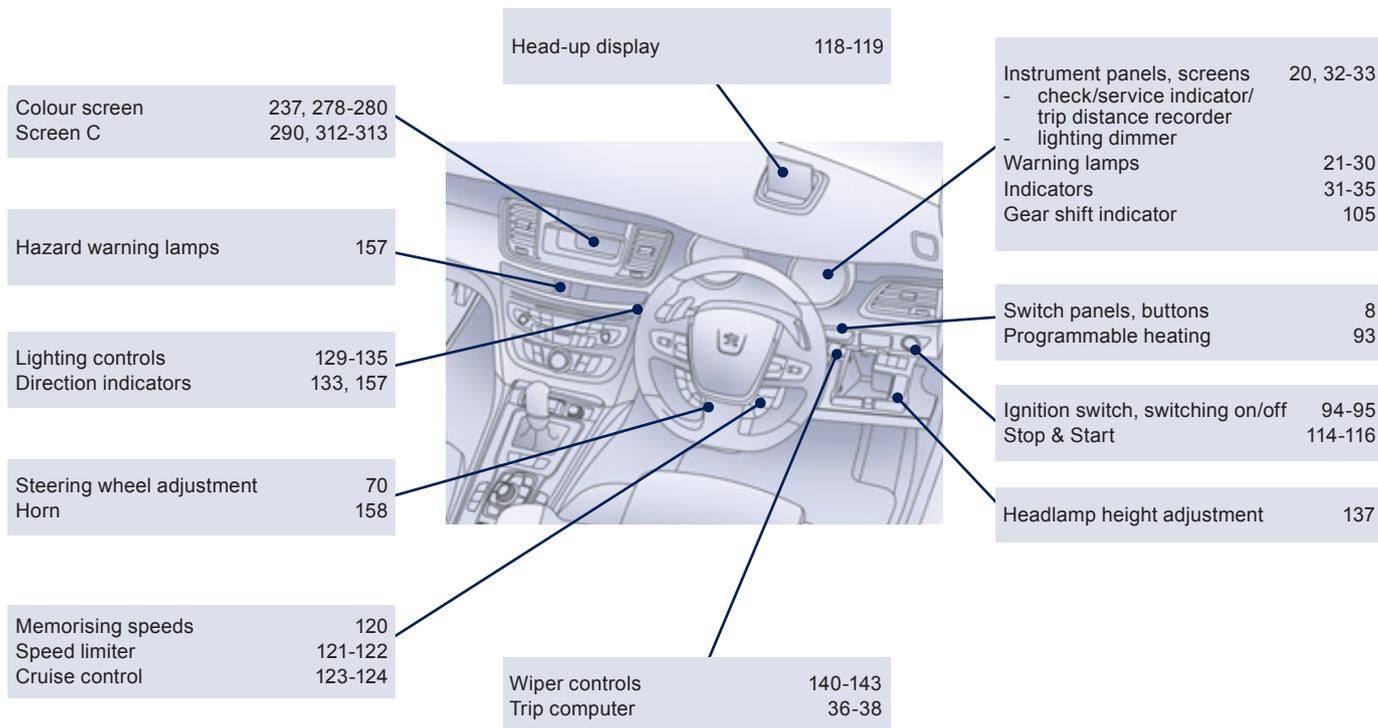

# Maintenance - Technical data

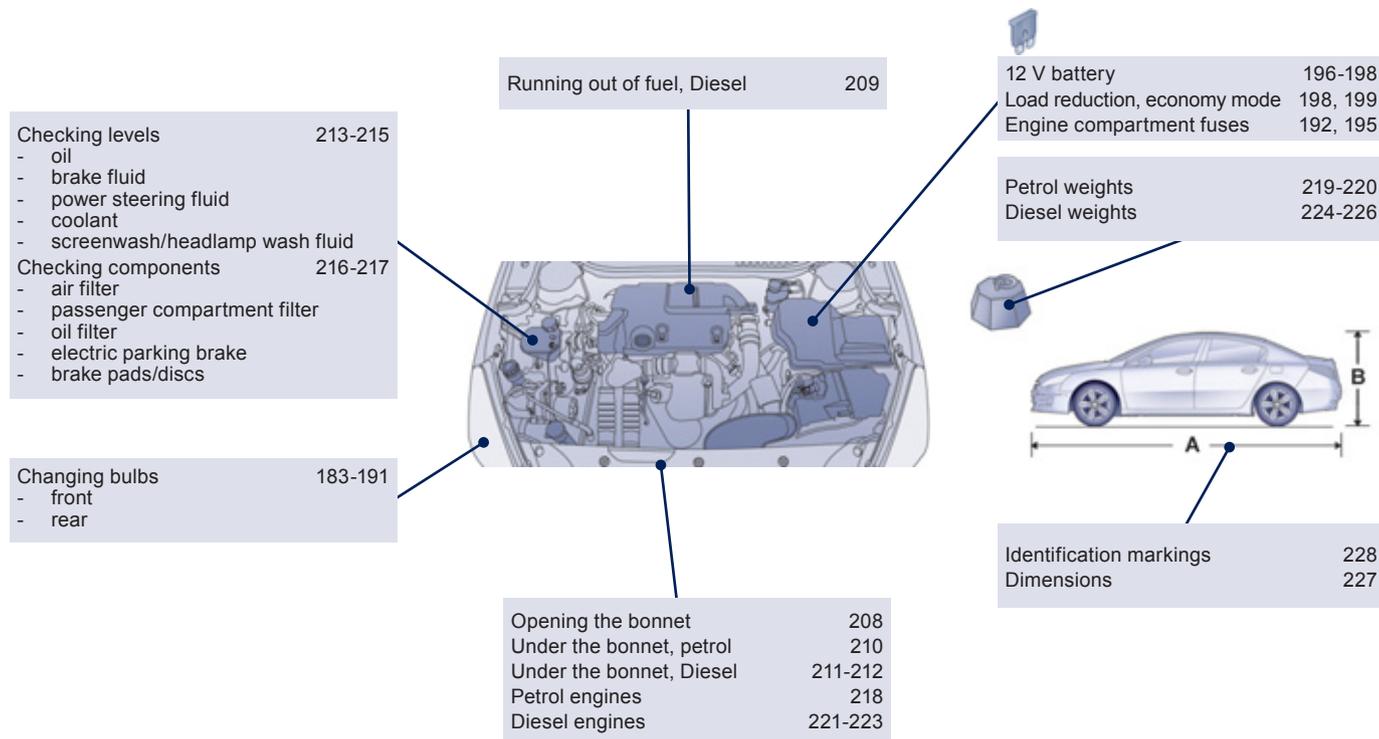



---

---

---

---

---

---

---

---

---

---

---





---

---

---

---

---

---

---

---

---

---

---





---

---

---

---

---

---

---

---

---

---

---





---

---

---

---

---

---

---

---

---

---

---



This handbook describes all of the equipment available.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Anglais

Printed in the EU



**PEUGEOT**

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

12-10  
I 04-11

